

Ryan Duell Tobias Hathorn Tessa Reist Hathorn

Autodesk Revit Architecture 2015 ESSENTIALS



AUTODESK[®] REVIT[®] ARCHITECTURE 2015

ESSENTIALS

AUTODESK[®] REVIT[®] ARCHITECTURE 2015

ESSENTIALS

Ryan Duell Tobias Hathorn Tessa Reist Hathorn





Senior Acquisitions Editor: Willem Knibbe Development Editor: Tom Cirtin Technical Editor: Jon McFarland Production Editor: Rebecca Anderson Copy Editor: Linda Recktenwald Editorial Manager: Pete Gaughan Vice President and Executive Group Publisher: Richard Swadley Associate Publisher: Chris Webb Book Designer: Happenstance Type-O-Rama Proofreader: Nancy Carrasco Indexer: Ted Laux Project Coordinator, Cover: Todd Klemme Cover Designer: Wiley Cover Image: ©Ewelina Peszt / ©Aki Yoshida

Copyright © 2014 by John Wiley & Sons, Inc., Indianapolis, Indiana Published simultaneously in Canada ISBN: 978-1-118-87095-2 ISBN: 978-1-118-93245-2 (ebk.) ISBN: 978-1-118-87106-5 (ebk.)

No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, scanning or otherwise, except as permitted under Sections 107 or 108 of the 1976 United States Copyright Act, without either the prior written permission of the Publisher, or authorization through payment of the appropriate per-copy fee to the Copyright Clearance Center, 222 Rosewood Drive, Danvers, MA 01923, (978) 750-8400, fax (978) 646-8600. Requests to the Publisher for permission should be addressed to the Permissions Department, John Wiley & Sons, Inc., 111 River Street, Hoboken, NJ 07030, (201) 748-6011, fax (201) 748-6008, or online at http://www.wiley.com/go/permissions.

Limit of Liability/Disclaimer of Warranty: The publisher and the author make no representations or warranties with respect to the accuracy or completeness of the contents of this work and specifically disclaim all warranties, including without limitation warranties of fitness for a particular purpose. No warranty may be created or extended by sales or promotional materials. The advice and strategies contained herein may not be suitable for every situation. This work is sold with the understanding that the publisher is not engaged in rendering legal, accounting, or other professional services. If professional assistance is required, the services of a competent professional person should be sought. Neither the publisher nor the author shall be liable for damages arising herefrom. The fact that an organization or Web site is referred to in this work as a citation and/or a potential source of further information does not mean that the author or the publisher endorses the information the organization or Web site may provide or recommendations it may make. Further, readers should be aware that Internet Web sites listed in this work may have changed or disappeared between when this work was written and when it is read.

For general information on our other products and services or to obtain technical support, please contact our Customer Care Department within the U.S. at (877) 762-2974, outside the U.S. at (317) 572-3993 or fax (317) 572-4002.

Wiley publishes in a variety of print and electronic formats and by print-on-demand. Some material included with standard print versions of this book may not be included in e-books or in print-on-demand. If this book refers to media such as a CD or DVD that is not included in the version you purchased, you may download this material at http://booksupport.wiley.com. For more information about Wiley products, visit www.wiley.com.

Library of Congress Control Number: 2014931955

TRADEMARKS: Wiley and the Sybex logo are trademarks or registered trademarks of John Wiley & Sons, Inc. and/or its affiliates, in the United States and other countries, and may not be used without written permission. Autodesk and Revit are registered trademarks of Autodesk, Inc. All other trademarks are the property of their respective owners. John Wiley & Sons, Inc. is not associated with any product or vendor mentioned in this book.

 $10 \ 9 \ 8 \ 7 \ 6 \ 5 \ 4 \ 3 \ 2 \ 1$

Dear Reader,

Thank you for choosing *Autodesk Revit Architecture 2015 Essentials*. This book is part of a family of premium-quality Sybex books, all of which are written by outstanding authors who combine practical experience with a gift for teaching.

Sybex was founded in 1976. More than 30 years later, we're still committed to producing consistently exceptional books. With each of our titles, we're working hard to set a new standard for the industry. From the paper we print on, to the authors we work with, our goal is to bring you the best books available.

I hope you see all that reflected in these pages. I'd be very interested to hear your comments and get your feedback on how we're doing. Feel free to let me know what you think about this or any other Sybex book by sending me an email at contactus@wiley.com. If you think you've found a technical error in this book, please visit http://sybex.custhelp.com. Customer feedback is critical to our efforts at Sybex.

Best regards,

A with

CHRIS WEBB Associate Publisher, Sybex

For Stacey, Lucely, and Nathaniel—can we take a vacation now please? —Ryan For Noelle, growing as I write! —Tobias For my family—for instilling in me the simple values of hard work and ambition.

—Tessa

ABOUT THE AUTHORS



Ryan Duell is a principal quality assurance analyst for Revit at Autodesk. He holds a bachelor's degree in design computing from Boston Architectural College. He started his career with cbt Architects in Boston, Massachusetts, working on a variety of project teams ranging from single-family residential to large commercial projects. Rvan transitioned into the BIM manager role

focusing on Autodesk[®] AutoCAD[®] Architecture and Autodesk[®] Revit[®] Architecture standards, along with contributing assistance to project teams. At Autodesk he spent several years in the product support organization providing Revit support for end users and enterprise accounts. In addition to Autodesk, Ryan teaches Revit at the Boston Architectural College and contributes to the Revit Clinic blog.



Tobias Hathorn is a licensed architect and user experience designer for Autodesk FormIt. He holds a bachelor's degree in architecture from Kansas State University. He started his career at BNIM architects in Kansas City, Missouri, working on a one-million-square-foot IRS paper-processing center in Revit Architecture. After working as a liaison between BNIM and Moshe

Safdie and Associates on the Kansas City Performing Arts Center, Tobias moved to Boston to join the Revit product team in Waltham, Massachusetts. Tobias has honed his knowledge and experience with Revit, especially the graphics and rendering features, over the past seven years in the quality assurance and user experience groups. He is currently working on FormIt, a conceptual design tool to aid in the early stages of a BIM workflow. In his free time, he likes to teach Revit Architecture, bicycle, paint, and play Tetris.



Tessa Reist Hathorn is a licensed architect and a LEED Accredited Professional with nine years of experience in architecture using Revit. After starting her career at BNIM Architects working on historic renovations and the renowned Kauffman Center for the Performing Arts, she eventually moved to Boston, Massachusetts, to work with Moshe Safdie and Associates, working

on high-profile international projects, and later Austin Architects in Cambridge, Massachusetts. Tessa currently works as an architect in the Boulder, Colorado, area at Fänas Architecture and consults for local architecture firms.

ACKNOWLEDGMENTS

Thank you to the countless individuals I had the opportunity to work with during my time at cbt Architects; I appreciate all the opportunities I had. A special thanks to Architexts, for the continual reminder as to what a unique environment an architecture firm can be. Next, I need to give a huge thank-you to Autodesk. I appreciate the inside view and access I have to Revit and the amazingly talented and dedicated people I have the opportunity to work with every day. I need to especially thank my supportive wife, Stacey, and children, who have always been there along the way of my often-demanding day and night activities. You give me the motivation to continuously push ahead. Next, Wiley, this book would never have been possible without your talented staff, editing, and support, so thank you. I can't forget to thank Tobias and Tessa for their dedication to the last edition and showing fantastic teamwork again for 2015.

-Ryan

This has been an exciting year of transitions, changes, growth, and development. To that end I'd like to thank the people who helped me along the way: Rebecca Richkus for your three-dimensional mentorship. Steve Crotty and Trey Klein for your toasts, crawls, spikes, and darths. Erik Egbertson for the pre-class conversations and also for your darths. Erik Snell, for your inevitable pokes. Matt Campbell for your gnarly sketches and bright ideas. Tom Vollaro and Matt Jezyk for the right words at the right time. My parents and Tessa's parents for the grand-parenting! Thanks to Wiley, for making this book happen. Thanks to Ryan, for the solid, ahead-of-schedule work. Thanks to Tessa, for *everything still*.

-Tobias

I'd first like to thank my daughter, Noelle, for teaching me the ability to multitask. I'm convinced being a working mom increases productivity at both work and home. Thank you to my co-writers: to Ryan, for always being one step ahead of the game, and Tobias, a continuous means of strength and support. Thanks also to our technical editor, Jon McFarland, for making us look better than we actually are. And an enormous thanks to our team at Wiley—Tom Cirtin, Pete Gaughan, Rebecca Anderson, and the rest of the editorial staff—for making everything behind the scenes happen.

—Tessa

CONTENTS AT A GLANCE

	Foreword	xix
	Introduction	xxi
CHAPTER 1	Introducing the Autodesk Revit Architecture Interface	1
CHAPTER 2	Walls and Curtain Walls	25
CHAPTER 3	Floors, Roofs, and Ceilings	57
CHAPTER 4	Stairs, Ramps, and Railings	89
CHAPTER 5	Adding Families	117
CHAPTER 6	Modifying Families	137
CHAPTER 7	Schematic Design	175
CHAPTER 8	Rooms and Color Fill Plans	189
CHAPTER 9	Materials, Visualization, Rendering	207
CHAPTER 10	Worksharing	223
CHAPTER 11	Details and Annotations	243
CHAPTER 12	Drawing Sets	271
CHAPTER 13	Workflow and Site Modeling	297
CHAPTER 14	Repeating Objects, Best Practices, and Quick Tips	317
	Appendix	333
	Index	343

CONTENTS

	Foreword xix
	Introduction xxx
CHAPTER 1	Introducing the Autodesk Revit Architecture
	Interface
	Understanding the User Interface
	Exercise 1.1: Use the Properties Palette to See Dynamic
	Updates of Properties 3
	Exercise 1.2: Explore the Content of Your Project with the
	Project Browser
	Exercise 1.3: Use the View Control Bar to See Frequently
	Used View Properties6
	Exercise 1.4: Navigate with the ViewCube
	Creating a Simple Layout
	Exercise 1.5: Create a Floor
	Exercise 1.6: Create Walls 11
	Exercise 1.7: Create Levels
	Exercise 1.8: Change Wall Type 14
	Exercise 1.9: Place Interior Walls 16
	Exercise 1.10: Place Doors and Windows 18
	Exercise 1.11: Space Elements Equally
	Now You Know
CHAPTER 2	Walls and Curtain Walls 25
	Understanding Wall Types and Parameters
	Basic Walls
	Stacked Walls
	Curtain Wall Types
	Hosting Elements in Walls
	Creating Wall Configurations
	Exercise 2.1: Create Wall Configurations
	Exercise 2.2: Host a Door in a Wall
	Modifying Wall Parameters
	Modifying Wall Parameters

	Exercise 2.3: Modify Wall Parameters	34
E	diting and Resetting Wall Profiles	36
	Exercise 2.4: Edit and Reset the Wall Profile	37
	Exercise 2.5: Attach and Detach the Top/Base	38
С	utting Openings	40
	Exercise 2.6: Cut Openings in a Curved Wall	40
	Splitting Walls	41
	Swapping Walls	41
С	reating Curtain Walls	42
	Exercise 2.7: Create and Customize a Curtain Wall	42
	Exercise 2.8: Modify Curtain Wall Type Properties	46
	Editing Wall Profiles	49
	Embedding Curtain Walls	50
	Exercise 2.9: Embed and Edit Curtain Wall Profile	50
	Curtain Panels	52
	Adding and Removing Grids and Mullions	52
	Exercise 2.10: Add and Remove Curtain Grids and Mullions	52
	Exercise 2.11: Customize Curtain Panels	54
Ν	ow You Know	56

CHAPTER 3

Floors, Roofs, and Ceilings

Creating Floors
Exercise 3.1: Create a Floor by Sketch and Pick Walls
Exercise 3.2: Edit the Floor Boundary 60
Exercise 3.3: Create Sloped Floors
Exercise 3.4: Create an Opening with the Opening by Face Tool
Exercise 3.5: Create an Opening with the Shaft Opening Tool
Creating Roofs
Exercise 3.6: Create a Roof by Footprint
Exercise 3.7: Create a Roof by Extrusion
Exercise 3.8: Create Slope Arrows
Exercise 3.9: Create Multiple Roof Slopes
Adding Ceilings
Exercise 3.10: Add Automatic and Sketch Ceilings
Exercise 3.11: Create a Bulkhead
Exercise 3.12: Add Lights and Rotate the Grid
Exercise 3.13: Slope the Ceiling
Now You Know

57

CHAPTER 4	Stairs, Ramps, and Railings	89
	Creating a Generic Railing	89
	Exercise 4.1: Create a Generic Railing	90
	Creating Stair Configurations	93
	Exercise 4.2: Create a Stair by Component	94
	Exercise 4.3: Create a Stair by Sketch	98
	Exercise 4.4: Customize and Create a Component Stair Landing	. 100
	Exercise 4.5: Create a Multistory Stair	. 103
	Exercise 4.6: Host a Railing to a Stair	. 106
	Exercise 4.7: Edit Railing Top Rail and Slope	. 109
	Designing Ramps	. 112
	Exercise 4.8: Create a Ramp and Edit the Boundary	. 112
	Now You Know	. 116
CHAPTER 5	Adding Families	117
	Understanding the Model Hierarchy	
	Exercise 5.1: Creating a Model Hierarchy	. 118
	Working with System Families.	. 121
	Loading System Families	. 121
	Exercise 5.2: Transfer Project Standards	. 122
	Exercise 5.3: Place System Families	. 123
	Working with Component Families	. 124
	Exercise 5.4: Create a New Family and Load It into a Project	. 125
	Employing Hosted Families.	. 127
	Exercise 5.5: Work with Hosted Families	. 129
	Exercise 5.6: Place Face-Based Families	. 130
	Working with In-Place Component Families	. 133
	Exercise 5.7: Modify an In-Place Family	. 133
	Finding Content	. 134
	Now You Know	. 136
CHAPTER 6	Modifying Families	137
	Modifying 3D Families	. 137
	Exercise 6.1: View Scale and Detail Level	. 138
	Exercise 6.2: Assign Visibility to Detail Levels	. 142
	Family Categories	. 146
	Exercise 6.3: Edit the Family Category	. 147

Exercise 6.4: Update a Family Insertion Point	149
Exercise 6.5: Modify Hosted Components.	153
Modifying 2D Families	159
Exercise 6.6: Edit a Tag Family	159
Exercise 6.7: Edit a Profile Family	161
Exercise 6.8: Update Detail Components	164
Repeating Details	167
Exercise 6.9: Modify the Title Blocks	169
Family Tips and Best Practices	172
Now You Know	.174

CHAPTER 7 Schematic Design

Importing a 2D Image	
Exercise 7.1: Import and Scale a 2D Image	
Designing with a 3D Sketch	178
Exercise 7.2: Link a 3D Sketch.	178
Exercise 7.3: Add a New Level	
Exercise 7.4: Calculate Mass Floor Area	
Exercise 7.5: Reload a Linked Sketch	
Creating Revit Elements from a Mass	
Exercise 7.6: Create Floors from a Mass	
Exercise 7.7: Create Walls from a Mass	
Exercise 7.8: Create a Curtain System.	
Exercise 7.9: Create a Roof from a Mass	
Now You Know	

CHAPTER 8

Rooms and Color Fill Plans

189

Defining Rooms in Spaces	. 189
Room Tags	. 190
Room Boundaries	. 191
Room Separation Lines	. 192
Deleting Rooms	. 192
Exercise 8.1: Add Rooms and Room Tags	. 192
Exercise 8.2: Modify a Room Boundary	. 196
Exercise 8.3: Delete a Room Object	. 198
Generating Color Fill Room Plans	. 200
Exercise 8.4: Add and Modify a Color Scheme	. 200

	Exercise 8.5: Add Tags and Color Fills in Section	203
	Now You Know	205
CHAPTER 9	Materials, Visualization, Rendering	207
	Materials	207
	Exercise 9.1: Define a Material	208
	Exercise 9.2: Assign a Material	210
	Graphic Display Options	211
	Exercise 9.3: Presentation Elevation View	212
	Exercise 9.4: Presentation 3D View	214
	Exercise 9.5: 3D Exploded View	216
	Rendering	
	Exercise 9.6: Render a View	217
	Exercise 9.7: Interactive Rendering	
	Exercise 9.8: Cloud Rendering	
	Now You Know	222
CHAPTER 10	Worksharing	223
	Configuring Worksharing	
	Exercise 10.1: Enable Worksharing	
	Exercise 10.2: Create the Local File and Worksets	
	Exercise 10.3: Assign Elements to Worksets and Control Visibility	229
	Saving to the Central Model	232
	Exercise 10.4: Open and Close Worksets	234
	Worksharing Display Modes	236
	Editing Requests	238
	Worksharing Best Practices	
	Now You Know	241
CHAPTER 11	Details and Annotations	243
	Creating Details	
	Detail Line	
	Region	
	Component	
	Arranging Elements in the View	
	Repeating Detail Component	
	Insulation	

Detail Groups	
Linework	
Exercise 11.1: Enhance a Detail with Regions	
Exercise 11.2: Add Detail Components and Detail Lines	
Exercise 11.3: Create a Repeating Detail Component.	
Annotating Your Details	
Dimensions	
Tags	
Text	
Exercise 11.4: Add Dimensions to Your Detail	
Exercise 11.5: Add Tags and Text to Your Detail	
Creating Legends	
Exercise 11.6: Create a Legend	
Now You Know	

CHAPTER 12 Drawing Sets

Schedules
Understanding Schedules
Exercise 12.1: Create a Window Schedule
Exercise 12.2: Create a Room Schedule
Exercise 12.3: Create a Sheet List
Placing Views on Sheets
Exercise 12.4: Arrange Plan Views on a Sheet
Exercise 12.5: Adjust Crop Regions
Exercise 12.6: Add Schedules to Sheets 290
Printing Documents 291
Exercise 12.7: Explore the Print Dialog Box 291
Now You Know

271

297

CHAPTER 13 Workflow and Site Modeling

Understanding a BIM Workflow	297
Staffing a BIM Project	300
Project Roles Using Revit Architecture	300
Architect	301
Modeler	302
Drafter	302
Adding Team Members to Fight Fires	303

	Modeling a Site	304
	Toposurface	305
	Building Pad	306
	Exercise 13.1: Model a Toposurface	307
	Exercise 13.2: Create a Building Pad	309
	Performing Quality Control on Your Model: Keeping an Eye on File Size	310
	Purging Unused Families and Groups	311
	Managing Links and Images	312
	Cutting Down on the Number of Views	312
	Dealing with Warnings	313
	Now You Know	315
CHAPTER 14	Repeating Objects, Best Practices, and Quick Tips	317
	Repeating Objects	317
	Optimize Performance	320
	Figuring Out How Much RAM Your Project Will Need	320

Figuring Out How Much RAM Your Project Will Need	320
Reducing File Size	321
Utilize Best Practices	322
Use Quick Tips and Shortcuts	325
Locate Additional Resources	330
Now You Know	331
Appendix	333
Index	343

Foreword

It is an understatement to say that the AECO industry is going through the most profound transformation since Brunelleschi's Dome of Santa Maria del Fiore, circa 1446.¹ If we were a less risk-adverse group, we would call it a revolution. But alas, we are not. So we simply call it BIM—building information modeling.

BIM is our change initiative. As humans, we are hardwired to fight change; we are born with an instinct to defend ourselves...and our ideas. So change agents (including you, since you've picked up this book!) must think about practicing BIM holistically:

BIM is 10 percent technology, 90 percent sociology.

As a leadership member of the AGC/AIA BIMForum, I spend a lot of time thinking about the sociology and management science. As one of the Tocci Building Companies' BIM champions since we formalized our implementation in 2006, I apply frameworks like Deming's Cycle for continuous improvement (Plan, Do, Check, Act) and Tuckman's Stages of Group Development (Forming, Storming, Norming).

I don't spend enough time talking about the 10 percent that instigated the 90 percent and continues to fuel our shared change initiative. The technology is so foundational that it is simply assumed. Perhaps I continue to make the same mistake I did when I was first introduced to BIM. I started using Revit Architecture in 2004. The software was intuitive and logical. Being a novice, I thought that both BIM and Revit were the industry standard! But then and now, we still have work to do.

This is why I'm so grateful that Ryan, Tessa, and Tobias have authored *Autodesk Revit Architecture 2015 Essentials*. They are all dear partners in industry transformation. Yes, they are experienced, talented practitioners. But more than that, they are T-shaped², thoughtful individuals who balance technology, process, and humans who need to master the picks and clicks.

¹Filippo Brunelleschi is the poster child for the master builders of the Renaissance. He designed and constructed the dome over the Santa Maria del Fiore cathedral in Florence, Italy. The dome is more than a feat of architecture and engineering; it is a feat of integrated process. Brunelleschi oversaw every aspect of the dome, from the scaffolding design to the transport for the stones.

²T-shaped people possess deep capabilities in a specific topic or set of topics (typically technical in nature) but also have a wide breadth of sometimes unusual interests that help them relate to the broad picture. The first-known reference is by David Guest, "The hunt is on for the Renaissance Man of computing," *The Independent* (London), September 17, 1991.

Together, they have crafted a guide to Revit 2015 that takes new users from overwhelmed to informed and then project ready. *Autodesk Revit Architecture 2015 Essentials* isn't just for beginners, though. I've been using Revit for a decade, and I'll be diving into the pages that follow to refresh my skills. I've already flagged the section on conceptual massing; I'm not sure why I haven't gotten the hang of which edge to grab!

Whether you're just getting started or interested in polishing your Revit skills, I'm thrilled you're embracing a practice of continuous learning with *Autodesk Revit Architecture 2015 Essentials*. Happy reading, clicking, and transforming!

> Laura Handler @lhandler www.lauraehandler.com

INTRODUCTION

Welcome to Autodesk Revit Architecture 2015 Essentials, based on the Autodesk[®] Revit[®] Architecture 2015 release.

We have shaped the focus and content of this book from our diverse experience as Revit teachers, writers, users, support specialists, designers, and testers. We have tailored the content to what we think is the most valuable combination of topics and generated exercise files that target these topics. Because we teach Revit Architecture to first-time users, we feel the included content is of most value to our students learning the program for the first time. This book should benefit new Revit Architecture users, as well as long-term users who may not use every aspect of the program on a daily basis and could benefit from revisiting exercises as needed.

Revit Architecture 2015 includes a number of valuable new tools. While each tool may not be considered "essential," we have made an effort to mix new tools, tips, and tricks, along with established features into the context of the text and supporting exercises. The book follows real-life workflows and scenarios and is full of practical examples that explain how to leverage the tools within Revit Architecture. We hope you'll agree that we've succeeded.

Who Should Read This Book

This book is written for architects, designers, students, and anyone else who needs their first exposure to Revit Architecture or has had an initial introduction and wants a refresher on the program's core features and functionality. We've designed the book to follow real project workflows and processes to help make the tools easy to follow, and the chapters are full of handy tips to make Revit Architecture easy to leverage. This book can also be used to help prepare for Autodesk's Certified User and Certified Professional exams. For more information on certification, please visit www.autodesk.com/certification.

What You Will Learn

This book is designed to help you grasp the basics of Revit Architecture using real-world examples and techniques you'll use in everyday design and documentation. We'll explain the Revit Architecture interface and help you find the tools you need as well as help you understand how the application is structured. From there we'll show you how to create and modify the primary components in a building design. We'll show you how to take a preliminary model and add layers of intelligence to help analyze and augment your designs. We'll demonstrate how to create robust and accurate documentation and then guide you through the construction process. Whenever possible we will both teach you Revit and put those newfound skills to use in focused exercises.

As you are already aware, BIM is more than just a change in software; it's a change in architectural workflow and culture. To take full advantage of both BIM and Revit Architecture in your office structure, you'll have to make some changes to your practice. We've designed the book around an ideal, integrated workflow to aid in this transition.

What You Will See

For the 2015 version, Autodesk continues the two flavors of Revit: The first is a "one-box" solution that has Revit Architecture, Structure, and MEP inside the same application, referred to as Revit 2015. The second is the Revit Architecture software you may be used to using, referred to as Revit Architecture 2015. There are some small differences between the applications, but the majority of the user interface is the same.

We want you to be aware that we have based the book and the screen captures on Revit 2015. If you notice small differences, we apologize, but it would be very confusing to base the book on both applications noting all the small differences along the way. However, whichever version you have, you'll still be able to follow the lessons and exercises in the chapters of this book with ease.

What You Need

To leverage the full capacity of this book, we highly recommend you have a copy of Revit Architecture installed on a computer strong enough to handle it. To download the trial version of Revit (offered as Revit 2015), go to www.autodesk .com/revitarchitecture, where you'll also find complete system requirements for running Revit Architecture.

From a software standpoint, the exercises in this book are designed to be lightweight and not computationally intensive. This way, you avoid long wait times to open and save files and perform certain tasks. That said, keep in mind that the Autodesk-recommended computer specs for Revit Architecture are far more than what you need to do the exercises in this book but are *exactly* what you need to work on a project using Revit Architecture.

FREE AUTODESK SOFTWARE FOR STUDENTS AND EDUCATORS

The Autodesk Education Community is an online resource with more than five million members that enables educators and students to download—for free (see website for terms and conditions)—the same software used by professionals worldwide. You can also access additional tools and materials to help you design, visualize, and simulate ideas. Connect with other learners to stay current with the latest industry trends and get the most out of your designs. Get started today at www.autodesk.com/joinedu.

What Is Covered in This Book

Revit Architecture is a building information modeling (BIM) application that has emerged as the forerunner in the design industry. Revit Architecture is as much a change in workflow (if you come from a 2D or CAD environment) as it is a change in software. In this book, we'll focus on using real-world workflows and examples to guide you through learning the basics of Revit Architecture 2015—the *essentials*.

Autodesk Revit Architecture 2015 Essentials is organized to provide you with the knowledge needed to gain experience in many different facets of the software. The book is broken down into the following 14 chapters, most of which contain numerous exercise files:

Chapter 1, "Introducing the Autodesk Revit Architecture Interface," introduces you to the user interface and gets you acquainted with the tools and technology—the workflow—behind the software.

Chapter 2, "Walls and Curtain Walls," helps you build on that initial learning by establishing some of the basic building blocks in architecture: walls.

Chapter 3, "Floors, Roofs, and Ceilings," introduces you to the other basic building blocks: floors, roofs, and ceilings. By the end of the first three chapters you will begin to see how easy it is to create the core elements of your building.

Chapter 4, "Stairs, Ramps, and Railings," explains the basics of stairs, ramps, and railings. These core components are versatile and using them can be a bit tricky, so we'll guide you through the process of creating several types of stairs and railings.

Chapter 5, "Adding Families," shows you how to add a core element to your project: families. You use families to create most of your content, and Revit Architecture by default comes with a robust supply.

Chapter 6, "Modifying Families," shows you how to take these families and modify them or create your own, making the library of your content limitless.

Chapter 7, "Schematic Design," introduces you to conceptual design workflows using Autodesk[®] FormIt software and Autodesk[®] SketchBook[®] Pro software to generate design sketches. Then using those sketches you can take the building design and model it in Revit Architecture.

Chapter 8, "Rooms and Color Fill Plans," shows you how to add room elements to your spaces, assign information to them, and create colorful diagrams based on space, department, or any other variable you need.

Chapter 9, "Materials, Visualization, Rendering" introduces you to visualization tools and techniques. You prepare presentation-quality views of your design in elevation, axonometric, and perspective views.

Chapter 10, "Worksharing," discusses how to take your Revit Architecture file into a multiperson working environment. Worksharing allows several people within your office or project team to work on the same Revit Architecture file simultaneously.

Chapter 11, "Details and Annotations," focuses on adding annotation to explain your designs. You'll learn how to add detail to your model in the form of dimensions, text, keynotes, and tags and how to embellish your 3D model with additional detailing.

Chapter 12, "Drawing Sets," shows you how to take all this information and place those drawings and views onto sheets so they can be printed and distributed to your project stakeholders.

Chapter 13, "Workflow and Site Modeling," provides the basics on how to take your office from a CAD environment to one that works with BIM. This chapter explores tools for every level of the project team—from the new staff to project managers. Understanding the process and workflow will be key to the success of your first Revit Architecture project.

Chapter 14, "Repeating Objects, Best Practices, and Quick Tips," covers different approaches to repeat objects throughout your project along with optimizations, best practices, and tips to use along the way.

The Essentials Series

The Essentials series from Sybex provides outstanding instruction for readers who are just beginning to develop their professional skills. Every Essentials book includes these features:

- Skill-based instruction with chapters organized around projects rather than abstract concepts or subjects.
- Digital files (via download) so you can work through the project tutorials yourself. Please check the book's web page at www.sybex .com/go/revit2015essentials for the companion downloads.

At the book's web page, you'll also find a special bonus file full of suggestions for additional exercises related to each chapter, so you can practice and extend your skills.



NOTE Should you choose to browse the book's companion web page, it will look like a site to purchase the book, which it is. But if you pan down just a bit, you'll see three gray tabs. The third one is the book's companion downloads.

Contacting the Authors

We welcome your feedback and comments. You can find the three of us on Facebook at Mastering Revit. We hope you enjoy the book.

CHAPTER 1

Introducing the Autodesk Revit Architecture Interface

After more than a decade of use in the architecture, engineering, and construction (AEC) industry, Autodesk[®] Revit[®] Architecture software continues to be unique in its holistic building information modeling (BIM) approach to design. There are other tools that allow you to design in 3D, and 10 years ago 3D might have been a differentiator, but today 3D is the standard. BIM is quickly becoming the standard as well.

Revit Architecture provides the unique ability to design, update, and document your project information from within a single file — something no other BIM tool allows you to do. Because all of your data resides in a single project file, you can work in any view to edit your model — plan, section, elevation, 3D, sheets, details, even a schedule — and then watch as your file updates in all views automatically. To begin your journey of learning Revit Architecture, we'll help you become comfortable with the user interface and the basic steps of the Revit Architecture workflow.

In this chapter, you'll learn to:

- Use the Properties palette
- Use the Project Browser
- Use the View Control Bar
- Navigate with the ViewCube
- Create floors, walls, and levels

- Change a wall type
- Place doors and windows
- Space elements equally

Understanding the User Interface

The user interface (UI) of Revit Architecture is similar to other Autodesk products such as the Autodesk[®] AutoCAD[®], Autodesk[®] Inventor, and Autodesk[®] 3ds Max[®] products. You might also notice that it's similar to Windows-based applications such as Microsoft Word. All of these applications are based on the "ribbon" concept: Toolbars are placed on tabs in a *ribbon* across the top of the screen. The ribbon is contextually updated based on the elements you have selected. We'll cover the most critical aspects of the UI in this section, but we won't provide an exhaustive review of all toolbars and commands. You'll gain experience with a variety of tools as you read the chapters and go through the exercises in this book.

Figure 1.1 shows the Revit Architecture UI with labels illustrating the major UI elements. Four project views are tiled to display at the same time: plan, elevation, 3D, and perspective camera.



FIGURE 1.1 Revit Architecture user interface

Exercise 1.1: Use the Properties Palette to See Dynamic Updates of Properties

The Properties palette is a floating palette that remains open while you work in the model. The palette dynamically updates to show the properties of the element you have selected. If you have nothing selected, then the view's properties are displayed.

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 1, and open the file c01-ex-01.1start.rvt. You can open a Revit Architecture project file by dragging it directly into the application or by using the Open command from the Application menu.

- Go to the Modify tab of the ribbon, find the Properties panel on the far left side of the ribbon, and click the Properties button. This button will open or close the Properties palette. Leave the Properties palette open.
- 2. Go to the View tab of the ribbon, find the Windows panel to the far right, click the User Interface button, and uncheck or check the Properties option. This will also open or close the Properties palette. Leave the Properties palette open.
- **3.** Move your mouse into the drawing area, or canvas, and then rightclick with the mouse; this will bring up a context menu. Click the word *Properties* near the bottom of the list. This will also open or close the Properties palette.
- You can also toggle the visibility of the Properties palette by pressing Ctrl+1 on your keyboard.
- 5. The palette can be docked on either side of your screen or left floating in your canvas. To move the palette, just click the Properties palette header and drag it with your mouse. You will see an outline preview of the palette to aid you in placement; release the mouse button to place the palette.
- 6. To dock the palette back to the left side of the screen, click and drag the mouse *all the way* to the left side of the screen, until the preview outline spans the entire height of the screen. The Properties palette may be up against the Project Browser. You will move the browser to the right side of the screen in the next section. See Figure 1.2.







The Properties palette can be pulled outside the Revit application frame. This is especially helpful if you have a second monitor. You can move the palette to a second screen for maximum Revit canvas space on the primary screen.

The Properties palette displays Element properties. Changes made in the Properties palette will affect only the currently selected elements. Changes made in the Type Properties dialog (found by clicking the Edit Type button, below the Type Selector) will affect all elements of that particular type, whether they are selected or not.

Properties		×
	Basic Roof SG Metal Panels roof	
Roofs (1)	✓ B Edit	t Type



FIGURE 1.2 Preview of docking the Properties palette to the left side

- 7. Make sure you don't have any elements selected; look in the Properties palette and notice that it displays the properties of the active view, the 3D view. Use the scroll bar on the right side of the Properties palette to find the Extents group of properties. Check the Crop View option. You don't need to use the Apply button to commit the change; instead just move your mouse into the canvas to automatically apply your changes.
 - 8. Select the red roof in the 3D view. Notice that the Properties palette updates to show the properties of the current selection, the Basic Roof SG Metal Panels Roof. Any changes to these properties will affect this Roof element only.
 - **9.** While you still have the roof selected, click the Type Selector dropdown at the top of the Properties palette. Choose the Warm Roof -Timber option from the list. Click your mouse off into space to deselect the roof. You'll notice that the roof is no longer red. When you choose another type from the list, you are swapping the current roof type for another roof with different *type properties*, but the *element properties* stay the same!

This concludes Exercise 1.1. You can compare your results with the sample file c01-ex-01.1end.rvt available in the files you downloaded from the Sybex website.

Exercise 1.2: Explore the Content of Your Project with the Project Browser

The Project Browser (refer back to Figure 1.1) is a table of contents for your project. The structure of the browser is a tree consisting of all the views, legends, schedules, renderings, sheets, families, groups, and links in your Revit Architecture project.

To begin the next exercise, open the file c01-ex-01.2start.rvtfrom the files you downloaded.

- 1. Much like the Properties palette, the Project Browser can be docked on either side of the Revit canvas. Follow steps 5 and 6 in the previous exercise, but drag the Browser to the right of the canvas as in Figure 1.1.
- The Project Browser is set up as a tree view with + and icons to expand or collapse the tree structure. Find the very top node of the Browser named Views (All). Click the - icon found to the left of the Views (All) node.
- Now click the icon next to the other top-level nodes: Legends, Schedules/Quantities, Sheets (All), Families, Groups, and Revit Links. Now your Project Browser looks very small, but in reality there are many pieces of content loaded in the current project.
- 4. Expand the Families node. Find the Planting folder and expand that. Then expand the RPC Tree - Deciduous folder.
- 5. Find the Hawthorn 25' family. Click the text, and drag your mouse onto the canvas. Release the mouse button, and you will see an outline preview to help you place the tree. Click again to place the tree anywhere on the green landscape. The browser allows this nice dragand-drop workflow for placing content!
- 6. The Project Browser has a search utility as well. If you right-click any element in the Browser, you will see a Search option at the bottom of the context menu. Click Search, and in the dialog that appears type Kitchen; then click the Next button. The search utility opens folders to find any project content with the word *Kitchen* in the title. Find the Rendering: Kitchen view under Sheets (All) > A001 Title Sheet (Figure 1.3).



FIGURE 1.3 Project Browser search results for Kitchen

The Project Browser can also be dragged outside the Revit canvas. This comes in very handy if you are using multiple monitors and want to maximize your drawing area.

Project Browser - c01-ex-01
□ □, Views (all)
Floor Plans
Level 1
Level 2
Site

Project Browser - c01-ex-01.2start.rvt			
₽-[O]	Views (all)		
072	Legends		
۰.	Schedules/Quantities		
÷ 🗈	Sheets (all)		
• U	Families		
÷ (0)	Groups		
	Revit Links		



The active view is displayed in bold in the Project Browser.

7. Once you've found the Rendering: Kitchen view, close the Search In Project Browser dialog and open the Kitchen view by double-clicking the view name in the Project Browser. A very nice rendering opens; read Chapter 9 to learn how to use Revit's rendering features.

This concludes Exercise 1.2. You can compare your results with the sample file co1-ex-01.2end.rvt in the files you downloaded for this chapter.

Exercise 1.3: Use the View Control Bar to See Frequently Used View Properties

The View Control Bar is at the bottom-left corner of every view. It is a shortcut for frequently used view properties. In most cases you can find the same parameter in the Properties palette for the current view. It is important to note that these commands affect only the currently active view (Figure 1.4).

1:100 🛛 🗇 🔅 💁 🦚 🙀 🕼 🖓 🖓 📖 👘

```
FIGURE 1.4 The View Control Bar for a 3D view
```

Open the file c01-ex-01.3start.rvt to begin this exercise.

- Hover your mouse over the icons on the View Control Bar to see a tooltip, which displays the name of the specific tool. The first icon is Scale, and the second is Detail Level; we won't be changing these view properties in this exercise.
- 2. The third icon is a cube called Visual Style; click this icon and choose Realistic from the list that pops up. Note that you now see material textures on the walls and site if you zoom in closely. Also, the trees look more realistic.
- **3.** Click the Visual Style icon again; this time click Hidden Line from the list. This is a more traditional black-and-white style for viewing your 3D model.
- 4. The next icon on the View Control Bar is Sun Path; skip this one. The next icon is Shadows; click this icon and you should see shadows render in your scene.
- **5.** The next icon is a teapot, and it launches the Rendering dialog. The rendering workflow is covered in Chapter 9. Click the teapot icon again to close the Rendering dialog.

By default, the Project Browser displays all of your content; you can filter and customize what you see in the Browser. Right-click Views (All) at the top of the Browser; then select Browser Organization.

- 6. The next icon is Crop View. This is a very important tool, so click it now. You should see parts of your model around the corners disappear! The model is not deleted, just cropped.
- **7.** The next icon on the View Control Bar is Show Crop Region. Click this to see the crop box for the view. Now that you see it, select it and use the blue grips that appear to adjust your crop as you desire. See Figure 1.5 for an example.



FIGURE 1.5 The Show Crop Region tool and the View Control Bar

The next icon is Lock 3D View. This option is available only in 3D views. The command is helpful if you ever add text to a 3D view and you don't want the viewpoint to change.

- 8. The next icon looks like sunglasses. The Temporary Hide/Isolate tool is very useful as your project grows more complex. Select the roof in your project, and then click the sunglasses. Choose the option Isolate Element from the dialog. Notice that all other elements in the view are hidden so you can focus on the roof only. Click the sunglasses again, and choose Reset Temporary Hide/Isolate. Now your view is back to normal.
- 9. The next icon in the View Control Bar is the light bulb, for Reveal Hidden Elements mode. Click the light bulb and a magenta border surrounds your view. Any element that is hidden, or turned off, will also be displayed with magenta lines. This viewing mode will prove

very helpful in locating elements that appear in some views but not your current view. Click the light bulb on the View Control Bar again to return to your normal working mode.

There are other tools on the View Control Bar, but they aren't used frequently enough to be discussed at this time. This concludes Exercise 1.3. You can compare your results with the sample file c01-ex-01.3end.rvt in the files you downloaded previously.

Exercise 1.4: Navigate with the ViewCube

As one of several navigation aids in Revit Architecture, the ViewCube is located in the upper-right corner of 3D views. This is a familiar UI element that appears in many Autodesk products.

To begin this exercise, open the file c01-ex-01.4start.rvt.

- Click the face of the ViewCube that is labeled Front. The view dynamically orbits to show a straight-on, elevation-style view of your project
 — and it will automatically fit the view to the entire model.
- 2. Move your mouse over the ViewCube. As you hover the mouse, arrows appear on each side of the Front face. Click the arrow to the left of the Front face. The view will dynamically orbit to the Left elevation of your project.
- **3.** Hover your mouse over the ViewCube again; this time click the arrow above the ViewCube. This will take you to a Top view, or plan view orientation, of your project.
- **4.** Hover your mouse over the lower-right corner of the ViewCube top. Click this corner and the view will dynamically orbit back to a 3/4 corner view like you started out in.
- 5. Now click your mouse anywhere on the ViewCube and drag the mouse. This is a custom orbit, not a predefined angle like Front, Left, or Top. Notice that a green Pivot icon appears at the center of the model. Release the mouse when you like your camera angle. The model does not Zoom To Fit with this type of orbiting.
- 6. Select one of the trees in the model; then click and drag the ViewCube again. Notice that the green Pivot icon is now in the middle of the selected element. This is a very useful technique for navigating large models if you're editing a specific element.




- **7.** If you are using a mouse, then the scroll wheel is ideal for zooming in and out. If you don't have a mouse, the Zoom controls are all under the magnifying glass near the ViewCube.
- 8. Once you've navigated the view and you're satisfied with the camera angle, it is important to save the current viewpoint. Hover your mouse anywhere over the ViewCube and right-click. Select the Save View option from the context menu. Name your view (preferably something specific), and click OK.
- **9.** This will save the angle but not the zoom level. If you want to maintain a certain zoom level, use the View Crop commands covered in steps 6 and 7 of the previous exercise to limit the view to what is most relevant.

This concludes Exercise 1.4. You can compare your results with the sample file co1-ex-01.4end.rvt.

Creating a Simple Layout

In this section, you'll use the Revit Architecture interface to complete basic modeling workflows. You can apply the basic concepts in these exercises to a variety of tools throughout the program.

Exercise 1.5: Create a Floor

To begin, open the file c01-ex-01.5start.rvt from the files you downloaded at the beginning of this chapter.

- The project opens in a floor plan view. There are a series of green reference planes for you to use as guides for this exercise. Click the Architecture tab of the ribbon, and find the Floor tool in the Build panel; click the Floor tool to enter Floor sketch mode.
- 2. Note that the ribbon adjusts to indicate that you are in a sketch mode. The most obvious indication is the Mode panel with the red X and green check mark icons. These allow you to cancel out of sketch mode or commit your changes. You need to draw your floor shape before you click the green check mark.
- 3. The Draw gallery to the right of the Mode panel has many different drawing tools. You'll use the Pick Lines tool since there are reference lines already in place. Click the second-to-last icon in the lower-right corner of the Draw gallery.



If you've zoomed in too far and want to Zoom To Fit, double-click the middle mouse button. You can use the keyboard shortcut **ZE** to Zoom Extents of the current view or **ZA** to Zoom All (if you have many views open).







4. Hover your mouse over one of the reference lines, and notice that it highlights to show a preview of the line that will be created. Click each of the reference lines only once. A pink sketch line appears after each click. When you're finished you should see an image similar to Figure 1.6.



FIGURE 1.6 Floor sketch lines based on reference planes

- 5. Try clicking the green check mark in the ribbon to commit your sketch lines. You will get an error about intersecting lines. Click Continue, and you will resolve this error. Revit requires that sketches be closed loops, and you have overlapping intersections at each of the corners.
- 6. Find the Trim/Extend To Corner tool in the Modify panel of the Modify | Create Floor Boundary tab in the ribbon. Click the tool and hover your mouse over a portion of one of the sketch lines that you want to keep; it highlights blue. Then click the line. Next, click the portion of the intersecting line that you wish to keep. Revit will trim the unwanted segments from the corner.
- After the first corner is cleaned up, Revit remains in the Trim/Extend To Corner tool; click the next two intersecting lines to clean up their corner. Repeat these steps until each corner is cleaned up, as in Figure 1.7.
- Finally, click the green check mark; this time you should be successful. Revit has the floor selected when you exit sketch mode. You should see the blue selection color, and you can review your floor's properties in the Properties palette. The floor is on Level 1, and its Area is 2500 SF (762 m).



The status bar in the lower-left corner of the UI provides feedback when using commands like Trim. It also displays keyboard shortcuts as you type, and it reports what object your mouse is hovering over.



FIGURE 1.7 Floor sketch lines after trimming the corners

This concludes Exercise 1.5. You can compare your results with the sample file c01-ex-01.5end.rvt.

Exercise 1.6: Create Walls

Open the file c01-ex-01.6start.rvt to start this exercise.

- 1. Find the Wall tool in the Architecture tab of the ribbon. Click the Wall tool and choose the Pick Lines tool from the Draw gallery.
- 2. Turn your attention to the Properties palette. You will set a few parameters *before* you draw your walls. Change the Location Line parameter by clicking in the cell and choosing Finish Face: Exterior from the drop-down list.
- **3.** Also in the Properties palette, change the Top Constraint parameter to Up To Level: Level 2.
- 4. Now hover your mouse over one of the edges of the floor. Do not click your mouse yet. Notice the light-blue dotted line that appears. This line indicates whether the wall will be placed inward or outward from the reference line. Note that you may need to zoom in to see the blue dotted line.
- 5. You want your walls to be inward from the green reference line, so move your mouse slightly inward from the floor edges until the blue dotted line is on the inside then click your mouse. Repeat for each edge until your drawing looks similar to Figure 1.8.





FIGURE 1.8 Walls placed inward from the floor edge

This concludes Exercise 1.6. You can compare your results with the sample file c01-ex-01.6end.rvt.

Exercise 1.7: Create Levels

In Revit Architecture, project datums are very important. Reference planes, grids, and levels are considered datums. These elements are usually visible only in a 2D view. They can be used to move any model element that references them. To begin, open the file c01-ex-01.7start.rvt.

- In the Project Browser, under the Views (All) node, locate the Elevations (Building Elevation) node, and double-click the North view. You may need to click the + symbol to expand the tree.
- 2. Zoom in to the right side of the view, and note the graphic representation of Level 1 and Level 2. Select the level line for Level 2, and notice that both the name of the level and the elevation value turn blue.
- 3. Click the elevation value for Level 2, and change it from 10'-0" (3000 mm) to 15'-0" (4500 mm). Zoom out so you can see the walls. Notice that the walls automatically adjust to the new height of Level 2! This happens because the Level datum drives the Top Constraint parameter that was set when the walls were created.

Remember that you can zoom and pan with the mouse while in the middle of commands like Trim or Offset.



- **4.** Go to the Architecture tab in the ribbon, and find the Datum panel. Click the Level command. Choose the Pick Lines tool from the Draw gallery.
- **5.** Turn your attention to the Options Bar just below the ribbon. Verify that the Make Plan View check box is checked. Then change the Offset value to 15'-0" (4.57 m).
- 6. Move your mouse into the drawing area and hover over the elevation line of Level 2. Wait until you see the light-blue dotted line appear above Level 2. If you don't see the preview line, then move your mouse slightly up. Click to place your new level.
- 7. Revit automatically names the new level for you based on the last level created. So in this case, Level 3 is the correct sequence and you don't need to rename it. If you did want to rename the new level, you'd select the level line and click the level name after it turns blue. Press Esc to exit the Level tool.
- 8. Select Level 3, and click the Copy tool on the Modify tab in the ribbon. Click anywhere in the canvas to specify a start point for the Copy command; then move the mouse in an upward direction. Type 12'-0" (3.657 m), and then press Enter to complete the command. Note that you can press and hold the Shift key to force Copy or Move commands to operate in 6" (100 mm) increments.
- **9.** Select the newest level, and change the name to **Roof**. Note that the level symbol is black, not blue like the others. This means there is not a corresponding plan view for this level.
- 10. Go to the View tab in the ribbon, find the Create panel, click Plan Views, and then click Floor Plan. The New Floor Plan dialog appears. Only levels that don't have views are listed. In this case, you should see only the Roof level. Click OK to create a new view associated with this level.

-++ Level	
3∰ Grid	
Datum	





You can double-click the blue level markers to open the plan view associated with that level. You can also double-click any blue view symbol such as a section marker, elevation tag, or a callout head.



11. The new floor plan for the Roof level opens. Go to the View tab of the ribbon, locate the Windows panel, and click Switch Windows. This drop-down list shows all of the views you currently have open. You can click any view to switch to it.

CLOSING UNNEEDED VIEWS

If you have many views open at once, then the performance of Revit Architecture slows down. Be sure to close views when you don't need them anymore. The Close Hidden Windows command in the View tab of the ribbon will close all views but the currently active one. If you have more than one project open, this command leaves open only one view from each project. This tool is most effective if your view windows are full screen.

This concludes Exercise 1.7. You can compare your results with the sample file c01-ex-01.7end.rvt.

Exercise 1.8: Change Wall Type

In the previous exercise, you created an additional level, thus increasing the overall height of your building. In the following steps, you'll adjust the top constraint of the walls and use the Type Selector to swap generic walls for a more specific wall type.

To begin, open the file c01-ex-01.8start.rvt.

- Go to the View tab of the ribbon, find the Create panel, and click the 3D view icon. Also you can click Default 3D View in the QAT, or double-click the {3D} view in the Project Browser.
- **2.** Click the Close Hidden Windows button in the QAT, and then activate the South view under Elevations (Building Elevation) from the Project Browser.
- 3. From the View tab in the ribbon, locate the Windows panel, and then click the Tile Windows button. You can also use the keyboard short-cut WT. You should see the two active views (default 3D view and South elevation) side by side.

The Switch Windows tool is also located in the Quick Access toolbar (QAT). The keyboard shortcut to cycle through open views is to hold down Ctrl and press the Tab key.



3D

View

Zoom in Region

Zoom Out(2x) Zoom to Fit

Zoom All to Fit Zoom Sheet Size

Previous Pan/Zoom Next Pan/Zoom 0, •

- **4.** In either view, find the Navigation bar, click the drop-down arrow under the Zoom icon, and then click Zoom All To Fit. You can also use the keyboard shortcut ZA.
- Find the Modify button at the far left side of the ribbon. Click the Select button under the Modify button and a drop-down appears. Make sure that the Select Elements By Face option is checked. This will enable easier selection of walls.
- 6. Click inside the 3D view window to activate the view. Hover the mouse pointer over any of the walls. Press the Tab key once, and all of the walls should highlight, as in Figure 1.9. The status bar should indicate "Chain of walls or lines." Click the mouse once to select the chain of walls.



FIGURE 1.9 Highlighted walls of a chain selection

7. With the walls still selected, turn your attention to the Properties palette. Find the parameter Top Constraint. Change the value to Up To Level: Roof, and then click Apply, or move your mouse into the canvas to automatically apply it. Notice how the walls change height in both the 3D view and the elevation view (Figure 1.10).







G Modify	View Templates								
✓ Select links									
Select underlay elements									
Select pinned elements									
 Select elements by face 									
 Drag elements on selection 									
- [1]	Select								

8. Review Figure 1.1 to see the intended image. In the 3D view, select the wall that corresponds to the Front face of the ViewCube. Press

and hold the Ctrl key, and select the wall segments adjacent to it, as

6

Changing wall segments from one wall type to another is similar to changing a font in Microsoft Word. You select the sentence and then choose a different font from the font selector — the words stay the same, but the style changes.

in Figure 1.11.

FIGURE 1.11 Use the Ctrl key to manually select multiple items in your model.

- **9.** With the walls selected, look to the top of the Properties palette to find the Type Selector. Note that it is reporting that the wall type of the current selection set is Basic Wall Generic 8" (200 mm). Click the Type Selector to open a list of wall types in the project. Choose the Exterior Brick On CMU wall type near the top of the list.
- **10.** Zoom into the walls for which you just swapped types. The thickness of these three walls should update to inherit the properties of the type you chose. Also, if you zoom in close enough, you should see a brick pattern on the walls, which the Generic walls did not have.

This concludes Exercise 1.8. You can compare your results with the sample file co1-ex-01.8end.rvt.

Exercise 1.9: Place Interior Walls

Open the file c01-ex-01.9start.rvt to begin this exercise.



- From the Architecture tab in the ribbon, click the Wall tool. Use the Type Selector to change the wall type — *before placing the walls* to Interior – 4 7/8" (123 mm) Partition (1-hr).
- 2. In the Draw gallery in the ribbon, choose the Pick Lines icon; then click each of the green reference planes that have been provided as guides for interior walls. Your results should resemble Figure 1.12.





3. Choose the Trim/Extend Multiple Elements tool from the Modify tab of the ribbon. Select the long horizontal interior wall first. Then move your mouse inside the room on the lower-right side of the plan. Hold your mouse button down and drag a crossing selection window up and to the left to include each of the smaller segments of wall. Release the mouse, and Revit should trim off the walls neatly, as in Figure 1.13.



FIGURE 1.13 Results of Trim/Extend Multiple Elements

The Function parameter of a wall helps define its default height options. For example, an interior wall defaults to the level shown in step 1, whereas an exterior wall is set to Unconnected Height.



- 4. Select the Trim/Extend Single Element tool from the Modify tab of the ribbon. First, click the exterior wall to the far right of the plan. Then click the intersecting interior wall. Remember, Revit's Trim tool wants you to click the segments you want to keep.
- **5.** Now select the Trim/Extend To Corner tool from the Modify tab. Click the remaining overlapping corners to clean up the wall construction.
- **6.** Note that the leftmost interior wall is not aligned with the thicker Brick On CMU wall. Click the Align tool from the Modify tab of the ribbon. First, click the inside edge of the thicker wall because that is what you want to align to. The second click should be on the outside edge of the leftmost interior wall. This is what you want to move. The results should resemble Figure 1.14.



FIGURE 1.14 Results of the Align tool

This concludes Exercise 1.9. You can compare your results with the sample file c01-ex-01.9end.rvt.

Exercise 1.10: Place Doors and Windows

In this exercise, you'll place doors and windows in the walls. Doors and windows require a wall to host them. You'll use the generic Door and Window families that are loaded in the project, but bear in mind that families of any size, material, and configuration can be used in Revit.

To begin, open the file c01-ex-01.10start.rvt.



- 1. Go to the Architecture tab and locate the Door tool. Click the tool and notice that the Type Selector reports that the Door type is Single-Flush 36'' (914 mm) $\times 84''$ 2133 mm).
- 2. Hover the mouse over one of the interior walls, and you'll see a preview of the door being placed in the wall. Press the spacebar and notice that the door flips the direction in which it is swinging.
- **3.** Move the mouse more toward the inside of the room, and press the spacebar until your door swings into the room and is swinging in the correct direction. Click to place the door.
- **4.** Repeat the same steps to place doors into the other rooms along the interior wall. When you finish, the results should appear similar to Figure 1.15.



FIGURE 1.15 The doors swing into the rooms.

- 5. Go back to the Architecture tab of the ribbon and locate the Window tool. Click the tool and notice that the Type Selector reports that the Window type is Fixed 36'' (914 mm) $\times 48''$ (1219 mm).
- 6. Hover the mouse over one of the exterior walls between the interior walls, and you'll see a preview of the window being placed in the wall. Move the mouse inside the wall to make the window pane closer to the inside of the room as well. Click to place the window.



If you happen to place a door or window and you want to change the door swing or the glass placement, just select the element and press the spacebar. Revit will flip the orientation of the family.

7. Repeat the same steps to place windows along the exterior wall for each of the interior rooms. When you finish, the results should appear similar to Figure 1.16.



This concludes Exercise 1.10. You can compare your results with the sample file c01-ex-01, 10end, rvt.

Exercise 1.11: Space Elements Equally

In this exercise, you'll use dimensions and temporary dimensions to create an equally spaced relationship between the interior walls, then the doors, and then the windows. This will illustrate the idea of using constraints to create design intent. This is a fundamental concept of Revit's parametric modeling. Open the file c01-ex-01.11start.rvt to begin this exercise.



- From the Annotate tab in the ribbon, locate the Dimension panel, and click the Aligned Dimension tool. In the Options Bar, notice that the Placement drop-down is set for Wall Centerlines. Click in this drop-down and change the placement to Wall Faces.
- **2.** Hover your mouse over the leftmost interior wall, and you should see the outside edge highlight. Click to start a dimension string.
- **3.** Return your attention to the Options Bar and change the placement from Wall Faces to Wall Centerlines.

- 4. Move your mouse back into the canvas and hover over the center of the interior walls until you see a blue highlight in the center of the interior walls. Click to continue your dimension string. Repeat for each interior wall.
- Return to the Options Bar and change the placement from Wall Centerlines to Wall Faces. Click the inside face of the exterior wall to finish adding dimensions to your dimension string.
- **6.** Move your mouse above the interior wall and click to place the dimension string in the view. The results should resemble Figure 1.17.



FIGURE 1.17 The dimensions of the interior walls

- **7.** After placing the dimension string, notice the blue EQ icon that appears. This is a valuable shortcut for spacing your elements evenly. Click this icon and your walls will automatically space themselves evenly.
- 8. You will most likely get an error because of a door overlapping with a wall. Disregard this warning by closing the small dialog that opens in the lower-right corner. We will use temporary dimensions to help space the doors in the next step. Click the Esc key twice to exit the Dimension tool.
- **9.** Select the rightmost door, and notice the light-blue dimensions that appear. These are called temp dims and are very helpful for locating doors and windows relative to walls. Notice that this door is 2'-6" (.76m) from the wall. This is perfect; leave it as is.

If you want to see the actual dimension values instead of EQ in your dimension strings, right-click the dimension string and select EQ Display to toggle between the two settings. You should see the EQ icon display anytime you select a dimension string.

 \triangleleft

Select the next door to the left and hover your mouse over the temp dim that appears. The tooltip lets you know you can edit this dimension. Click the blue text and type 2'-6" (.76m) into the text box. The door moves to the correct location. Follow these steps for the other doors. The results should resemble Figure 1.18.



FIGURE 1.18 Doors equally spaced relative to the walls

- **11.** Now you will combine the techniques of using dimensions and temp dims to space the windows equally. Select the rightmost window.
- 12. The temp dim reference line spans from the center of the window to the center of the exterior wall turn your attention to the blue circle icon at the center of the exterior wall. Click the blue circle icon once, and the circle jumps to the inside face of the wall. Click the same circle again, and the temp dim appears along the outside face of the exterior wall.
- **13.** Click the temp dim value and change it to 4'-8'' (1.42 m).
- 14. Follow the same steps to make the center of the leftmost window 4'-8''(1.42 m) from the exterior face of the exterior wall.
- **15.** Click the Annotate tab of the ribbon, and choose the Aligned Dimension tool.
- **16.** Hover your mouse over the middle of the leftmost window. You should see a small vertical blue highlight appear, indicating the center of the window. Click to place a dimension reference there.

- **17.** Hover over the middle of the next window and click to continue your dimension string. Repeat until you have a dimension string between the centers of each of the windows.
- **18.** Move your mouse down below the wall, and click to place the dimension string in the view. Click the EQ button that appears. Press Esc to exit the Dimension tool. Your result should resemble Figure 1.19.



FIGURE 1.19 Windows equally spaced

This concludes Exercise 1.11. You can compare your results with the sample file c01-ex-01.11end.rvt.

Now You Know

The Revit Architecture interface is organized in a logical manner that enforces repetition and therefore increases predictability. Almost every command can be executed by selecting a view from the Project Browser, choosing a tool from the ribbon, specifying settings in the Properties palette, and then placing an element in the drawing window. From there you'll use the View Control Bar and the ViewCube to view your elements as you'd like. Although we covered only the most basic tools like Trim, Align, temp dims, and Aligned Dimensions in the preceding exercises, you'll be able to apply what you've learned in this chapter to the many exercises exploring other tools in subsequent chapters.

CHAPTER 2

Walls and Curtain Walls

Walls in the Autodesk[®] Revit[®] Architecture software can range a great deal in complexity. Early in the design process, walls and curtain walls can be more generic, essentially serving as vertical containers for space and function. They can also be associated to masses in order to create incredibly complex shapes. As the design progresses, these generic walls and curtain walls can be swapped out for more specific vertical compound walls that indicate a range of materials as well as geometric sweeps and reveals.

In this chapter, you'll learn to:

- Create walls using several different methods
- Host elements in walls
- Modify wall parameters
- Modify and reset wall profiles
- Create and customize a curtain wall
- Embed a curtain wall in a basic wall
- Add/remove grids and add a curtain wall door

Understanding Wall Types and Parameters

Revit Architecture has three fundamental types of walls: basic, stacked, and curtain walls. In this section, we will cover some of the important aspects of each. This is not intended to be an exhaustive guide to creating and editing each wall type but rather an overview to provide some background knowledge before we continue with the exercises throughout this chapter.

Basic Walls

The Revit Architecture default template includes several wall types. The most basic wall types have no detailed structure and are named with the prefix Generic for easy identification. Other wall types have highly detailed structures known as layers. Each layer is assigned a function, material, and thickness. The function of a wall layer determines how it will join when multiple wall types intersect or when a wall intersects another element such as a floor.

- 1. On the Architecture tab in the ribbon, click the Wall tool.
- 2. In the Type Selector at the top of the Properties palette, select the Generic 8" (200 mm) Masonry wall type.
- 3. Click Edit Type just below the Type Selector.
- Click the Preview button at the lower left in the Type Properties dialog to see a graphic sample of the wall type.

In Figure 2.1, the structural region of this wall is defined by a diagonal crosshatch pattern. This is a basic wall with only one pattern defining the wall's material.

	*	Family:	System Family: Ba	Asic Wall Load		
		Type:	Generic - 8" Maso	nry Duplicate		
				Rename		
		Type Param	eters			
			Parameter	Value	ŀ	
		Construct	tion	*		
		Structure		Edit)	
\times \times \times \times \times \times \times \times \times		Wrapping	at Inserts	Do not wrap		
$\times \times \times \times \times \times \times \times \times \times$		Wrapping	at Ends	None		
$\mathbf{X} \times \mathbf{X} \times \mathbf{X} \times \mathbf{X} \times \mathbf{X}$		Width		0' 7 5/8"		
$\times \times \times \times \times \times \times \times \times$		Function		Exterior		
		Graphics		*	1	
		Coarse Sc	ale Fill Pattern	Diagonal crosshatch		
		Coarse Sc	ale Fill Color	Black		
		Materials	and Finishes	*		
		Structural	Material	Concrete Masonry Units		
		Identity [Data	*		
		Type Ima	je			
		Keynote			1	
		Model				
		Manufact	urer			
		Type Con	ments			
	-	URL				
		Descriptio	n		1	

FIGURE 2.1 Masonry structural region of a basic wall

Basic walls can be modified to contain far more structural detail:

- 1. With the Type Properties dialog still open, go to the Type drop-down.
- 2. Select the wall type Exterior Brick On Mtl. Stud, and you'll see the difference (Figure 2.2).

	^	Family:	System Family: B	Loa	id	
		Type:	Exterior - Brick or	n Mtl. Stud	Dupli	cate
					Rena	me
		Turne Param	atara			
		Type Faran	Parameter		Value	
		Construc	tion			â
		Structure			Edit	
///////////////////////////////////////		Wrapping	at Inserts	Do not wrap		
		Wrapping	at Ends	None		
		Width		1' 1 7/8"		
		Function		Exterior		
		Graphics				*
		Coarse So	ale Fill Pattern			
		Coarse Sc	ale Fill Color	Black		
		Materials	and Finishes			*
		Structural	Material	Metal Stud L	ayer	
		Identity I	Data			*
		Type Ima	ge			
		Keynote	_			
		Model				
		Manufact	urer			
		Type Con	nments			
	-	URL				
		Descriptio	n			1

FIGURE 2.2 Compound walls consist of several layers of functional materials.

3. Click the Edit button in the Structure parameter.

Basic walls can even have profiles applied to them that are used to add or remove geometry in your walls. If you're still examining the structure of the previous wall, do the following:

- 1. Click the Cancel button, and select the wall type Exterior Brick And CMU On MTL. Stud.
- 2. In the Preview pane, switch the View to Section.
- 3. Zoom into the top of the wall sample shown in the preview.

You'll see a parapet cap at the top of the wall (Figure 2.3). This is a profile associated to the basic wall type.

Notice the numerous values that control the function, material, and thickness for this wall type. These values help you coordinate your project information across views and schedules.

Although you can
manually add profiles
to walls in your project
on a case-by-case
basis, we think you'll
find that adding them
to the wall definition
makes creating and
updating wall types
easy and quick.

dit Assembly									5			
		*	Famil Type	y:	Basic Wall Exterior - Brick ar	nd CMU on MTL.	Stud					
			Total	thickness:	1' 1 7/8"		Sample	Sample Height: 10' 0"				
			Resis	tance (R):	0.0000 (h·ft²·°F)	/BTU						
			Therr	mal Mass:	0.0000 BTU/°F							
Sector States			Lay	ers	6	XTERIOR SIDE						
				Function	Material	Thickness	Wraps	Structural Material	•			
			1	Finish 1 [4]	Masonry -	0' 3 5/8"	V					
			2	Finish 1 [4]	Masonry -	0' 3 5/8"	V					
			3	Thermal/Ai	Misc. Air La	0' 3"	V					
			4	Membrane	Air Barrier -	0' 0"			-			
		=	5	Substrate [Wood - Sh	0' 0 3/4"	V					
			6	Core Bounda	Layers Abov	0' 0"						
			7	Structure [1	Metal - Stu	0' 6"			-			
			_	INTERIOR SIDE								
				Insert	Delete	Up		Down				
			Def	ault Wrapping								
			At I	inserts:		At Ends:						
			Do	not wrap		None		•				
			Mod	lify Vertical Strue	cture (Section Pre	eview only)						
		-		Modify	Merge	Regions	Sweeps					
•	III	•		Assign Layers	Split	Region	Re	veals				
<u>a</u>	View: Section: Modify typ	oe ▼	P	review >>		ОК	Cancel	Help	•			

FIGURE 2.3 Wall sweep as part of a wall

Stacked Walls

Stacked walls consist of basic wall types but are combined vertically in a single defined type. Any basic walls can be used to create a stacked wall.

To find the stacked wall types, follow these steps:

- 1. Start the Wall tool, access the Type Selector, and scroll to the bottom of the list.
- 2. Select the wall type Exterior Brick Over CMU w Metal Stud.
- 3. Click the Edit Type button, and then click Structure Edit.

As shown in Figure 2.4, this wall type is defined by two different basic walls, but you can add more if necessary.

One of the stacked wall segments must be of variable height to accommodate the vertical constraints of the wall instances you place in a project. If all the segments were a fixed height, it would conflict with varying datum geometry in your project. In addition to specifying the height of the segments, you can also adjust the horizontal offset or set a segment to flip its orientation (inside or outside).

	•	Family Type: Offse	y: Stacke Exterio t: Core (l Wall r - Brick Over (Centerline	⊆MU w Metal S ▼	tud Sa	mple Height:	20' 0"
		Тур	es		TOP			
			Name	Height	Offset	Тор	Base	Flip
		1	Exterior - Brick	Variable	0' 0"	0'0"	0'0"	
		2	Exterior - CMU	3' 0"	0' 0"	0'0"	0'0"	
					BASE			
			Variable Inse	t Del	ete	Up	Down	
	-							
(0) View: Section: Mod	ify type 🔻	Pr	review >>		ОК	Cancel		Help

Note that you can't combine stacked walls or add curtain walls to your stacked wall.

 \triangleleft

FIGURE 2.4 Type properties of a stacked wall

Stacked walls have a unique option available (select and then right-click) called Break Up. When a stacked wall is broken up, the segments are reduced to individual basic walls. The basic walls represent the same dimensions specified in the stacked wall.

Curtain Wall Types

Curtain walls are more complex than basic walls or stacked walls. They consist of four elements: a simple wall-segment definition, curtain grids, panels, and mullions. Curtain wall types can be completely instance based (allowing each to vary) or can be driven entirely by the wall type properties that set grid spacing, panels, and mullion types for interior and border conditions (Figure 2.5).

Hosting Elements in Walls

Walls can host other types of elements that are meant to create openings. As long as the walls exist, the elements they are hosting exist as well. Doors and windows are examples of commonly used hosted elements.

Keep in mind there is no method to convert the basic wall segments to the original stacked wall.

Chapter 2 • Walls and Curtain Walls

amily:	System Family: Curtain Wall Load						
Type: Storefront Duplicat							
ype Parar	neters	Rename					
	Parameter	Value					
Constru	ction	*					
Function	1	Exterior					
Automat	tically Embed						
Curtain I	Panel	System Panel : Glazed					
Join Con	dition	Vertical Grid Continuous					
Material	s and Finishes	*					
Structura	al Material						
Vertical	Grid	\$					
Layout		Maximum Spacing					
Spacing		5' 0"					
Adjust fo	or Mullion Size						
Horizon	tal Grid	\$					
Layout		Fixed Distance					
Spacing		8' 0"					
Adjust fo	or Mullion Size						
Vertical	Mullions	*					
Interior 7	Гуре	Rectangular Mullion : 2.5" x 5" rectangular					
Border 1	Туре	Rectangular Mullion : 2.5" x 5" rectangular					
Border 2	Туре	Rectangular Mullion : 2.5" × 5" rectangular					
Horizon	tal Mullions	*					
Interior 7	Гуре	Rectangular Mullion : 2.5" x 5" rectangular					
Border 1	Туре	Rectangular Mullion : 2.5" × 5" rectangular					
Border 2	Туре	Rectangular Mullion : 2.5" x 5" rectangular					
Identity	Data	*					
Keynote							

FIGURE 2.5 Curtain wall type definitions

Placing a door in a wall is very easy and can be done in plan, elevation, or 3D view. You may notice that you can place doors only in walls. This is because door families are hosted elements and cannot exist without a host. Because of this relationship, hosted elements are automatically deleted if you delete a host element such as a wall.

Creating Wall Configurations

The objective of the following exercise is to create several different wall configurations through drawing and picking existing geometry. The first method you will explore is manually drawing walls using some of the Draw shapes (Figure 2.6).

	Architecture	Structure	Systems	Insert Anr	notate .	Analyze	Massing & S	ite Colla	borate Vi	ew Man	age Modify	Place Wall 💿 🔹
\} Modify		Paste	Ke Cope → O Cut → O Join →	• 🕼 🗑 # 🕄 •		_ № °3 C) 	••••• 8	ु • @ ∡ • च	↓ ↓ ↓		
Select 🔻	Properties	Clipboard	Geor	metry		N	/lodify		View	Measure	Create	Draw

FIGURE 2.6 Generic configurations for walls

Then you will use additional wall tools to create arc shapes using Tangent End Arc and Fillet Arc configurations to append wall segments to existing wall elements.

Once the exterior walls are created, the last portion of the exercise will focus on creating walls by picking existing geometry to create walls.

Exercise 2.1: Create Wall Configurations

To begin, go to the book's web page at www.sybex.com/go/ revit2015essentials, download the files for Chapter 2, and open the file c02-ex-2.1start.rvt.

- 1. Activate the floor plan named Drawing Walls. Start the Wall tool, and practice creating segments of walls using various tools in the Draw panel (such as Line or Center-Ends Arc). Don't worry about where you create these walls; it's just practice. Also take note of the settings available in the Options Bar prior to wall placement because they will vary for each tool.
- 2. Activate the floor plan named Tangent-Fillet Walls. Your goal is to complete the layout of the walls according to the dashed lines shown in the floor plan.
- In the upper-right corner of the layout, the two perpendicular walls must be joined with a radius wall segment. Select either one of the wall segments, right-click, and select Create Similar from the context menu.
- 4. On the Draw panel in the ribbon, select the Fillet Arc option. Click one wall segment and then the other perpendicular segment. After you click the second wall segment, a curved segment appears.
- Place the curved segment near the layout line. Before you continue, click the radial temporary dimension value and change it to 6' (2000 mm).
- The Wall command should still be active, so select the two perpendicular walls in the lower-right corner of the layout, and repeat steps 4 and 5.
- 7. With the Wall command remaining active, return to the Draw panel in the ribbon, and select the Tangent End Arc option. Click the left end of the wall segment at the bottom of the layout, and then click the left end of the wall segment at the top to complete the tangent arc wall. Your results should look like the plan shown in Figure 2.7.



FIGURE 2.7 Results of the Tangent-Fillet Walls steps

- 8. Activate the Picking Walls floor plan, and then start the Wall tool. Choose the Pick Lines option in the Draw panel in the ribbon. On the Options Bar, set the Location Line to position the wall in relation to the picked path.
- **9.** In the first set of lines in the sample file, pick each individual line segment to place walls.
- 10. On the second set of lines, use the chain-select method to place all the wall segments at once. Hover your mouse pointer over one of the line segments, and press the Tab key once. When the chain of lines is highlighted, click the mouse button to place the complete chain of walls. Your results should look like the plan shown in Figure 2.8.



FIGURE 2.8 Result of Pick Lines

CREATING ELLIPTICAL WALLS

Because the need for elliptical walls may occur in your designs, we'll address them now. You should know two things. First, elliptical walls can't be sketched using the Draw tools. Second (and more important), they can be created via workarounds (such as creating an elliptical mass and then picking the face of the mass from which to create an elliptical wall).

So, what's a better way? Create elliptical wall layouts from a series of tangent arcs. Doing so will give you an approximation that is indistinguishable from an actual ellipse, and you'll be able to guide the walls' construction more accurately in the field.

Exercise 2.2: Host a Door in a Wall

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 2, and open the file c02-ex-2.2start.rvt.

- 1. Activate the floor plan named Existing Walls.
- 2. Start the Door tool, and add three doors to the main horizontal wall to the left of the vertical walls.
- **3.** After placing a door, select the door and notice the temporary dimensions that appear.
- 4. With the door still selected, adjust the temporary dimension so they are 9" off the center of the perpendicular walls (left-click the temporary dimension Move Witness Line) to toggle the dimension witness line.
- Click the temporary dimension text, which allows you to enter 9" (230 mm) (Figure 2.9).



FIGURE 2.9 Hosting doors in a wall

Modifying Wall Parameters

Now that you've created a few wall configurations, it's important to understand how you can modify them. Sometimes this is done simply by selecting the wall and dragging a wall end or a shape handle to a new position. In other cases, you want to be more exact and assign a specific value.

Your approach depends on where you are in the design process. Just remember that you can update design decisions, and all your views, schedules, tagging, and so forth will update—don't get concerned with being too exact early in your design.

The objective of the following exercise is to modify existing wall type and instance parameters. You will start by modifying some type parameters of the wall. Then for the second part you will modify some instance parameters.

Exercise 2.3: Modify Wall Parameters

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 2, and open the file c02-ex-2.3start.rvt.

 Activate the floor plan named Level 1. Sketch a straight segment of a wall, but this time as you draw the wall, type 40 (or 12000 mm). Depending on the default units, typing 40 creates a 40' segment.

Notice that you didn't have to indicate the units as feet. If you wanted to indicate inches, you'd only have to put a space between the first and second values. Thus, 40'-6'' can easily be entered as 40(space)6.

- 2. Press the Esc key twice, or click the Modify button in the ribbon. Select the segment of wall you just created.
- **3.** There are two options to modify the length, as shown in Figure 2.10. You can type in a new value by selecting the temporary dimension and entering the value, or you can simply drag either wall end to a new location.



FIGURE 2.10 Modifying the wall length

4. Open to the default 3D view by navigating to the View tab and clicking 3D View, and look at some other options. The two blue arrows at

the top and bottom of the wall are called *shape handles* (Figure 2.11). You can click and drag them to adjust the top and bottom locations of a wall. As you drag the shape handle you will see a temporary location line until you release the shape handle.



FIGURE 2.11 Shape handles and instance parameters displayed in the Properties palette

- 5. Next, let's look at the instance parameters. Changes to these parameters will update only the selected instance(s). First, select the wall and review the Properties palette. These are the specific instance parameters for this wall type.
- 6. Update the Location Line parameter value to be Finish Face: Exterior. The location line is the origin of the wall. If you swap one wall for another, the location line will be maintained. In other words, if you create an exterior wall and the location line is the inside face, then when you change the properties or select a thicker wall, it will grow to the outside—away from the location line.

- Next, locate the Base Constraint parameter. Change the value to Level 2. The base constraint is the bottom of the wall. The base constraint can be changed at any time, and the wall will move to reflect the change.
- Locate the Base Offset parameter. Change the value to 1'-0" (300 mm). The Base Offset or Top Offset is the value above or below the respective constraint (negative dimensions can also be used). For example, if you wanted the bottom of a wall associated to Level 1 but 3'-0" (1 m) below, the value for Base Offset would be -3'-0".
- 9. Locate the Unconnected Height parameter. Change the value to 12'-0" (3655 mm). The Unconnected Height value is the height of the wall when you do not use a specific datum for Top Constraint. If you change the Base Constraint parameter back to Level 1 and then change the Top Constraint value to Up To Level: Level 2, the Unconnected Height parameter becomes inactive.

Editing and Resetting Wall Profiles

Not all walls are rectilinear in elevation, and for these situations you can edit the profile of a wall. Note that you'll be able to edit the profile of a straight wall only, not a curved wall.

When you edit a wall's profile, the wall is temporarily converted to an outline sketch in elevation. Because the sketch is not plan based, you can edit a profile only in a section, an elevation, or an orthogonal 3D view. You can draw as many closed-loop sketches as you like within the wall's profile, but each loop must be closed.

If you need to remove the edited condition of a wall, don't reenter Edit Profile mode and manually remove the sketches. Select the wall, and click Reset Profile in the Mode panel on the Modify | Walls tab. Doing so will reset the extents of the wall and remove any interior sketches.

Another scenario for using Reset Profile would be when attempting to use Attach Top/Base. Depending on how the wall profile was originally edited, Revit could display a join error when attempting to attach the wall. This is most likely to occur if the top of the wall profile was edited previously. Reset the profile first, and then attempt to attach the wall to the roof as needed.

The objective of the following exercise is to edit the profile of a wall from a rectangle to a custom shape and reset the profile at the end of the exercise. Then you will continue with a second exercise using the Attach Top/Base tool

to attach one wall to another wall. The last portion of this exercise will cover detaching the condition.

Exercise 2.4: Edit and Reset the Wall Profile

To begin, go to the book's web page at www.sybex.com/go/ revit2015essentials, download the files for Chapter 2, and open the file c02-ex-2.4start.rvt.

- The starting file should open to the default 3D view. Select the 40' (12000 mm) wall, and click Edit Profile on the Modify | Walls tab.
- **2.** From the South Elevation view, create the sketch as shown in the top illustration in Figure 2.12.

Don't worry about following the exact dimensions in this illustration—we're just showing them for reference.

 Delete the top line, and trim the two side sketch lines. Note that the reference lines indicating the extents of the original wall remain, as shown in the bottom illustration in Figure 2.12.



FIGURE 2.12 Adding new sketch lines

4. Use the Trim tools as necessary to clean up the sketch so that it remains as one closed loop.

If you have crossing lines or open segments, you will receive an error when you attempt to finish the sketch in the next step.

5. When you have finished, click Finish Edit Mode.

Should the design change later and you need to remove the custom wall profile, you can select the wall and use the Reset Profile tool on the ribbon.

Exercise 2.5: Attach and Detach the Top/Base

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 2, and open the file c02-ex-2.5start.rvt.

 The starting file should open to the default 3D view. Select the wall and click Edit Profile. Modify the profile sketch as shown in Figure 2.13. Don't forget to trim and delete unnecessary sketch lines. Then finish the sketch.



FIGURE 2.13 Edited wall profile

- 2. Open the Level 1 floor plan, and sketch another wall right on top of the same location as the wall you just edited. In this case, use a Generic 12" Masonry (305 mm) wall, and set the Unconnected Height in the Options Bar to 2'-0" (610 mm).
- **3.** Open the default 3D view to complete this step. Select the thicker wall, click Attach Top/Base (Figure 2.14), and confirm that the

Options Bar setting is correct for Top or Base. Now select the wall with the profile that you just edited. This attaches the top of the thicker wall to the underside of the upper wall, as shown on the right side of the figure.



FIGURE 2.14 Attach Top/Base setting

The great thing about this technique is that the relationships between the two walls are maintained if you edit the elevation profile of the upper wall. Performing these steps is a lot faster than having to edit the elevation profile of both walls! If you should need to detach the lower wall, follow the remaining steps in this exercise.

- 4. Select Generic 12" Masonry and click Detach Top/Base on the ribbon.
- **5.** Click the Generic 8" wall above, or click Detach All on the ribbon to reset the wall back to the original 2'-0" unconnected height.

Cutting Openings

A common use of this technique is to attach walls to sloped elements, such as the underside of roofs.

Openings can be cut in both straight and curved walls. The Wall Opening command tends to be used in curved walls because you already have the option to edit the elevation profile in straight walls. And when you cut an opening, you cannot sketch beyond the extents of the wall boundary or create shapes that are not rectilinear.

The objective of the following exercise is to add and modify wall openings in a curved wall.

Exercise 2.6: Cut Openings in a Curved Wall

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 2, and open the file c02-ex-2.6start.rvt.

1. The starting file should open to the default 3D view. Select the curved wall.

The Wall Opening option appears on the Modify | Wall tab, as shown in Figure 2.15 on the left.



FIGURE 2.15 Creating wall openings

- Select this command, and then hover over the wall. You are prompted to create a rectilinear opening with two clicks, as shown in Figure 2.15 on the right.
- Create two wall openings anywhere in the arc wall. When the wall opening is selected, the Properties palette will display constraints such as Top Offset and Base Offset. This allows input for exact dimensions to modify the opening size and location.
- 4. Set the Base Offset to 1'-0" for one of the wall openings.
- If you need to delete an opening, hover over the opening edge and select it (or use the Tab key to toggle the selection) and then press the Delete key.

Splitting Walls

Sometimes, after you've created walls, you realize that you don't need an inner segment—or you need to change a segment to another wall type. The process of deleting and re-creating walls would be tedious work. However, Revit Architecture offers a Split Element tool on the Modify tab of the ribbon that allows you to divide walls, effectively breaking them into smaller pieces. This can be done along both horizontal and vertical edges of either curved or straight walls (Figure 2.16).



FIGURE 2.16 Splitting walls, before and after

Swapping Walls

Swapping walls for different types prevents the rework of deleting them and creating new ones. Doing so is as easy as selecting a wall and then selecting the new type from the Properties palette (Figure 2.17). This is especially useful early in the design process, when the exact wall type is likely to be unknown. Generic or placeholder wall types can be used and then swapped later on when the design progresses.



FIGURE 2.17 Swapping wall type before and after

Creating Curtain Walls

Curtain walls are created in much the same way as regular walls: by selecting the type of curtain wall and then sketching the desired shape. However, the available parameters for curtain walls vary from basic or stacked walls.

The objective of the following exercise is to customize a curtain wall that is instance-based (meaning you will not define any type parameters yet). You will manually add curtain grids that will subdivide the wall into smaller panels. The last part of the exercise will be to add curtain mullions, which are hosted to the curtain grids, and manually space the grids to the desired width.

Exercise 2.7: Create and Customize a Curtain Wall

To begin, open the book's web page at www.sybex.com/go/revit2015essentials, download the files for chapter 2, and open the file c02-ex-2.7.start.rvt.

- The starting file should open to the default 3D view. Select the Curtain Grid tool from the Build panel on the Architecture tab of the ribbon.
- **2.** As you hover over the edge of the curtain wall, you are prompted with a dashed line that indicates where the grid will be placed. Also notice

that the dashed line should snap at the midpoint and at one-third lengths from either end of the curtain wall.

3. Using the default All Segments placement option on the ribbon, add three grid lines along the horizontal and vertical directions. At this point the curtain wall should look like Figure 2.18.





- 4. Now that you've added curtain grids, you can add mullions to the curtain panel. Select the Mullion tool from the Build panel, and choose the All Grid Lines placement option on the ribbon (Figure 2.18).
- 5. Hover the cursor over any of the curtain grid lines, and they should all highlight, indicating where the mullions will be placed. Left-click and mullions will be assigned to all empty grid lines (in this example they should be added everywhere). Press the Esc key once to exit the command.

6. Move the cursor over one of the vertical mullions and press the Tab key until the curtain grid line is highlighted. The Tab key is important when working with curtain walls. Because there are several elements that potentially share a common edge (walls, panels, grids, and mullions), it is necessary to press and release the Tab key to toggle what will be selected (Figure 2.19).



FIGURE 2.19 Mullions and selecting the grid line

- Once the grid line is highlighted, left-click to select it.
 Once it is selected, two temporary dimensions should be visible.
- **8.** Left-click the temporary dimension text; you can enter exact values to move the grid line to.
- **9.** Set the vertical first and last grid lines to be 2'-0" from the curtain wall edge. Leave the center grid line where it is. Set the horizontal first and last grid lines to be 3'-0" from the curtain wall edge.

When complete, the curtain wall should look like the one shown in Figure 2.20.

Alternatively you can left-click+drag the curtain grid line to move it in a less precise manner.


FIGURE 2.20 Final instance-based curtain wall

CURVED CURTAIN PANELS

Curved curtain-wall segments that you create will appear flat until you add the vertical grid lines. But specifying exact grid locations during the design process is often tedious—and difficult to correct. To help, you can create a design panel from a specially created wall that is very thin and transparent. Use this wall to figure out the design, and then swap it out for a curtain wall later. The wall can even have a pattern file associated to it that visually helps it to read as a curtain panel. You can find an example of this type of wall in c02-Curtain Walls.rvt(c02-Curtain Walls Metric.rvt), which is available with this chapter's exercise files.

In the previous exercise you were able to modify the curtain grids and hosted mullion locations using temporary dimensions, since the curtain type properties did not have any set spacing parameters. In the next exercise the objective is to set some type property values for spacing and mullion types.

Exercise 2.8: Modify Curtain Wall Type Properties

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 2, and open the file c02-ex-2.8start.rvt.

- 1. The starting file should open the to the default 3D view. Select one of the two curtain walls and click Edit Type in the Properties palette.
- Locate the Vertical Grid and Horizontal Grid settings for Layout (currently set to None). Set Vertical Grid Layout to Fixed Distance, Spacing 5'-0". Set Horizontal Grid Layout to Maximum Spacing, Spacing 4'-0". Click OK to close the Type Properties dialog.
- **3.** Both curtain walls should update to show grid lines at the spacing you configured (Figure 2.21).
- Select one of the curtain walls and click Edit Type again. Under Construction, set the Curtain Panel to System Panel : Solid. Then set the Join Condition to Border and Vertical Grid Continuous.
- 5. Scroll down further in the Type Properties dialog to locate the Vertical Mullions and Horizontal Mullions parameters. Set Interior Type for both Vertical and Horizontal Mullions to Rectangular Mullion : 2.5" 5" Rectangular. Do the same for the Border 1 Type and Border 2 Type, so all settings are using the same rectangular mullion. Click OK to close the Type Properties dialog, and both curtain walls should update (Figure 2.22).

One condition you may notice is at the corner, where the two curtain walls meet. By default no corner mullion is specified, so the standard Rectangular Mullion : 2.5'' 5'' is used there for both overlapping ends. Corner mullions can be specified in the type properties under Border 1 or Border 2 Type.

You can also override the mullions already placed in the model, which is more applicable at this condition since you do not want to update every border condition at every curtain wall instance for the entire model. When a curtain wall type contains defined spacing and mullions, you can still modify an individual segment by first using Unpin.



FIGURE 2.21 Curtain wall grids added



FIGURE 2.22 Curtain wall panels and mullions specified

6. From the 3D view hover the cursor over one of the border curtain mullions (it doesn't matter which you choose). Press the Tab key until the mullion is highlighted; then left-click to select it. While the mullion is selected, right-click and choose Select Mullions ➤ On Gridline. This will select every mullion on this last grid line (Figure 2.23).



FIGURE 2.23 Mullions selected on grid line

- 7. Notice that the Properties palette shows the rectangular mullion type as grayed out. You can't simply swap it by default, because the type properties of the curtain wall define this type. In order to override the type, you need to first unpin the mullions. On the ribbon in the Modify panel click the Unpin tool.
- 8. Every curtain wall mullion on this grid line is now unpinned (and still selected). You don't need curtain mullions at both borders, so you can delete these. Since you unpinned them in the last step, you can simply press the Delete key.
- **9.** Repeat step 6 to select the remaining border mullions along the grid line. Then use the Unpin tool again. For these you want to change the curtain mullion type from the Type Selector. Change the curtain wall mullions to L Corner Mullion : 5" 5" Corner. Now the corner condition should look similar to the one in Figure 2.24.



FIGURE 2.24 Curtain wall corner condition

Editing Wall Profiles

Basic, stacked, and curtain walls can have the standard rectangular shape modified to a custom shape using the Edit Profile tool. This tool is available on the ribbon after one wall is selected (it will be disabled if more than one wall is selected). When Edit Profile is activated (Figure 2.25), you can modify the rectangular profile of the wall by adding or modifying the existing sketch lines. Additionally, any closed-loop sketch lines you add in the interior will be considered openings when you click Finish Edit Mode.



Embedding Curtain Walls

Curtain walls can also be embedded in walls. This may be useful for a custom storefront or similar conditions where you want the curtain wall to be hosted in a basic or stacked wall and the wall opening to be cut out automatically.

The objective of the following exercise is to add a curtain wall embedded in a basic wall. For the second portion of the exercise you will edit the embedded curtain wall profile to customize the shape.

Exercise 2.9: Embed and Edit Curtain Wall Profile

To begin, open the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 2, and open the file c02-ex-2.9.start.rvt.

- 1. The starting file should open to the Level 1 view. In this view there is a single basic brick wall.
- **2.** From the Level 1 view, start the Wall tool and change the wall type to Curtain Wall : Storefront using the Type Selector.
- **3.** Click Edit Type, and locate the Automatically Embed parameter. Confirm that it is checked (it should be by default). This parameter controls whether the curtain wall will automatically embed itself into a host wall.
- 4. Click OK to close the Type Properties dialog. Click anywhere over the brick wall in the Level 1 view. Click the second point 20'-0" from the first to add the curtain wall. Because Automatically Embed is checked, the curtain wall will be associated with the brick wall and the opening will be cut out of the wall.
- Open the South Elevation view. Select the curtain wall, and from the Properties palette change the Base Offset parameter to 2'-0" (610 mm). Next, change the Unconnected Height parameter to 10'-0" (3050 mm) (Figure 2.26).
- **6.** While still in the South Elevation view, select the embedded curtain wall. Click Edit Profile on the ribbon to enter sketch mode.

For the curtain wall to be embedded into another wall it must be within 6 inches of the wall. It also must be parallel with the host wall.



FIGURE 2.26 Curtain wall selected in wall

7. Select the top sketch line and press the Delete key to remove it. Then add a new sketch line, using the Start-End-Radius Arc draw tool. Click Finish Edit Mode to complete the sketch and update the curtain wall. Revit Architecture may warn you that some of the mullions in the original system can't be created. This is fine, because some of the mullions are outside the sketch area. Click Delete Element(s) to continue (Figure 2.27).



FIGURE 2.27 Curtain wall elevation view complete

The host wall will update around the embedded curtain wall to match the new profile defining the boundary condition.

Curtain Panels

Curtain panels are defined as part of the curtain wall type properties. Like the other curtain wall components, they can also be assigned on an instance basis or unpinned and changed to another infill type. A curtain panel can be a curtain panel family, a basic or stacked wall type, or another curtain wall.

Adding and Removing Grids and Mullions

So far in this chapter you have manually added curtain grids and curtain wall mullions, as well as defined the location for grid lines in the type properties. A typical curtain wall type in your project may have the majority of the grid spacing predefined by the type properties. However, you can still add or remove grid lines.

The objective of the following exercise is to manually add additional grid lines and curtain mullions to a curtain wall driven by type properties. In addition, you will remove some of the existing curtain grids to create a larger panel infill.

Then you will continue with a second exercise to modify some of the existing curtain panel instances in the curtain wall. As part of this exercise you will focus on adding a curtain panel door to the area where you removed grids and mullions.

Exercise 2.10: Add and Remove Curtain Grids and Mullions

To begin, open the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 2, and open the file c02-ex-2.10.start.rvt. This file will be used for this and the following exercise.

- The starting file should open to the default 3D view. The curtain wall type Storefront - Door contains type properties for grid distances and mullion types.
- 2. Move the cursor over one of the vertical red mullions (colored for exercise identification), and press the Tab key until the curtain grid is highlighted.
- On the ribbon notice that the Add/Remove Segments tool is now available. This tool appears only when curtain grids are selected. Click Add/Remove Segments and click the cursor over one of the

red mullions. It should remove the curtain grid as well as the curtain mullion since it is hosted on the grid.

4. The tool stays active so you can click the other vertical red curtain mullion to remove it. Repeat the steps to remove the remaining red horizontal curtain mullion, and you will end up with one panel, as highlighted in Figure 2.28.



FIGURE 2.28 Removed curtain wall grids and mullions

- 5. You can also add curtain grids and mullions in addition to those defined in the type properties. Select the Curtain Grid tool from the Build panel on the Architecture tab of the ribbon. Change the Placement option to One Segment.
- **6.** Add four vertical grid lines centered on the remaining lower curtain panels at 1'-8" on each side. Notice that the rectangular mullions are automatically added, since the curtain wall type properties have this type specified for the Interior Type.
- **7.** Select the four new vertical mullions (use the Ctrl key to add them to the same selection set) and use the Unpin tool. While they're still selected, change the curtain wall mullion to the 1" Square type from the Type Selector (Figure 2.29).
- 8. Next, select the perpendicular curtain mullions above and below the new 1" Square mullions (use the Ctrl key to add multiple items to the same selection set), and on the Mullion panel on the ribbon click Make Continuous (or click the Toggle Mullion Join symbol shown in Figure 2.30). This will toggle the mullion join at each location. The final model should look similar to Figure 2.30.



FIGURE 2.29 New grids and mullions



FIGURE 2.30 Finished mullions

Exercise 2.11: Customize Curtain Panels

To begin, open the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 2, and open the file c02-ex-2.11.start.rvt.

- 1. The starting file should open to the default 3D view. Select the lower eight curtain panels and click the Unpin tool. Change the curtain panel from System Panel Glazed to System Panel Solid.
- 2. Next, you want to add a door to the curtain wall in the largest panel. Select the large System Panel Glazed panel in the center and click Unpin. Change the panel to the Curtain Wall Dbl Glass panel from the Type Selector (Figure 2.31).



FIGURE 2.31 Curtain wall door condition

3. After adding the door, select the lower vertical curtain wall mullions on either side of the door (there are two mullions on each side) and toggle the mullion join to Make Continuous. This will extend the curtain mullions to the base of the curtain wall (first image in Figure 2.32).





- 4. Next, remove the rectangular curtain wall mullions directly under the Curtain Wall Dbl Glass panel. Select both pinned curtain wall mullions (in the same selection set) and use the Unpin tool. Once they're unpinned, you can press the Delete key to remove the curtain mullions (second image in Figure 2.32).
- 5. Notice that the curtain panel door adjusts to fill in the additional space after the mullions are deleted. If at any point you need to revert panel or mullion overrides, using the Pin tool will switch them back to the type defined in the curtain wall type properties.

Now You Know

Walls in Revit Architecture are flexible enough to support the initial conceptual design process all the way through the final iteration of a specific wall type. This flexibility is evident through the numerous techniques we have discussed to edit, manipulate, and build various wall configurations.

In this chapter, you learned about the different wall types and the relevant parameters. You created walls using a variety of different tools and methods. You further modified walls by hosting other objects such as doors, and you adjusted the profile and shape of the walls. In this chapter you also worked through a variety of exercises specific to curtain walls covering parameters, grids, mullions, and panels.

Floors, Roofs, and Ceilings

This chapter will walk you through the most common horizontal host objects that make up your building. Although the process of creating a floor, roof, or ceiling is somewhat different for each, the tools used to edit each initial design element are similar and have overlapping methodology.

In this chapter, you'll learn to:

- Create floors by sketching, editing, and picking
- Create sloped floors
- Create and modify a roof by footprint
- Create and modify a roof by extrusion
- Adjust the slope of a roof
- Create ceilings
- Create custom ceilings by sketching
- Add lights to a ceiling
- Slope and modify the ceiling type

Creating Floors



There are quite a few ways to create floors in the Autodesk[®] Revit[®] Architecture software. The main objective for this chapter is to understand what the various approaches to a single floor type will do and what kind of relationships they'll make. The objective of the following exercise is to first create floors by sketching the desired shape. Then, for the second part of the exercise you will use the Pick Wall tool to define the floor boundary.

Exercise 3.1: Create a Floor by Sketch and Pick Walls

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 3, and open the file c03-ex-3.1start.rvt.

- Open the Level 1 floor plan view. Select the Floor tool on the Build panel of the Architecture tab.
- **2.** Revit will automatically enter sketch mode, which will allow you to create a sketch to define the boundary of your floor.
- 3. Create a simple sketch for the floor, $15' \times 30''$ (4500 mm × 9000 mm). The dimensions are for reference only; even though this is a simple shape, what's more important is how you can manipulate the shape.
- 4. Confirm that the floor type is Generic 12" (Generic 300 mm) in the Type Selector. Finish the sketch, and open your default 3D view. Your floor should resemble the one shown in Figure 3.1.



FIGURE 3.1 The finished floor by sketching

5. Next, you will create a floor by picking walls. Open the Level 1 view and select the Floor tool on the Build panel of the Architecture tab to enter sketch mode. Select the Pick Walls tool from the Draw palette. Doing so allows you to select an individual wall or an entire chain of walls.

- 6. Move the cursor over one of the wall edges to the right and then press and release the Tab key. Your selection cycles from one wall to the series of walls. When all of the walls highlight, select them with one pick.
- 7. In the Properties palette set the Height Offset From Level parameter to 0" (0 mm). Click Finish Edit Mode to exit the sketch. Select and move some of the walls that were used to determine the floor sketch. Notice that the boundary of the floor automatically updates (Figure 3.2). This is incredibly powerful for a multistory building, where updating one floor at a time would be nearly impossible.



FIGURE 3.2 The finished floor by picking walls

Note that the edge of the new floor is constructed where you click your mouse when you pick the wall in reference to the interior or exterior of the wall. The floor goes to the outside of the wall; to do that, you have to pick the outside edge of the wall — otherwise, the floor aligns with the interior. The entire chain of sketch lines is created that corresponds to all the walls.



EXTEND INTO WALL (TO CORE)

When using the Pick Walls tool, there is a setting on the Options Bar called Extend into wall (to core). By default, when you pick a compound wall with multiple layers, the floor sketch will extend to the core boundary of the wall. If desired, you can specify an offset using a positive or negative value. If this option is unchecked, the floor sketch will use the outer interior or exterior face of the wall.

Exercise 3.2: Edit the Floor Boundary



The objective of the following exercise is to edit and modify an existing floor boundary. To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 3, and open the file c03-ex-3.2start.rvt.

- 1. Open the Level 1 floor plan view, select the floor, and click Edit Boundary from the Modify Floors contextual tab.
- **2.** Add additional sketch lines to generate the shape at the lower right in Figure 3.3. Don't forget to trim back any intersecting lines.



FIGURE 3.3 Modifying the floor sketch

3. Finish the sketch by clicking Finish Edit Mode. Select the floor, and notice that the options and dimension properties have already updated, as shown in Figure 3.4.



FIGURE 3.4 The modified floor

- 4. Create another floor of the same type and same initial dimensions, $15' \times 30'$ (4500 mm × 9000 mm), near the first floor (reference Figure 3.5 for the location). Leave some space between the two floors.
- **5.** Offset the floor 1'-0" (300 mm) above Level 1 by entering this value into Height Offset From Level in the Properties palette.
- 6. Finish the sketch to complete the floor (Figure 3.5).



FIGURE 3.5 New floor 1'-0" (300 mm) above Level 1

Not all floors are flat, and Revit Architecture has several tools to create sloped conditions. In the following exercise you will investigate both options by creating and modifying sloped floors using two tools: Slope Arrow and Shape Editing.

Exercise 3.3: Create Sloped Floors

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 3, and open the file c03-ex-3.3start.rvt.

 Begin by sketching another floor between the two previous floors, filling the gap between the two (Figure 3.6). Set Height Offset From Level to 0" (0 mm) prior to finishing edit mode.



FIGURE 3.6 New floor at Level 1

2. If you were to finish the sketch like this, the floor wouldn't connect the upper and lower sections. You need to add a slope arrow. Do so by selecting the Slope Arrow tool on the Draw panel. Sketch the arrow as shown in Figure 3.7. The first location that you pick is the tail of the arrow; the second location is the head.





- Select the slope arrow, and modify the parameters as shown in Figure 3.7 so they match the location of the upper and lower floors. Be sure to specify the Height Offset for the tail and head.
- **4.** Finish the sketch, and return to your default 3D view (Figure 3.8), which shows the finished condition. Now the sloped floor connects the lower and upper floors.



FIGURE 3.8 Completed sloped floor

You could create slightly sloped floors and depressions with slope arrows and separate floors, but this approach would probably be too complex because you'd have to create a lot of separate pieces of geometry. For these kinds of conditions, you have the Shape Editing tools.

- 5. Select the upper floor. Now you can see the Shape Editing tools in the Shape Editing panel on the Modify Floors tab.
- 6. Let's suppose that this entire floor is at the correct level, except for one small portion that needs to be slightly depressed in order to accommodate a loading area. Define the upper and lower boundaries of this depressed area by selecting the Add Split Line option on the Shape Editing panel. Add the lines as shown in Figure 3.9. Dimensions are shown for reference.



FIGURE 3.9 Adding split lines



7. Now that you've added the proper locations to break the slope, you need to modify the points at the ends of the lines to change the slope of the floor. Start by returning to your default 3D view. As you hover over the endpoint of the line, Revit Architecture highlights the shape handles. Press the Tab key to highlight a specific handle, and then select it (Figure 3.10).



FIGURE 3.10 Editing the shape handle

- 8. Adjust the elevation of the shape handle as shown in Figure 3.10. In this case, you're depressing the floor, so the value must be negative. But you could also increase the elevation in a small area by using a positive value.
- **9.** Do the same for the shape handle to the right. When you've finished, the depressed area resembles Figure 3.11.



FIGURE 3.11 The finished depression

For the occasional or irregular opening in a floor, it's easy to add an opening using the Opening tools. For openings that occur from level to level and are vertically repetitive (such as a shaft or an elevator core), you can use the Shaft tool. This tool allows you to create openings in numerous floors, roofs, and ceilings quickly and easily.

The objective of the following two exercises is to create openings in your floor objects. The first exercise will focus on the Opening By Face tool. The second exercise will focus on the Shaft Opening tool.

Exercise 3.4: Create an Opening with the Opening by Face Tool

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 3, and open the file c03-ex-3.4start.rvt.

- **1.** From the Architecture tab on the ribbon, select the Opening By Face tool on the Opening panel.
- 2. Select any edge of the sloped floor you created to initiate sketch mode.
- 3. Sketch an opening $10' \times 3'$ (3000 mm \times 1000 mm) in the center floor panel. There's no limit to the number of interior sketches you can create.
- **4.** Click Finish Edit Mode to complete the sketch. The result resembles Figure 3.12.



FIGURE 3.12 The finished opening



You can also edit previously created sketches by selecting the opening and clicking Edit Boundary from the ribbon. An opening of this type remains perpendicular to the slope of the floor, roof, or ceiling. On the other hand, a vertical opening remains perpendicular to the level on which it was created.

- Vertical
- **5.** Select the Vertical tool from the Opening panel, and sketch a new opening of the same size and dimensions above the first one. The result resembles Figure 3.13.



FIGURE 3.13 Completed openings of the same size and dimensions

If you have a number of openings that are predictably shaped (circular, rectilinear, and so on), *highly* repetitive, and scattered throughout your project, create a host- or face-based opening (with parameters for options) as a family component and load it for use in your project. The differences are subtle but very important. By creating a section through both openings, you can see the difference in an opening that remains perpendicular to the floor compared to one that remains perpendicular to the level (Figure 3.13).

Exercise 3.5: Create an Opening with the Shaft Opening Tool

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 3, and open the file c03-ex-3.5start.rvt.

This example file has 10 total levels, which are evenly spaced.

- Select all three floors on Level 1, and copy them to the clipboard. Now the geometry is ready to be pasted to each of the levels.
- **2.** The best way to do this is by using the Paste tool, which allows you to select all the levels to which you intend to paste the floors.
- **3.** Click the Paste drop-down from the Clipboard panel of the Modify | Floors tab, and then select Aligned To Selected Levels.
- **4.** You're given the option to select all the levels: Select Levels 2–10 (Figure 3.14). The resulting floors are shown in the same figure.



FIGURE 3.14 Pasted geometry

Paste

Select Levels

Paste from Clipboard Aligned to Selected Levels Aligned to Selected Views Aligned to Current View Aligned to Same Place Aligned to Picked Level

864 665
221 122
-
Shaft

67

Paste from Clipboard
Aligned to Selected Levels

- **5.** Return to the Level 1 view, and select the Shaft Opening tool from the Opening panel.
- 6. Create a new $20' \times 3'$ (6100 mm \times 1000 mm) rectangle perpendicular to the last two you drew.
- 7. Confirm that the Top Constraint is set to Level 10 so the shaft goes up to the top floor. Then set the Top Offset to a minimum of 1' (300 mm) to ensure it fully cuts the floor. A higher value can be specified as needed.
- **8.** Be certain to assign a Base Offset value of -1' (-300 mm), because the upper floor is slightly above the level (Figure 3.15).



FIGURE 3.15 Creating a multistory shaft

Figure 3.16 shows the resulting shaft in 3D. All the floors were cut automatically. Any ceilings, roofs, and additional floors created later that are between the same levels will be cut automatically as well.

Creating Roofs



FIGURE 3.16 The finished multistory shaft

Creating Roofs

There are two primary methods for creating roofs, which you will explore in this chapter: Roof by Footprint and Roof by Extrusion. You create a Roof by Footprint roof much like you do floors: from a sketch resulting from either drawn lines or picked walls. And as with floors, if you pick the exterior walls as a reference, then moving the walls will move the corresponding edges of the roof. Roofs can be created in elevation using the Roof by Extrusion tool, which we will cover in the second exercise.

The objective of the following exercise is to create a roof by picking the outline of existing walls.

Exercise 3.6: Create a Roof by Footprint

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 3, and open the file c03-ex-3.6start.rvt.

- 1. Open the Level 1 plan view. Select the Roof by Footprint command from the Roof flyout on the Architecture tab. At this point, Revit Architecture automatically asks you to select the level with which this roof is associated.
- **2.** Select Level 3. Don't worry; you can change the level at any time later.

Again, you don't have to pick all the walls individually or sketch all the roof boundary lines.

- **3.** Select the Pick Walls option on the Draw panel of the Modify | Create Roof Footprint tab. Uncheck the Defines slope setting on the Options Bar.
- **4.** Move the cursor over one of the exterior walls and press the Tab key until the entire chain is highlighted; then left-click. All the roof boundary lines will be created.
- Because this will be a sloped roof, you can make the slope perpendicular to the left edge by checking the Defines Slope box on the Options Bar or the Properties palette.
- Define the Slope property for this roof sketch line with a 1" / 12" (83 mm / 1000 mm) rise over run (Figure 3.17).

Note the icon with double arrows on the sketch lines for the roof: clicking it flips the boundary lines to the inside or outside of the wall face. Click this icon to move all the boundary lines to the inside of the wall's faces.





FIGURE 3.17 Roof sketch and slope properties

- 7. Finish the sketch, and look at the project in 3D. Although the roof begins at Level 3 and has the proper slope, it's immediately obvious that the walls don't extend up to the roof.
- **8.** To resolve this condition select all the walls (using the Tab key to select the entire chain), and set Top Constraint to Level 4 in the Properties palette. The results resemble Figure 3.18.



FIGURE 3.18 Adjusting the wall height

The objective of the following exercise is to create an extruded roof and join it to an existing roof.

Exercise 3.7: Create a Roof by Extrusion

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 3, and open the file c03-ex-3.7start.rvt.

1. Select the Roof by Extrusion command from the Roof flyout on the Architecture tab. The Work Plane dialog should prompt you to specify a new work plane. Choose the Pick a plane option and select the roof face highlighted in Figure 3.19.



FIGURE 3.19 Selecting the roof face

- 2. You're prompted to associate the roof to the appropriate level. This step is important for scheduling purposes; you can modify the value later. For now, select Level 3 because it's closest to the base of the extruded roof.
- **3.** Next, you'll create the sketch for the extruded roof. The sketch line isn't a closed loop: It's just a line (or series of connected lines) that defines the top of the extruded roof. For this example, you'll create an arc. Select any of the Arc tools from the Draw panel.
- **4.** Create the arc approximately as shown in Figure 3.20. When you've finished drawing the arc, set Extrusion End in the Properties palette to 20'-0" (6100 mm).





FIGURE 3.20 Creating the arc

- **5.** Finish the sketch. The roof springs from the arc you created, but it's not reaching back and connecting to the roof face. This issue is easy to resolve.
- **6.** Select the roof extrusion, and then select the Join/Unjoin Roof tool on the Geometry panel.
- **7.** Hover over the rear edge of the extruded roof, as shown in the left image of Figure 3.21.





8. Select the face of the previously created roof that you want to connect to the extruded roof. The extruded roof now extends back to meet the face of the other roof (Figure 3.22). If either roof is modified, Revit Architecture will do its best to maintain this connected relationship.



FIGURE 3.22 Joined roofs

You can determine the slope of a roof using slope arrows. Slope arrows let you specify a slope, and they also allow you to specify the levels of the arrow at both the head and tail.

The objective of the following exercise is to modify an existing roof condition using slope arrows to adjust the resulting slope.

Exercise 3.8: Create Slope Arrows

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 3, and open the file c03-ex-3.8start.rvt.

1. Select the roof, and click Edit Footprint on the ribbon to enter sketch mode.

2. The tail of the slope arrow must reside on the boundary of the sketch, but the head of the slope arrow may point in practically any direction. Select the Slope Arrow tool on the Draw panel, and add a slope arrow as shown in Figure 3.23. Note that the Height Offset at Head value is set to 6' (2000 mm).

3. Make sure you uncheck the Defines Slope option for the edges of the roof to see the full effect of using the slope arrow (Figure 3.23).

🛃 Slope Arrow



FIGURE 3.23 Sloping the roof

4. Finish the sketch. Notice that a single slope proceeds across the roof. A single slope in this direction would be nearly impossible to specify without slope arrows.

You can also create roof slopes using multiple slope arrows. This technique is incredibly helpful when you want to create sloped conditions where two perpendicular slopes must meet at exactly the same location. Again, this is something that's difficult to do without slope arrows.

- Select the roof and click Edit Footprint to reenter sketch mode. Delete the existing slope arrow.
- 6. Sketch two new slope arrows along the north–south and east–west roof boundary edges so that the heads of the arrows meet at the upper-left corner. The slope arrows should have the following properties:

Set Height Offset at Tail to 0" (0 mm).

Set Height Offset at Head to 6'-0" (2000 mm).

7. Make sure Height Offset is the same for both tails and both heads. Finish the sketch. The results resemble the roof in Figure 3.24.



FIGURE 3.24 Roof created from two slope arrows

The objective of the following exercise is to create multiple slopes that are perpendicular to the edges using the Defines Slope option.

Exercise 3.9: Create Multiple Roof Slopes

To begin, go to the book's web page at www.sybex.com/go/ revit2015essentials, download the files for Chapter 3, and open the file c03-ex-3.9start.rvt.

- 1. Select the roof and click Edit Footprint to reenter sketch mode for the roof. Delete both slope arrows.
- Select all the lines that represent the roof sketch. You can do this by holding down Ctrl and selecting the lines individually or by clicking one line and pressing Tab to select the rest of the lines.
- 3. With the lines selected, in the Options Bar enter 3' (1000 mm) for the overhang. The overhang direction will move positive in relation to the side of the wall picked (exterior or interior). Positive or negative dimensions can be entered if the sketch moves in the opposite direction. Also keep in mind that the Overhang option is available only for roof sketch lines created using the Pick Walls option.
- 4. Select the Defines Roof Slope option for all the boundary edges from the Properties palette. Also modify the Slope property for a slope of 9" / 12" (750 mm / 1000 mm). The roof should look like Figure 3.25.



FIGURE 3.25 Offsetting the roof sketch and defining slopes

5. Finish the sketch. Initially, the edges of the wall extend beyond the overhang of the roof. Select all the exterior walls (use the Tab key), and then select the Attach Top/Base option on the Modify | Walls tab. Click the roof to attach it, and the result resembles Figure 3.26.







6. The great thing about attaching walls is that if the roof's angle or slopes change, the walls will automatically react to the new condition. To test this, select the roof and click Edit Footprint to reenter sketch mode. Remove the Defines Slope option for one of the edges.

7. Finish the sketch, and the results resemble Figure 3.27. Because the walls were previously told to attach to the roof, a gable condition is created.



FIGURE 3.27 Removing a defined slope

- **8.** Reenter sketch mode, and enable Defines Slope for the same gable sketch line.
- **9.** Select the sketch line, and locate the option Plate Offset From Base in the Properties palette. Change the value to 6'-0" (1800 mm) and finish the sketch.

Notice that the roof edge is offset from the base and the slope starts at the offset dimension. This is another powerful approach to modify the roof shape.

Adding Ceilings

Ceilings in Revit Architecture are easy to place as well as modify. As you move the walls, the ceiling associated to those walls will stretch to fit the new conditions. There are two different tools to create ceilings in Revit Architecture:

Automatic Ceiling Tool The Ceiling tool is on the Build palette of the Architecture tab. When you select the tool, the default condition is Automatic Ceiling. This means that as you hover over a space, Revit Architecture will attempt to find the boundary of walls.

Sketch Ceiling Tool The Sketch Ceiling tool is useful for customized conditions, such as a ceiling soffit or bulkhead where it is necessary to draw the boundary, or simply for boundaries where the ceiling objects do not span the entire space.

The objective of the following exercise is to first create ceilings automatically. Then you will create a more custom, sketch-based ceiling.

Exercise 3.10: Add Automatic and Sketch Ceilings

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 3, and open the file c03-ex-3.10start.rvt.

1. Using the Automatic Ceiling option, add a ceiling toward the bottom of the image (Figure 3.28). As you hover over the space, Revit Architecture indicates the boundary.



FIGURE 3.28 Revit Architecture outlines the boundary.

- As you can see from the Properties dialog, Revit Architecture offers four default ceiling types: one basic type and three compound types. Select the 2' × 2' (600 mm × 600 mm) system.
- 3. When you click to place the first ceiling in the floor plan view, you get a warning. This can happen frequently: You've placed the ceiling, but you can't see it. As a rule, you shouldn't ignore warnings because you could place multiple ceilings in the same place. Open the view Ceiling Plans - Level 1, which has ceiling objects visible.

4. Select the Ceiling tool on the Architecture tab, and pick inside the rooms shown in Figure 3.29 to automatically place the ceilings. Notice that Revit Architecture centers the grid based on the space you've selected.



FIGURE 3.29 Resulting automatic placed ceilings

5. Next, you'll place ceilings in the upper-left corner of the ceiling plan for Level 1, but this time you'll share the ceiling between the two spaces. This practice is common in interior projects. The partitions extend only to the underside of the ceiling (rather than connect to the structure above). Select Sketch Ceiling on the Ceiling panel of the Modify | Place Ceiling tab. Add sketch lines as shown in the first image in Figure 3.30. The result is shown in the second image.



FIGURE 3.30 Sketching the ceiling
6. Create another ceiling using Sketch Ceiling in the upper-right area of the plan (Figure 3.31). Choose the 2' × 4' (600 mm × 1200 mm) system from the Type Selector before you finish the sketch of the ceiling.



FIGURE 3.31 A 2' \times 4' (600 mm \times 1200 mm) ceiling

7. Create a GWB on Mtl. Stud Ceiling for the area shown in Figure 3.32.



FIGURE 3.32 Creating a GWB On Mtl. Stud Ceiling

For a more detailed overview of materials, feel free to look ahead to Chapter 9, "Materials, Rendering, and Visualization."

By default, the GWB material doesn't have a surface pattern. Although this material would be too graphically busy for walls, it's fine for ceilings. So, let's create a new material for GWB associated to ceilings and give it a pattern.

- 8. Select the ceiling, and click Edit Type from the Properties palette. Click the Structure Edit button from the Type Properties dialog to open the Edit Assembly window.
- **9.** Locate the Finish layer, and then under the Material column, click in the cell for Gypsum Wall Board. Click the ellipsis (...) button that appears in the cell to open the Material Browser. Right-click and duplicate the existing material. Rename the new material Gypsum Ceiling Board.
- **10.** On the Material Graphics tab, locate Surface Pattern and associate the surface pattern called Sand to the material.
- **11.** Click OK until you close all the dialog boxes and return to the ceiling plan view.

The result is shown in Figure 3.33. You can now distinguish the ceiling from the open areas that have no ceiling.



FIGURE 3.33 Assigning materials to a ceiling

The objective of the following exercise is to create a bulkhead condition to separate two ceilings.

Exercise 3.11: Create a Bulkhead

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 3, and open the file c03-ex-3.11start.rvt.

 Place the walls that will act as the bulkhead, as shown in Figure 3.34. Be sure to set the Base Offset value in the Properties palette of the walls to 7'-9" (2400 mm) and the Unconnected Height value to 2'-3" (700 mm). This creates two walls above head height.



FIGURE 3.34 Creating a bulkhead

- The easiest method to edit a ceiling is to select a grid line and choose Edit Boundary from the Mode panel on the Modify | Ceilings tab. Modify the ceiling as shown in the first image in Figure 3.35.
- **3.** Sketch a new GWB ceiling that is 9'-0" (2700 mm). The second image in Figure 3.35 shows the final ceiling shape before you will click Finish Edit Mode.



FIGURE 3.35 Editing the boundary

If the ceiling type does not contain grid lines, you can hover over the edge of the ceiling and use the Tab key to cycle through options until the edge of the ceiling is highlighted.

- 4. Click Finish Edit Mode.
- **5.** To get a better idea of the finished configuration in 3D, go to a 3D view and orient a section box of the Level 1 plan view.
- **6.** Right-click the ViewCube, and from the Floor Plans flyout of the context menu, select Level 1.
- 7. Orbit the view or use the ViewCube to choose the desired angle.
- 8. Use the grip arrows to pull the boundaries of the section box to resemble Figure 3.36. You'll find that working this way is helpful because having both 2D and 3D views aids in communicating any design issues.



FIGURE 3.36 Final section box location in 3D view

The objective of the following exercise is to add light fixtures hosted to the ceiling. Then for the second part of the exercise you will rotate the ceiling grid.

Exercise 3.12: Add Lights and Rotate the Grid

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 3, and open the file c03-ex-3.12start.rvt.

- 1. On the Insert tab, select Load Family on the Load From Library panel.
- Browse and open the Lighting\Architectural\Internal folder, and double-click the family Ceiling Light - Linear Box.rfa (M_Ceiling Light - Linear Box.rfa).
- **3.** Click the Place a Component button, and the ceiling light family should be the default.
- 4. Select the $2' \times 4'$ (2 Lamp) 120V (0600 mm × 1200 mm) type from the Type Selector. You'll place lighting fixtures into the $2' \times 4'$ (0600 mm × 1200 mm) ceiling in the upper-right ceiling plan.
- 5. The insertion point for the light is the center of the light. Place the first light, and then use the Align tool to move it into the right spot.
- **6.** Use the Copy tool on the Modify panel to copy the first light based on the intersection of the ceiling grid. All the lights are shown in Figure 3.37.



FIGURE 3.37 Placing lights

7. To rotate the grid, select any grid line, and use the Rotate tool on the Modify panel to rotate it. In this case, specify a 10-degree angle. Notice that the lights rotate as well.

8. Click and drag the ceiling grid lines to better center the lights in the overall space. Again, the lights move with the grid. The Move, Align, and Rotate tools are all available to modify ceilings when a grid line is selected.

This technique is incredibly helpful for maintaining design coordination. The finished condition is shown on the right in Figure 3.38.



FIGURE 3.38 Rotated ceiling grid

The objective of the following exercise is to slope the ceiling by placing a slope arrow while editing the boundary of the ceiling. You will also change the ceiling type during this exercise.

Exercise 3.13: Slope the Ceiling

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 3, and open the file c03-ex-3.13start.rvt.

- 1. First, select the ceiling and using the Type Selector in the Properties palette change the ceiling type to GWB on Mtl. Stud. Notice that the ceiling updates to reflect the new ceiling type.
- 2. Select the edge of the ceiling, and choose Edit Boundary on the Mode panel on the Modify | Ceilings tab.
- **3.** Place a slope arrow as shown in the top image in Figure 3.39. Set the Height Offset values for the Tail and Head to 0'-0" and 3'-0" (1000 mm), respectively.



FIGURE 3.39 Adding a slope arrow to the ceiling

4. Finish the sketch. The result (bottom image in Figure 3.39) is shown in 3D using a section box. The lights should follow the revised ceiling slope.

Now You Know

Floors, roofs, and ceilings in Revit Architecture are very different object types that share a relatively common set of modification tools. You have the flexibility to create a set of objects and come back to them when additional information is known or the design intent changes. Revit makes it easy to swap types, edit the boundary, or revert to the original condition with a consistent set of modification tools.

In this chapter, you learned about creating floors and later modifying the floor to add openings, change the boundary, or add slope. You learned about the different methods to create roofs and later modifying the roof slope to create varying conditions. And lastly you learned about creating ceilings and then modifying the ceiling boundary, type, and hosting light fixtures.

Stairs, Ramps, and Railings

Autodesk® Revit® Architecture software contains powerful tools for creating stairs, railings, and ramps. These elements are created and controlled with separate tools, which we will discuss and utilize in this chapter. In addition, these separate elements can interact with each other to form more complex systems, which we will also cover during the exercises in this chapter.

In this chapter, you'll learn to:

- Create and modify railings
- Create stairs by component
- Create stairs by sketch
- Customize stair landings
- Create multistory stairs
- Create and customize ramps

Creating a Generic Railing

Stairs contain numerous parameters, but not all of the parameter controls are equally important during the design process. Design is often about the intent of what something is as well as where it is meant to go. Once the intent is resolved, it's necessary to go back and revise the specifics of how something will be carefully assembled or to add additional detail when known.

Because the tools for railings, stairs, and ramps are somewhat separate, you'll begin the exercises by first creating a simplified railing. This way, when you create a series of stair configurations, you'll have a new, default railing to apply to each of them.

In the following exercise you will create a railing and edit the various properties and components that make up the railing tool.

Exercise 4.1: Create a Generic Railing

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 4, and open the file c04-ex-4.1start.rvt.



 Open the default 3D view by selecting the small house icon on the Quick Access toolbar (QAT) . Select the Architecture tab, and choose the Railing flyout from the Circulation panel. Select the Sketch Path option to enter sketch mode.

Before you draw a railing, you'll create a new type.

- Select Edit Type from the Properties palette, and with the Type Handrail – Rectangular current, click Duplicate in the Type Properties dialog box. Name the new railing Handrail – Design, and click OK twice to exit all the dialog boxes.
- Draw a path line 30' (10000 mm) long. This line will define your railing path.
- Click Finish Edit Mode to exit the sketch, which will create the railing. This will be the default rail in the exercise file (Figure 4.1).



FIGURE 4.1 The default railing: Handrail – Design

Next, you will edit some of the newly created railing properties.

5. Select the railing, and choose Edit Type from the Properties palette to open the Type Properties dialog, as shown in Figure 4.2.

amily:	System Family: Railing	▼ (Load				
Type:	Handrail – Design	•	Duplicate				
Гуре Paran	neters	(Rename				
	Parameter	Value					
Construc	tion		\$				
Railing H	eight	3' 0"					
Rail Struc	ture (Non-Continuous)	Edit)				
Baluster F	Placement	Edit)				
Baluster (Offset	0' 0"					
Use Land	ing Height Adjustment	No					
Landing I	Height Adjustment	0' 0"					
Angled Jo	pins	Add Vertical/Horizontal Segments					
Tangent .	Joins	Extend Rails to Meet					
Rail Conr	nections	Trim					
Top Rail			*				
Height		3' 0"					
Туре		Rectangular - 2" x 2"					
Handrail	1		*				
Lateral O	ffset						
Height							
Position		None					
Туре		None					
Handrail	2		*				
Lateral O	ffset						
Height							
Position		None					
Туре		None					
Identity	Data		*				
Type Ima	ge						
Keynote							

FIGURE 4.2 Railing type properties

6. Click Edit for the Rail Structure (Non-Continuous) parameter. In the resulting dialog box click Insert. This will add another rail to your railing type. In the Name field enter Low Rail. Set the Height to 1'-0" (300 mm) and change the Profile to Rectangular Handrail : 2" × 2" (Rectangular - 50 × 50 mm) (Figure 4.3). Close the dialog box by clicking OK to return to the Type Properties dialog.

1	Name Low Rail	Height 1' 0"	Offset 0' 0" Rec	Profile tangular Handrail : 2" x 2"	Material
	Insert	Duplicate	Delete		Jp Down

FIGURE 4.3 Edit Rails dialog box

- Locate the Top Rail group. Set the Height to 3'-6" (1060 mm). Leave the Type as Rectangular - 2" × 2" (Rectangular - 50 × 50 mm). This parameter controls the top rail used in the railing. Next, you will modify the balusters.
- 8. In the Type Properties dialog box, click the Edit button for the Baluster Placement parameter.
- **9.** In the resulting dialog box, find the Main Pattern panel, select the second line (Regular Baluster), and set its Baluster Family value to Baluster Square : 1" (Baluster Square : 25 mm). Set the Dist. From Previous parameter to 5" (125 mm).
- In the Posts area, set the Baluster Family value for the Start Post, Corner Post, and End Post parameters to None (as shown in Figure 4.4).
- **11.** Click OK to close the Edit Baluster Placement dialog box, and click OK again to close the Type Properties dialog box.

,.	Railing			Type: Ha	andrail – Desig	gn			
lain p	pattern								
	Name	Baluster Family	Base	Base	Тор	Top offset	Dist. from	Offset	Delete
1	Pattern start	N/A	N/A	N/A	N/A	N/A	N/A	N/A	Duplicate
2	Regular balust	er Baluster - Square : 1"	Host	0' 0"	Top Rail E	0'0"	0' 5"	0' 0"	Un
3	Pattern end	N/A	N/A	N/A	N/A	N/A	0' 0"	N/A	
								······	Down
Break	k Pattern at:	Each Segment End	-	A	ngle: 0.000	•		Pattern Le	ength: 0' 5"
lustif	fy: Beginn	ing 🔹 Exc	ess Length Fill	None		•		Sp	acing: 0' 0"
					_				
U	se Baluster Per Ti	read On Stairs Balu	sters Per Tread	: 2			Baluster F	amily: Baluster	- Square : 3/4"
osts									
				Pres		Ten			
	Name	Baluster Family	Base	offset	Тор	offset	Space	Offset	
1	Start Post	None	Host	0' 0"	Top Rail	0' 0" 0'	0 3/8" 0'	0" E	
2	Corner Post	None	Host	0'0"	Top Rail	0' 0" 0'	0" 0'	0"	
3	End Post	None	Host	0' 0"	Top Rail	0' 0" -0	0 3/8" 0'	0"	
				1		I	1		
	er Posts At:	Each Segment End	-	A	ngle: 0.000	•			
Jorn				_					
Jorn					OK		ancel	Apply	Help
	Preview								
.orn:	Preview								
<< i	Preview								
<< F	Preview								
<< F	Preview								
<	Preview			11177					
	Preview				11111				
<< F	Preview								
<< F	Preview								111111
<< F	Preview								

FIGURE 4.4 Baluster settings and completed railing

Creating Stair Configurations

Revit Architecture has two stair tools: Stair by Component and Stair by Sketch. The tools are located on the Architecture tab on the Circulation panel. The more recent stair tool is Stair by Component. As the name suggests, this tool will help you create stairs that can be broken down into their individual components for easier manipulation. This is the default stair tool on the ribbon in Revit Architecture. The original stair tool, Stair by Sketch, is located in the Stair flyout. The majority of our exercises in this chapter will focus on the more recent Stair by Component tool.



In the following exercise you will create a straight run stair by component to familiarize yourself with the options and components of the stair.

SWAPPING OUT FAMILY TYPES IS EASY

Note that stairs, railings, and ramps, like other system families, can be changed dynamically using the Type Selector. This process works the same for Revit Architecture component families. Suppose your design changed or you haven't yet determined the exact stair type you will be using. At any point during the design process you can swap out one family type for another, and your stair as well as all your views will update accordingly. This is useful early on when you might know the location and dimensions of a stair but not necessarily the final specifications.

Exercise 4.2: Create a Stair by Component

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 4, and open the file c04-ex-4.2start.rvt.

📎 Run	🖬 🗐 🤊 🚰 M							
Canding	C	Ŧ						
🔗 Support		Ŧ						
Components								

1. From the Level 1 plan view, start the Stair By Component tool. The tool should default to using the Run component. Click any point to the left, and then move your cursor to the right.

As you do, Revit Architecture tells you how many risers remain to complete a stair that starts on Level 1 and goes through Level 2 (Figure 4.5).



FIGURE 4.5 Risers remaining to finish stair

2. Click when you see the message 9 Risers Created, 9 Risers Remaining. This will complete the first run of the stair. Since you have not created enough risers to reach Level 2, you need to start another run. Move the cursor over to the right until the temporary dimension displays 5'-0" (1525 mm). Click again to start the next run, and click to the right when you see 9 Risers Created, 0 Risers Remaining (Figure 4.6).



FIGURE 4.6 Component stair run with landing

3. Select the Railings tool in the Tools panel of the ribbon. Specify the Handrail - Rectangular type (Figure 4.7), and click OK to close the dialog.

Revit Architecture will use this default handrail whenever you create this stair, until you specify another type. The railing can be edited, modified, or deleted at any time from the stair.

Railing	×
Default	-
Default Glass Panel - Bottom Fill Guardrail - Pipe Guardrail - Rectangular Handrail - Pipe	
Handrail - Rectangular None	

FIGURE 4.7 Specifying the railing type

4. Click Finish Edit Mode to complete the component stair.

A landing is automatically created between the two runs because the Automatic Landing setting on the Options Bar setting was checked. If needed, you could uncheck this parameter to avoid automatically creating a landing.

 \triangleleft



The resulting stair is shown in the default 3D view in Figure 4.8.

FIGURE 4.8 The resulting stair with railing

Now you'll create a second component stair to adjust some additional parameters.

- Start the Stair By Component tool again, but before you pick a point to start the first run, choose the Location Line option from the Options Bar.
- **6.** Set the Location Line to Exterior Support: Left. This will align the outside edge of the stair with your pick points, making it easier to snap to existing geometry.
- **7.** For the start of the first run, click the endpoint of reference plane 1 where it meets the wall. Move to the right 6'-5" (955 mm), and click again to complete this run.

Each stair run component can have its own width using the Actual Run Width parameter on the Options Bar or Properties palette. You can enter this value either before or after placement. Start the second stair run using the same Location Line setting, and click at the endpoint of reference plane 2 where it meets the wall. Move down anywhere past 9'-0" (2750 mm), and click the last point to complete the second run (Figure 4.9).



FIGURE 4.9 Second stair along wall

One of the nice features of component stairs is the ability to dynamically change the stair using shape handles.

9. Select the landing that was automatically created and notice the shape handles. Drag the landing edge shape handle down any distance to enlarge the landing. Notice that the stair run automatically moves down to reflect the new landing size.



10. Click Finish Edit Mode to complete the component stair (Figure 4.10).

FIGURE 4.10 Completed second stair with landing

In the following exercise you will create a straight run stair by sketch to familiarize yourself with the workflow and properties of this stair type.

Exercise 4.3: Create a Stair by Sketch

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 4, and open the file c04-ex-4.3start.rvt.

For sketch-based stairs the default green lines represent the stair boundary and the default black lines represent risers. From the Level 1 plan view, start the Stair by Sketch tool from the Stair flyout. Click any two points from left to right (far enough apart for Revit to display 18 Risers Created). This will create an 18-riser straight stair between Level 1 and Level 2. 2. Select the top boundary line and drag the end grip back two risers (Figure 4.11).

0									 0	
									1-6	
18 RIS	ERS CR	FATED	0 REM							



- **3.** Draw a new boundary line for these two risers to create a custom condition using the Start-End-Radius Arc Draw shape.
- **4.** Using the Trim/Extend Single Element tool, extend the riser line to meet the new boundary line you added in step 3 (Figure 4.12).

							\bigcap	\square

FIGURE 4.12 New boundary and riser sketch lines

- **5.** Select the lower boundary line and notice that the temporary dimension appears showing 1'-6".
- **6.** Click the temporary dimension text and enter 2'-6" to move the lower boundary line down.

Notice that the riser sketch lines did not automatically move down with the boundary line.

7. Use the Trim/Extend Multiple Elements tool to extend the riser lines to meet the new boundary line location (Figure 4.13).





🗄 Run	/ 🗖 🕑 🚱 🎯	
📙 Boundary		Ŧ
B Riser		Ŧ

- 8. Click Edit Type to open the stair Type Properties.
- **9.** Under Risers, uncheck the End With Riser parameter and click OK to close the dialog.

This will remove the riser that is generated at the end of the stair.

- **10.** Click Finish Edit Mode to complete the stair. Ignore any warnings received about actual number of risers created.
- **11.** Select the two railings that were automatically created, and swap the type in the Type Selector to Glass Panel Bottom Fill. The completed stair is shown in Figure 4.14.



FIGURE 4.14 Completed sketch-based stair

In the following exercise you will customize an existing Stair by Component landing to reflect changes to the design.

Exercise 4.4: Customize and Create a Component Stair Landing

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 4, and open the file c04-ex-4.4start.rvt.

- 1. From the Level 1 plan view, select the existing stair and click Edit Stairs to enter edit mode.
- Click to select the existing landing object. You want to customize the landing shape so you will need to convert the landing to a sketch.
- **3.** Click Convert To Sketch-Based on the Tools panel. Close the dialog confirming that this conversion is irreversible.
- **4.** Notice there is a new option called Edit Sketch on the same Tools panel.
- **5.** Click Edit Sketch to edit the landing boundary. Select and delete the existing landing boundary line (the longest line closest to the wall).
- **6.** Set the type of lines to Boundary in the Draw panel. Set the draw mode to Pick Lines. Set the Options Bar Offset parameter to 2" (50 mm) so you can compensate for your support distance along the wall.
- **7.** Pick the faces of the interior wall lines to create the new landing sketch lines. Use the Trim/Extend To Corner tool to clean up the new boundary lines.
- For the last segment, at the start of the second stair run you will need to create a small sketch line with the same 2" (50 mm) offset. This offset will accommodate the stringers that will be created around the landing.

The final sketch is shown in Figure 4.15.



FIGURE 4.15 Revised landing sketch





9. Click Finish Edit Mode.

Notice that you are still editing the component stair; you simply finished editing the landing sketch.

While still editing the stair, add a second landing.

- **10.** On the Components panel click Landing. Choose the Create Sketch option.
- Confirm that the Properties palette Relative Height parameter is set to 15'-0" (4570 mm). With the Draw option set to Boundary, sketch a second landing at the end of the second run, as shown in Figure 4.16.



FIGURE 4.16 Revised landing sketch

 Click Finish Edit Mode to complete the new landing sketch. Click Finish Edit Mode again to complete the stair. The finished stair is shown in Figure 4.17.



FIGURE 4.17 Complete stair with new landings

In the following exercise you will update an existing stair to span multiple project levels using the Multistory Top Level instance property.

Exercise 4.5: Create a Multistory Stair

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 4, and open the file c04-ex-4.5start.rvt.

The example file has five project levels, and you want to repeat the existing stair between them since they are consistent level heights.

- **1.** Activate the 3D view saved in the exercise file.
- Select the stair and from the Properties palette locate the Multistory Top Level instance parameter. Currently it is set to None.
- 3. Change the value to Level 5 and notice what happens (Figure 4.18).



FIGURE 4.18 Multistory stair up to Level 5

Revit will repeat the stair up to the level you specified, including any railings that are currently attached to the stair.

- **4.** Select one of the railings and notice that all four instances of the railing are selected.
- **5.** Change the railing type to Guardrail Pipe and notice that all four railings update to reflect the type change.

- 6. Select the stair and click Edit Stairs to enter edit mode.
- **7.** Open the Level 1 floor plan view. Select the landing, and using the shape handles adjust it to be 2-6" (760 mm) on each side that meets the run (Figure 4.19).



FIGURE 4.19 Landing adjustment

- 8. Click Finish Edit Mode to return to the project.
- **9.** Open the 3D view again, and notice that every stair landing has also been updated.
- **10.** Select the stair and change the Multistory Top Level parameter to Level 4.

The stair will update to reflect the new top-level assignment (Figure 4.20).



FIGURE 4.20 Complete multistory stair

In the following exercise you will create a new railing and set the host to use an existing stair.

Exercise 4.6: Host a Railing to a Stair

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 4, and open the file c04-ex-4.6start.rvt.

- 1. From the Level 1 plan view, click the Railing flyout and choose Sketch Path.
- **2.** Using the Pick Lines draw tool, select the inner line for each of the three stringers (see the sketch in Figure 4.21).
- **3.** Then, from the Properties palette, set the Tread/Stringer Offset instance parameter to 2" (50 mm).

This will allow you to pick a specific reference but still assign a set value to move the railing to (Figure 4.21).



FIGURE 4.21 First sketch and Tread/Stringer Offset

- 4. Click Finish Edit Mode to complete the railing.
- Create another railing using the same steps but for the opposite outside three stringers. Instead of using 2" (50 mm) for the Tread/ Stringer Offset use -2" (-50 mm) (Figure 4.22).



FIGURE 4.22 Second sketch and Tread/Stringer Offset

- 6. Click Finish Edit Mode to complete the sketch.
- **7.** Open the default 3D view and note that the railings are not yet hosted to the stair but are instead hosted to Level 1.



- 8. Select one of the railings and click Pick New Host on the Tools panel.
- **9.** Click the stair; this will change the railing host from Level 1 to instead attach and follow the geometry of the stair.
- **10.** Click Pick New Host for the second railing to complete the new railing host (Figure 4.23).



FIGURE 4.23 Railing before and after new host

In the following exercise you will customize an existing railing top rail to allow for a custom termination condition.

Exercise 4.7: Edit Railing Top Rail and Slope

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 4, and open the file c04-ex-4.7start.rvt.

- **1.** Open the example file to the 3D view.
- 2. Move the cursor over the top rectangular rail and press the Tab key once. The top rail should be highlighted.
- 3. Click to select the top rail (Figure 4.24).
- 4. Once it's selected, click Edit Rail on the Continuous Rail panel.



- 5. Click Edit Path and choose the Line Draw shape.
- **6.** Draw a custom path for the top rail starting at the endpoint of the existing path, similar to Figure 4.25.





Reset

Rail

Edit

Rail





FIGURE 4.25 Updated top rail path

7. Click Finish Edit Mode twice to finish editing the top rail and return to the project.

Next, you'll correct the railing condition at the top of the landing to match the flat slope.



- 8. Open the Level 1 floor plan view.
- 9. Select the railing and click Edit Path to return to sketch mode.
- **10.** Use the Modify panel's Split Element tool is to split the railing path at the edge of the landing (Figure 4.26).



FIGURE 4.26 Split railing path sketch

- **11.** Press the Esc key twice, and select the split railing sketch path over the landing.
- **12.** On the Options Bar change the Slope to Flat.
- **13.** Click Finish Edit Mode to exit the railing sketch.
- **14.** Open the default 3D view, and notice that the railing condition is now flat over the landing.

You can use the Slope controls for railing conditions when you need to override how the default slope will be calculated. The completed railing is shown in Figure 4.27.



FIGURE 4.27 Completed railing

Designing Ramps

Now that you're familiar with designing a number of stair configurations, ramps should come easily since they are based on the Stair by Sketch tool. It's the same basic process of sketching a desired shape and then completing the sketch, with one major difference: far more frequent landings and a shallower slope.

You access the Ramp tool on the Circulation panel on the Architecture tab. Keep in mind that ramps have different constraints than stairs based on slope and length. Understand that the maximum length of a ramp in one section is 30'-0'' (9000 mm) with a 1:12 slope (8 percent). These parameters can be changed, but by default they correlate to common code requirements.

In the following exercise you will create a straight run ramp between Level 1 and Level 2. Because you're traversing Level 1 to Level 2 (and they are 10' [3000 mm] apart), this will require a ramp length of 120' (36,600 mm) at a maximum 1:12 slope, not including landings.

Exercise 4.8: Create a Ramp and Edit the Boundary

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 4, and open the file c04-ex-4.8start.rvt.

Railing	Ramp	Stair					
Circulation							

- 1. Open the example file to the Level 1 view.
- **2.** Select the Architecture tab, and choose the Ramp tool from the Circulation panel.
- **3.** In the Properties palette set the Ramp Type to Ramp 1; the Base Level is Level 1 and the Top Level is Level 2.
- 4. Using the Run Draw tool, add straight runs similar to Figure 4.28.
- **5.** To get all the landings and ramps into the right location, select the boundary and riser lines after creation and move them using the Move tool on the Modify panel.

The ramp should look similar to the image in Figure 4.28.



FIGURE 4.28 Straight runs of ramps

- **6.** Click Railing on the Tools panel, and specify the Handrail Rectangular railing. Click OK to close the dialog.
- **7.** Click Finish Edit Mode to complete the sketch. Open the default 3D view; you should see a similar ramp to Figure 4.29.



FIGURE 4.29 Ramp runs with associated railings

<

The Multistory Top Level parameter is also available for ramps, similar to stairs.

- 8. Return to the Level 1 view, select the ramp, and click Edit Sketch.
- **9.** Delete the three green boundary lines that represent the outside edges of the landings, as shown in Figure 4.30.





- **10.** Select the Boundary tool on the Draw palette, and then choose the Tangent End Arc tool on the Draw panel.
- **11.** Create the new boundaries shown in Figure 4.31 by picking one boundary edge and then the other.



FIGURE 4.31 Modified ramp with curved boundary

- **12.** Click Edit Type to open the ramp type properties.
- Under Other, set Shape to Solid. Click OK to close the dialog. This will create a solid slab ramp instead of maintaining a consistent thickness value.
- Click Finish Edit Mode to complete the sketch. Revit Architecture has already modified the railings to accommodate the new boundary (Figure 4.32).



FIGURE 4.32 Completed ramp in 3D

The end exercise file has both ramp shapes, included as two separate ramps, for reference.

Now You Know

Stairs, railings, and ramps are separate object types in Revit Architecture that share some underlying parameters. In addition, objects such as railings do not require a stair to exist; they can be created independently or created using a stair as a host for additional complexity.

In this chapter, you learned about the properties that make up railings and balusters. You created railings and hosted them to stairs. You also customized the top railing and overrode the slope for some railing segments. For stairs you created railings using both the Stair by Component and Stair by Sketch tools. You customized the boundaries and landings and set some to span multiple stories. And finally you created ramps, edited the boundary, and adjusted various properties.
CHAPTER 5

Adding Families

What is a family in the Autodesk[®] Revit[®] Architecture software? In the simplest terms, a family can be thought of as repeatable geometry for use in a project. You will now take a step back from the modeling exercises in the previous chapters to develop a better understanding of the basic building blocks that make up a Revit Architecture project.

In this chapter, you'll learn to:

- View and modify the family category
- Work with and load system families
- Work with and load component families
- Work with hosted families
- Work with face-based families
- Create an in-place family
- Find and load family content into your project

Understanding the Model Hierarchy

In Chapters 2 ("Walls and Curtain Walls"), 3 ("Floors, Roofs, and Ceilings"), and 4 ("Stairs, Ramps, and Railings"), you learned about some basic model elements such as walls, floors, and roofs. These types of objects are known as *system families* in the Revit Architecture software. To better explain what a family is and how it relates to your workflow, let's explore how data is organized in the Revit Architecture platform.

One of the unique characteristics of the program is its inherent model hierarchy. In a simple description, this hierarchy can be expressed as (from broad to specific) *project, category, family, type,* and *instance*.

Project This is the overall container for the model geometry and information.

Category This is the structure of the content that will be placed in the project. This is how the Revit Architecture software ensures consistency and manages the behavior of elements such as how a door interacts with a wall. You also use categories to manage graphic display and visibility of elements.

Family Similar to blocks in AutoCAD, families are the basis of geometry you create in a Revit Architecture project.

Type This is a repeatable variation within a family. For example, each type in a six-panel door family could have size or material variations without duplicating geometry. For example, the door panel extrusion could adjust size based on the door type width.

Instance This is an actual element you place in the project model. For example, door 607 may be the 25th instance you've placed in the project of the 36×80 Wood (0915 × 2032 mm) type of the 6-panel door family.

In the following exercise, you will modify some display properties throughout the entire project using Object Styles. Then you will change the settings of one view using the Visibility/Graphic Overrides dialog. Lastly you will change the settings of one instance using Override Graphics in View By Element.

Exercise 5.1: Creating a Model Hierarchy

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 5, and open the file c05-ex-5.1start.rvt.

1. Open the Level 1 view and click the Manage tab; then choose Object Styles from the Settings panel.

The categories you see in the Object Styles dialog box (Figure 5.1) are those that are established by the software and cannot be changed. You can use these categories to modify the default display characteristics of element categories in your project.

- 2. On the Model Objects tab, find the Walls category, and click in the Line Color field to open the Color dialog box. Set the line color to Red, and click OK.
- **3.** Click OK to close the Object Styles dialog box. All walls in every project view are now displayed with red lines instead of black.

Category	Line	Weight	Line Color	Line Pattern	Material
Dhumbing Fistures	Projection	Cut	Dia ala	Called	
Pailing Pixtures	1	1	DidCK	Solid	
- Pamps	1	2	Diack	Solid	
Boads	1	5	Black	Solid	
Boofs	2	5	Black	Solid	Default Roof
Shaft Openings	1	5	Black	Solid	Default Nooi
Site	1	2	Black	Solid	
Snecialty Equipment	1	-	Black	Solid	
Stairs	1	3	Black	Solid	
Structural Beam Systems	1	-	BGB 000-127-000	Dach 1/8"	
Structural Columns	1	4	Black	Solid	
Structural Foundations	2	5	Black	Solid	
Structural Framing	1	4	Black	Solid	
Topography	1	6	Black	Solid	Earth
	2	5	Red	Solid	Default Wall
Windows	2	2	Black	Solid	
				OK Cancel	Apply
]			
u					

FIGURE 5.1 Object Styles Walls Line Color

4. Press VG on your keyboard (this is the keyboard shortcut for the Visibility/Graphic Overrides command, located on the View tab of the ribbon).

You can also access this dialog from the Properties palette for each view using the Visibility/Graphic Overrides Edit button.

Use Reveal Hidden Elements to view the doors and set Visible again if needed.

- **5.** In the Visibility/Graphic Overrides dialog box on the Model Categories tab, find the Doors category, and place a check in the Halftone column.
- 6. While still in the Visibility/Graphic Overrides dialog, Model Categories tab, uncheck Visibility for the Furniture category. This will turn off the display of all furniture category elements in this view only.
- **7.** Click OK to close the dialog box. Doors are now displayed in the Level 1 floor plan as halftone, and furniture is no longer visible.
- Select several of the Level 1 view doors, right-click, and select Override Graphics In View ➤ By Element.
- 9. Uncheck the box for Visible, and click OK to close the dialog box. The door instances are no longer visible in the Level 1 floor plan, yet other door instances are still visible in this and other views (Figure 5.2).



FIGURE 5.2 Completed project, view, and element overrides

In the preceding exercise, you made changes to objects on three levels. Object Styles is a project-wide change for the selected category. The Visibility/Graphic Overrides dialog is a view-specific override for the selected category. Override Graphics In View >> By Element is a view-specific override for an instance of the selected category.

Revit Architecture uses three types of families: *system*, *component*, and *in-place* families. System and in-place families exist only in the project file,

whereas component families are created and stored as RFA files outside the project environment. In-place families should be used only for unique, one-of-a-kind objects for which you require nearby geometry as a reference to design.

We will start by exploring system families because they reside directly in the project. Then we will further explore component and in-place families later in this chapter.

Working with System Families

The first type of family you need to understand is the *system* family. The best way to characterize system families is to consider them the *hosts* for other types of geometry. 3D elements such as walls, floors, ceilings, and roofs allow other elements such as doors and windows to exist on them or in them. Other 3D elements, such as stairs and railings, are also system families.

System families are unique in that they create geometry by using a set of rules applied to guiding geometry. If you think about a simple wall, for example, its thickness is defined by a series of structural layers (framing, sheathing, and finishes), its length is expressed by a linear path, and its height is established by some set of horizontal boundaries (either a datum or another element like a roof). As another example, a floor's thickness is defined by a series of structural layers, its vertical location is determined by a datum (level), and its boundary extents are defined by a series of lines. In the project, these rules are the instance and type properties.

Some system families are 2D. These types of system families include text, dimensions, and filled regions. Although the 2D variety of families are still considered system families, we think they are better referred to as *project settings* to avoid confusing them with the more common understanding of families.

Loading System Families

Because system families exist only in the project environment, there are only a few ways you can load them between projects. The first method is to use the Transfer Project Standards command. This method transfers all the families and types in a selected category between projects.

A more informal method of transferring system families is to use the Windows Clipboard functions and copy/paste content between projects. This method is useful if you want to load a limited number of specific families into your active project.

Although it isn't an active loading method, the final technique to manage system families is to include them in your project templates. After you establish a level of comfort with working in Revit Architecture, you will begin to customize your own templates, thus minimizing the amount of loading required throughout the design and production process.

In the following exercise, you will explore copying wall families between two projects using the Transfer Project Standards tool.

Exercise 5.2: Transfer Project Standards

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 5, and open the file c05-ex-5.2start.rvt.

- 1. In the exercise project file there are some custom wall types you want to copy into a new project (TypeA.1, TypeB.3, and TypeC.4). Keep the c05-ex-5.2start.rvt project file open.
- 2. Create a new project file using the default template.
- **3.** In the new project, go to the Manage tab's Settings panel, and click Transfer Project Standards.
- **4.** In the Select Items To Copy dialog box, click the Check None button, and then select Wall Types from the list, as shown in Figure 5.3.
- 5. Confirm that Copy from lists c05-ex-5.2start.rvt.

This is especially important to verify if you have more than two project files open to ensure you copy from the expected file (Figure 5.3).



FIGURE 5.3 Selecting Wall Types to transfer between projects

6. Click OK. Choose New Only, if prompted, to close the dialog box and complete the transfer. New Only will only copy walls that are not

currently in the new project (and avoid overwriting types with the same name).

- **7.** Start the Wall tool from the Architecture tab in the new project, and locate the transferred wall types TypeA.1, TypeB.3, and TypeC.4.
- 8. Create some wall segments with these new types.

In the following exercise, you will place wall families through various methods.

Exercise 5.3: Place System Families

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 5, and open the file c05-ex-5.3start.rvt.

- Open the Level 1 view. In the Project Browser, toward the bottom of the list, click the + to expand the Families heading.
- 2. Expand the Walls category, and you see three values (Basic Wall, Curtain Wall, and Stacked Wall). These are the three families of walls contained within a project.
- **3.** Expand the Basic Wall list, and you see all the wall types in the Basic Wall family.
- **4.** Using the cursor, left-click+drag the wall type named TypeB.3 from the Project Browser into the Level 1 view.

Notice how it automatically starts the Wall tool using the type you dragged in.

- **5.** Draw some wall segments in the view and press the Esc key to exit the command.
- **6.** Next, in the Project Browser right-click the same wall type and select Create Instance. Notice that this does the same thing.
- **7.** Select one of the walls you added in the Level 1 view and right-click Create Similar (Figure 5.4). This is another way to create a new instance of the same wall type you selected in the view.

There is another method to create a wall. Since you just used the Wall tool in step 7, you can access it by right-clicking Recent Commands. You can do this with nothing selected in the view to start creating another wall. And it should use the last wall type you placed in the view.



FIGURE 5.4 Using Create Similar to place walls

Working with Component Families

The second type of family you need to understand is the *component* family. These types of families live outside the project environment in RFA files and consist of everything from doors and windows to furniture and equipment. You might think of component families as anything that would be manufactured away from the job site and delivered for installation. This is in contrast to the aforementioned system families, which can be thought of as anything that is assembled at the job site.

Similar to system families, there are also 2D view–specific versions of component families including tags, symbols, detail components, and profiles:

Tags These component families are scale-dependent annotations that contain what are known as *labels* (the equivalent of block attributes in Autodesk[®] AutoCAD[®] software). Labels are special text elements that report information from model elements. Remember, the information (number, name, keynote, and so on) is stored in the component—not in the tag. Tags are attached to system or component families in the project.

Symbols (Generic Annotations) These component families are scale-dependent annotations that can also contain labels (similar to a tag). The main differentiator between symbols and tags is that symbols can be placed freely and do not need a host in the project. Symbols can also be loaded and used in other families such as tags.

Detail Components Used in drafting views or to embellish model views, detail components can be used as a more intelligent alternative to simple drafting lines. These components can be tagged or keynoted as if they were model components. You will find much more information on detailing in Chapter 11, "Details and Annotations."

Profiles Profile families consist of a simple outline of a shape. They are used only in conjunction with other system families such as railings, wall sweeps, and curtain-wall mullions. After you create a profile family, it must be loaded into a project and then associated with a respective system family. A profile's function must be defined in the family parameters (Figure 5.5).



FIGURE 5.5 Defining a profile's function

In the following exercise you will examine the family's category. Then you will explore various methods to load families into your project.

Exercise 5.4: Create a New Family and Load It into a Project

A family's initial category is determined by the template used when the family is created. For this exercise you will be creating a new family using one of the default templates, so no exercise file is required.

> From the Application button, click New ➤ Family. The New Family – Select Template File dialog box opens (Figure 5.6).

The list of family templates is consistent with the list of categories you saw in the project environment (Object Styles, Visibility/Graphic Overrides). Each of the available family templates is preconfigured for a specific category in terms of properties, basic materials, and reference planes.



FIGURE 5.6 Selecting a family template

2. Select Plumbing Fixture.rft (Metric Plumbing Fixture.rft), and click Open.

The Revit Architecture user interface changes slightly to what is known as the Family Editor (keep in mind that you are still within the main Revit Architecture application).

3. Go to the Create tab's Properties panel, and click the Family Category and Parameters button.

The Family Category and Parameters dialog box opens (Figure 5.7); it shows the category to which the family is assigned (Plumbing Fixtures).

4. Click OK to close the dialog.

Next, you want to practice saving this family and loading it into a project (let's pretend for now that you added geometry in the Plumbing Fixtures family.

- From the Application button, click Save As ➤ Family. Call the family
 Plumbing Test (notice that the file extension is now .rfa).
 When the save completes, you'll load this family into a new project.
- Load into Project Family Editor
- 6. Create a new project with the default template. Then navigate back to the Plumbing Test family. From any tab in the ribbon click Load Into Project.

If you have more than one project file open, Revit will prompt you for which one to load. If you have one project open, Revit will switch

You can change the category of a family in the Family Category and Parameters dialog before loading it into a project; however, frequent manipulation is not recommended because graphics and parameters vary greatly across family categories. you to the project and immediately start placing the family you just loaded. Notice how Place Component is now active and the Plumbing Test family is current.

ann, catagor,		
Filter list: Architecture	•	
Electrical Fixtures		*
Entourage		
Furniture		
Furniture Systems		
Generic Models		
Lighting Fixtures		E
Mechanical Equipmer	ot	
Parking		
Planting		
Plumbing Fixtures		
		-
1		
Family Parameters		
Parameter	Value	
Work Plane-Based		Ξ
Always vertical	V	
Cut with Voids When Lo		
n . T	Normal	
Part Type	Use Diameter	-
Part Type Round Connector Dime	105c Diameter	

FIGURE 5.7 Viewing the family category and parameters

- Press the Esc key to cancel placing the family. Another method to load families is to use the Load Family tool located on the Insert tab's Load From Library panel.
- **8.** Click the Load Family tool to open the Load Family dialog box, which should open to the family library location.
- **9.** Open the Doors folder. Notice that you can select multiple families to load at the same time by holding down the Shift or Ctrl key.
- 10. Select several families and click Open (Figure 5.8).

Employing Hosted Families

For 3D component families, one key distinction you should understand is whether a family is *hosted*. How do you know whether a family is hosted or unhosted? A simple way to find out is to observe the cursor when a component command is activated and you attempt to place a family. For a hosted family, the Another method to load families is by dragging and dropping them from any folder on your computer into the Revit Architecture window. This works much the same way as in steps 8–10.



cursor will change 🚫 to indicate that you cannot place the family unless you are clicking over a suitable host.

Look in:	🕕 Doors		-	🖕 🖳 🗙 🖳 Yiews
4	Name	Date modified	Туре	Preview
	📰 Bifold-2 Panel.rfa	2/1/2013 3:53 PM	Revit Famil	
History	🔜 Bifold-4 Panel.rfa	2/1/2013 3:53 PM	Revit Famil	
	🔜 Curtain Wall Dbl Glass.rfa	2/1/2013 3:53 PM	Revit Famil	
	🔜 Curtain Wall Sgl Glass.rfa	2/1/2013 3:53 PM	Revit Famil ≘	
ocuments	🔜 Curtain Wall-Store Front-Dbl.rfa	2/1/2013 3:53 PM	Revit Famil	
-	🔜 Double-Flush.rfa	2/1/2013 3:53 PM	Revit Famil	
Let 1	🔜 Double-Flush-Dbl Acting.rfa	2/1/2013 3:53 PM	Revit Famil	
Computer	🔜 Double-Glass 1.rfa	2/1/2013 3:53 PM	Revit Famil	
	🔜 Double-Glass 2.rfa	2/1/2013 3:53 PM	Revit Famil	
	📅 Double-Panel 1.rfa	2/1/2013 3:53 PM	Revit Famil	
Mahwark	🖬 Double-Panel 2.rfa	2/1/2013 3:53 PM	Revit Famil	
Network	🔜 Double-Uneven.rfa	2/1/2013 3:53 PM	Revit Famil	
	🔜 Overhead-Sectional.rfa	2/1/2013 3:53 PM	Revit Famil	
1 - Al-	🔜 Sidelights 1.rfa	2/1/2013 3:53 PM	Revit Famil	
-avorites	🔜 Single-Cold Room.rfa	2/1/2013 3:53 PM	Revit Famil 🔻	
	< [F	
	File name: "Double-Panel 2.rfa" "Double-Flu	sh.rfa" "Double-Glass 1.rfa" "D	ouble-Panel 1. 🔻	
	Files of type: All Supported Files (*.rfa, *.adsl	k)	-	

FIGURE 5.8 Selecting multiple files when loading families

The main limitation to a hosted element is that it cannot exist without its host. Certain component families, such as doors and windows, must be hosted because their behavior dictates that they cut their host geometry when placed. For example, you can see this when creating a new door or window family. Notice when opening the family that there is also a system family wall, which serves as the host. Other components, such as furniture, plumbing, and light fixtures, may not need to be modeled as hosted components. These types of objects are placed in a model and almost always maintain a reference to the level on which they were placed.

A slightly different version of a hosted family is known as a *face-based family*. These types of families can be placed on virtually any surface or work plane, but they don't suffer the same limitations as hosted families. Face-based families can exist without a host element even after a host is deleted. When the family is initially created, the family template used will determine the category of the family and whether it is hosted, not hosted, or face-based.

In the following exercise you will work with hosted and unhosted families to explore the default behaviors. In the second exercise you will place and modify face-based families, which are another type of hosted family.

Exercise 5.5: Work with Hosted Families

To begin, go to the book's web page at www.sybex.com/go/ revit2015essentials, download the files for Chapter 5, and open the file c05-ex-5.5start.rvt. The example file should open to the Level 1 view.

- On the Architecture tab, select the Place A Component tool, and then click Load Family on the ribbon. Navigate to the location of the downloaded exercise family files, and load the ex-5.5hosted.rfa file.
- 2. In the room at the upper right in the layout, place five instances of the ex-5.5hosted.rfa family on the horizontal partition wall (Figure 5.9). Space the first and last fixtures roughly 3'-0" off the wall ends, and set the other three equally spaced. Notice that you can place these components only on a wall.



FIGURE 5.9 Placing hosted components and deleting the wall

- **3.** Click the Modify button on the ribbon or press the Esc key to exit the command, and then move the host partition wall up and down. Observe how the components move with the wall.
- **4.** Delete the partition wall where you placed the components in step 2. The hosted plumbing fixtures are automatically deleted when the wall segment is deleted (indicated in Figure 5.9). Use the Undo command to restore the wall and hosted fixtures.
- 5. Next, you will use the unhosted version of the family. Start the Place A Component command again, and click the Load Family button. Navigate to the c05-ex-5.5unhosted.rfa file, and load it into your project.

Use the spacebar to rotate components while you're placing them, if needed.

6. Place five instances of the c05-ex-5.5unhosted.rfa family along the opposite side of the same partition wall, as shown in Figure 5.10. You can use the Align tool after placement to easily align them to the wall and the opposite side elements.



FIGURE 5.10 Placing unhosted components in a model

- Select the five c05-ex-5.5unhosted.rfa families, and go to the Options Bar and select the Moves With Nearby Elements setting.
- **8.** Move the host partition wall up and down, and observe that the fixtures display the same behavior as the hosted versions.
- **9.** Delete the partition wall (as indicated in Figure 5.10). The unhosted fixtures remain (but the hosted fixtures are deleted again).

You can easily move selected components from one level to another by changing the Level parameter in the Properties palette (Figure 5.11).

Exercise 5.6: Place Face-Based Families

To begin, go to the book's web page at www.sybex.com/go/ revit2015essentials, download the files for Chapter 5, and open the file c05-ex-5.6start.rvt.

1. The example project should open to the default 3D view, and you see the extents of the sample project with multiple roofs.

The c05-ex-6.Facebased.rfa generic model family is already loaded in your c05-ex-5.6start.rvt project. There is one instance placed on the roof (Figure 5.12). If needed it can be located from the Project Browser under Families > Generic Models > c05-ex-6 .Facebased. This family was originally created with the family template Generic Model face based.rft.

roperties		x
c05-ex-5.5un	hosted	•
Plumbing Fixtures (2))e
Constraints		\$
Level	Level 1	•
Host	Floor : Generic - 12" - Fi	ï
Offset	0' 0"	
Moves With Nearby El	V	
Mechanical		\$
System Classification		
System Type		
System Name		
System Abbreviation		
Identity Data		\$
Comments		
Mark		
Phasing		\$
Phase Created	New Construction	
Phase Demolished	None	
Properties help	Apply	

FIGURE 5.11 Adjusting an object's Level property

2. On the Architecture tab in the ribbon, select the Place A Component tool.

The default family should be c05-ex-6. Facebased.



FIGURE 5.12 Face-based family on the roof



- **3.** Before placing a family instance, take note of the ribbon options for Placement.
- **4.** Place on Face and Place on Work Plane are available since this is a face-based family (the default should be Place on Face).
- 5. With the placement method set to Place on Work Plane, add several instances of the family to the roof and walls. Notice as you move the cursor over an object that the face will pre-highlight, indicating what the face-based family will be hosted to.
- 6. Now select one of the families you added to a wall. In the Properties palette take note of the Host parameter, which is grayed out. This indicates the object the face-based family is attached to. It is an easy reference to know what the family will move with.
- 7. Now delete one of the project walls the c05-ex-6. Facebased family is hosted to.

Take note of two things. First, the face-based family is not deleted with the host. And second, the Host parameter has updated to <not associated> to indicate the family is no longer associated with a host (Figure 5.13).



FIGURE 5.13 Face-based family after host deletion

Working with In-Place Component Families

In-Place component families are a special type of component family unique to the current project. They are created in the project environment vs. the Family Editor, so project geometry can be used as a reference. They do not exist outside of the current project. The command is located on the Architecture tab's Component drop-down; it's called Model In-Place.

The major difference between in-place component families and component families is in regard to multiple instances. When component families have multiple instances in the project, updating the family geometry will update all instances. In-Place component families do not support multiple instances of the same family. For this reason, they should be used only for unique geometry since a copy of an in-place component has no relationship to the original (and will not update with changes to the original instance).

In the following exercise you will modify an existing in-place family.

Exercise 5.7: Modify an In-Place Family

To begin, go to the book's web page at www.sybex.com/go/ revit2015essentials, download the files for Chapter 5, and open the file c05-ex-5.7start.rvt.

- **1.** Open the project to the default 3D view.
- **2.** Select the countertop extrusion, and choose Edit In-Place on the ribbon to edit the Casework family (Figure 5.14).



FIGURE 5.14 Edit Casework in-place family

Component	Column			
Place a Component				
Model In-Place				

Unlike the Family Editor environment, take note that you are editing the family in the context of the project. This can be a very useful technique for custom project families where existing conditions or geometry is required to create the family.

- **3.** Select the counter extrusion and click Edit Extrusion on the ribbon. You want to make a slight change to the shape of the countertop to remove the curved edge.
- 4. Select the curved sketch line and press the Delete key.
- **5.** Add a new sketch line creating a 90-degree corner instead, making sure to close the sketch loop.
- **6.** When the sketch is complete and closed, click the Finish Edit Mode button.

Notice that you are still editing the family. This is useful if you needed to create additional extrusions or further modify the family.

7. To return to the project and finish editing the in-place family, click Finish Model on the In-Place Editor ribbon panel (Figure 5.15).



FIGURE 5.15 Complete in-place family

Finding Content

Now that we have reviewed the fundamentals of Revit Architecture families, we'll discuss one of the most important issues you may face as you start designing: the discovery of suitable content. The best place to begin is with the content installed with Revit Architecture. These default families are created with relatively simple geometry and should be sufficient as a basis for the most common building types. If you installed Revit Architecture with the default settings, you will be able to access the default library whenever you use the Insert tab \succ Load Family command.

Autodesk has created an online resource called Autodesk Seek to provide content for its design software (http://seek.autodesk.com). You can search for families on Autodesk Seek directly from Revit Architecture. Let's explore this option:

- 1. Go to the Insert tab's Autodesk Seek panel.
- 2. In the search bar, type chairs, and press the Enter key.
- 3. Your default web browser opens to the Autodesk Seek website.

The results displayed match the search criteria of *chairs* and are filtered to show only content that offers Revit Architecture families (Figure 5.16).



FIGURE 5.16 Content search results in Autodesk Seek

You will note on Autodesk Seek that you can choose from generic or manufacturers' content. The generic content is similar to that found in the installed library. Other content should be used with a level of care. Although an exhaustive review of such criteria is outside the scope of this book, here are some aspects you should understand about component families:

Avoid Imported Geometry Component families should not be created by simply opening an RFA file and importing 3D geometry from other modeling software. Content with imported geometry may also adversely affect functions such as rendering. For example, a light-fixture family using an imported CAD model might not have the correct material transparency to allow a light source to render properly.

Watch for Over-Modeling Families should contain only the geometry necessary to document the component. That said, this level of modeling will be slightly different depending on whether you want to create a photorealistic rendering or a construction document. Excessive modeling such as fasteners, switches, knobs, dials, and so on should be avoided.

Use Appropriate Repetition A Revit Architecture family should have a moderate level of repetition built into it. The repetition should not be too complex (all possible variations in one family) or too simple (a separate family for each variation). Reasonable content will offer a family for each set of common geometry (for example, one model line of a light fixture) with types for subtle variations (the various lamping and size options of that light fixture model).

Now You Know

Families in Revit make up the majority of your project geometry, and we have just scratched the surface in terms of this potential. In this chapter, you've learned about the three categories of families: system, component, and in-place families. You have exercised model hierarchy for Object Styles, view visibility, and element overrides. And you have utilized different categories and options for component families. We will expand on this family knowledge in the next chapter.

Modifying Families

Now that you have added a number of families to your project and the design has progressed, you'll often find it necessary to modify the families. Sometimes swapping out a generic family component for one that is more specific is the best solution. In other cases, it's simply a matter of opening the component family that you started with and tweaking the geometry to better fit your design. Either solution is viable—which you choose depends on the result that is better for your design process.

In this chapter, you'll learn to:

- Modify family categories
- Edit component families
- Edit profile families
- Place and modify detail components
- Edit a title block family
- Edit other hosted component families
- Explore various family tips and best practices

Modifying 3D Families

As you learned in Chapter 5, "Adding Families," finding and placing content is pretty straightforward, but learning to modify it will take a bit more time. One of the first things you want to consider when loading a family into your project is the level of detail the family displays at different orientations and scales. It's not likely that every part of a component family needs to display at all scales. It's more likely that too much detail will be confusing (particularly at smaller scales). Just a decade or so ago, when we used pencils, knowing when to stop drawing detail was pretty easy. But high-resolution computer displays that give you the ability to zoom in and out, as well as modern printing technologies, have allowed us to create far more detail than is necessary or meaningful. So, how do you display just the right level of detail in the Autodesk[®] Revit[®] Architecture software? In this chapter, we'll explore some fundamental techniques you can use to modify families to meet your needs.

In the following exercise you will work with different zoom levels to optimize the view for how information will be displayed. For the second part of the exercise you will change the view detail level and note visibility changes.

Exercise 6.1: View Scale and Detail Level

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 6, and open the file c06-ex-6.1start.rvt.

1. The exercise file should open to the South elevation view. Zoom to the desk by right-clicking in the view and selecting Zoom To Fit. This will show you everything in your view; however, it doesn't give you a sense of what will be legibly printed (Figure 6.1).





- 2. The best method to confirm what will be graphically legible when you print is to click the down arrow on the Navigation bar (on the right side of the view) and select the Zoom Sheet Size option. Doing so will take the scale of the view into account when zooming in (or out). The difference is shown in Figure 6.2.
- 3. Open the Desk elevation view and change the scale in the View Control Bar to 1/2" = 1'-0" (1:20), and then click the Zoom Sheet Size button under the Navigation bar again. You may need to pan the view slightly depending on where it zoomed.





FIGURE 6.2 Zoom Sheet Size

You will see a more visible difference in what is displayed on the screen relative to the scale of the view. Notice in both the previous figures that the hardware on the desk is completely visible in both views.

4. Next, change the scale to $1'' = 40' \cdot 0''$ [1:50], $1'' = 20' \cdot 0''$ [1:20], and lastly $1'' = 10' \cdot 0''$ [1:10]. You can see the change in the desk's appearance at different scales (Figure 6.3).



FIGURE 6.3 Elevation at different scales

As you can see, all the geometry of the desk—drawers and hardware—is visible at all view scales. But it doesn't have to be this way. A good rule of thumb is that if two lines are overlapping to the point that they'll print like a single line, they probably don't need to be seen.

Detail Level

5. To adjust the settings for displaying information at different scales, navigate to the Manage tab under Additional Settings ➤ Detail Level, as shown in Figure 6.4. Click OK to close the dialog when complete.

View scale-to-detail level correspondence							
Use this table to control the detail level used for new views by scale.							
Coarse	Medium	Fine					
$ \begin{split} 1^* &= 400^{-}0^* \\ 1^* &= 300^{-}0^* \\ 1^* &= 100^{-}0^* \\ 1^* &= 100^{-}0^* \\ 1^* &= 60^{-}0^* \\ 1^* &= 60^{-}0^* \\ 1^* &= 60^{-}0^* \\ 1^* &= 40^{-}0^* \\ 1^* &= 40^{-}0^* \\ 1^* &= 40^{-}0^* \\ 1^* &= 20^{-}0^* \\ 1^* &= 20^{-}0^* \\ 1^* &= 20^{-}0^* \\ 1^* &= 20^{-}0^* \\ 1^* &= 20^{-}0^* \\ 1^* &= 20^{-}0^* \\ 1^* &= 20^{-}0^* \\ 1^* &= 20^{-}0^* \\ 1^* &= 1^{-}0^* \\ 1^* &= 1^{-}0^* \\ 1^* &= 1^{-}0^* \\ 1^* &= 1^{-}0^* \\ 1^* &= 1^{-}0^* \\ 1^* &= 1^{-}0^* \end{split} $	>>> 3/8* = 1'-0* 1/2* = 1'-0* 3/4* = 1'-0* 1* = 1'-0* 1* = 1'-0*	>> 11/2" = 1'-0" 3" = 1'-0" 6" = 1'-0" 6" = 1'-0" 12" = 1'-0" 12" = 1'-0" 12" = 1'-0"					
	OK Cancel	Default					

FIGURE 6.4 View Scale-To-Detail Level Correspondence settings

DETAIL LEVEL

In the Detail Level settings, you can choose which view scales use one of three detail levels: Coarse, Medium, or Fine. Based on the scale of the view when a view is first created, some elements will automatically display or hide. But to take advantage of this power, you must make sure the content in your project has the appropriate view scale-to-detail level correspondence. You should also know that the Detail Level and View Scale parameters are separate properties of project views. Thus, if you change the scale of a view, the detail level does not automatically change. The settings shown in Figure 6.4 are automatically applied only when a view is first created.

Let's look at another example of how the detail level controls the visibility of families:

- **6.** Open the elevation view named Cabinet. This view displays a cabinet family with the other objects hidden in the view.
- **7.** The detail level of the view is currently set to Coarse. Change the detail level from Coarse to Medium and notice what happens. You now see the cabinet panels and swing lines in the view (Figure 6.5).



FIGURE 6.5 Coarse and Medium detail levels

8. Change the detail level from Medium to Fine and note what happens again. You now see the cabinet hardware that was not visible in Coarse or Medium detail (Figure 6.6).



FIGURE 6.6 Medium and Fine detail levels

So what controls which elements display in a family at a specific detail level? In the following exercise you will edit a family and assign geometry visibility to specific detail levels, reproducing the same family from scratch.

Exercise 6.2: Assign Visibility to Detail Levels

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 6, and open the file c06-ex-6.2start.rvt.



- From the Level 1 view select the cabinet family, and choose Edit Family from the Mode panel of the ribbon (or right-click and choose Edit Family from the context menu).
- 2. From the 3D view select the hardware (cabinet face handles) on the front of the cabinet. Click the Visibility Settings button on the Modify tab of the ribbon to open the Family Element Visibility Settings dialog box (Figure 6.7).







FIGURE 6.7 Editing levels of detail for hardware

This dialog box allows you to determine the visibility for both the orientation and level of detail for the hardware. Currently the hardware shows up at all levels of detail (Coarse, Medium, and Fine).

3. Change the settings so that it shows up only at a Fine level of detail by unchecking Coarse and Medium (Figure 6.8).

Family Element Visibili	ity Settings		x
View Specific Display			
Display in 3D view	s and:		
Plan/RCP			
Front/Back			
Left/Right			
When cut in Pla	an/RCP (if category per	rmits)	
Detail Levels			
Coarse	Medium	V Fine	
ОК	Cancel	Default	Help

FIGURE 6.8 Set Detail Levels to Fine only

- **4.** Select both cabinet face panel extrusions (there are two separate extrusions that make up the front of the cabinet: the border and the recessed panel). Change the visibility settings so they show up at the Medium *and* Fine levels of detail but not Coarse.
- **5.** Next, you want to do the same for the model lines since they also display in 3D views. An easy way to select only the model lines is to use the Filter tool. Select everything in the 3D view and click Filter from the Selection ribbon panel.
- **6.** Click Check None, and then check Lines (Casework). Click OK to return to the model with only the lines selected (Figure 6.9).
- 7. Click the Visibility Settings button on the Modify tab of the ribbon and uncheck Coarse. Click OK to return to the model. Next, you want to select just the lines around the hardware extrusions. From the same 3D view window, select around the hardware and use the Filter tool again to select just Lines (Casework). Open the Family Element Visibility Settings dialog again and also uncheck Medium so only Fine is checked (Figure 6.10).
- 8. Open the Front Elevation view. Select the dashed elevation swing lines (eight of them) and click Visibility Settings from the ribbon. Uncheck Coarse so you also do not see these lines in the project when the cabinet doors are not visible.

Filter	Save
T IIICEI	Edit
Se	lection



FIGURE 6.9 Using Filter for selection



FIGURE 6.10 Window selection and filter

- **9.** On the Modify tab of the ribbon, click the Load Into Project button to reload the cabinet family into the project. Click Overwrite The Existing Version when prompted.
- **10.** Back in the project the last step is to open the Cabinet elevation view where you can see the front of the cabinet. Change the detail level to Coarse. The cabinet lines, panels, and hardware should not be visible. Change the detail level to Medium, and you should see panels plus the dashed lines. Change the detail level to Fine, and you should also see the hardware (Figure 6.11).



FIGURE 6.11 Cabinet appearances for detail levels

Family Categories

Family components schedule according to their category, which is determined when you start to model a new family component. When you create a new family component, you must first select the appropriate template. It is important to differentiate between the category of the family and the template that the family was created with. While the family category can be changed later, the type of host cannot be changed afterward. For example, several generic model family templates are available when creating a new family, such as the following examples:

- Generic Model ceiling based.rft
- Generic Model face based.rft
- Generic Model floor based.rft
- Generic Model roof based.rft
- Generic Model wall based.rft

If you start a new family with Generic Model floor based.rft, you can always change the category from Generic Model to Furniture. However, it is not possible to change the host from floor to wall-hosted. The Host family parameter is fixed according to the starting template.

In the following exercise you will change the category of an existing family and load it back into the project.

Exercise 6.3: Edit the Family Category

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 6, and open the file c06-ex-6.3start.rvt.

1. From the 3D view select and right-click the face-based box, and choose Edit Family from the context menu.

When the Family Editor opens, notice the "platform" the box is sitting on. This is the context for the "face" of the face-based family (Figure 6.12). Face-based and hosted families already have geometric context (along with critical parameters and reference planes) in their templates so you can model in context and test parametric behavior.

When this component was initially created, it needed to be facebased. So, the default face-based template was used, Generic Model face based.rft. Since the family category has never been modified, it is still configured using the original Generic Models category. Now let's assume the design has progressed and the component needs to schedule as Specialty Equipment.



Keep in mind that changing to or from the Mass category is not allowed.



2. Go to the Create tab's Properties panel, and click Family Category and Parameters.

- **3.** When the Family Category and Parameters dialog box appears, the current category is selected. Select Specialty Equipment from the list (Figure 6.13), and click OK.
- **4.** Click Load into Project from the Modify tab on the ribbon to reload the family into the project environment.
- Select the option to override the existing version. The family doesn't appear to have changed, but it now schedules according to its new category.
- **6.** To confirm the updated category move your cursor over the family, and the tooltip should display the updated family category.

In the following exercise you will update the origin of a family for both plan and elevation. Then you will load the updated family back into the project.

In a CAD environment, this step would be just like reloading a block—you're simply updating the element with the new information.



Alternatively you can select the family and take note of the Properties palette—it will display the family category under the Type Selector.

Family Category and Pa	arameters 🔀			
Family <u>C</u> ategory				
Filter list: Architecture	•			
Planting				
Plumbing Fixtures	<u>^</u>			
- Profiles				
Split Profile				
Supports				
Terminations				
Site				
Specialty Equipment	<u>11</u>			
Structural Columns				
Structural Framing				
Windows	-			
Family <u>P</u> arameters				
Parameter	Value			
Cut with Voids When L				
Part Type	Normal			
Shared				
OmniClass Number				
OmniClass Title				
_				
	OK Cancel			
	h.			

FIGURE 6.13 Changing the family category

Exercise 6.4: Update a Family Insertion Point

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 6, and open the file c06-ex-6.4start.rvt.







- **1.** Open the Level 1 plan view. Go to the Architecture tab's Component flyout, and click Place a Component.
- 2. From the Modify | Place Component contextual tab, click the Load Family button; under the Furniture folder, Seating subfolder, choose the Chair-Executive.rfa (M_Chair-Executive.rfa) family. Place it as shown in the left image in Figure 6.14, making sure the chair is centered under the desk's opening.



FIGURE 6.14 Loading and placing the chair in the project

3. Select the desk. In the Type Selector, choose the $72''\times 36''$ (1830 \times 915 mm) type.

The changes in the desk dimensions are applied from the upperright corner; therefore, the chair is no longer centered and will have to be moved. If there were many chairs and desks in this situation (such as in an office layout), this task would be very tedious! Let's change the insertion point of the desk to avoid this situation in future design iterations.

4. Select the desk, and click Edit Family in the ribbon to open the desk in the Family Editor. Open the Ground floor, floor plan view.

The insertion point of a family is determined by any two reference planes that have the Defines Origin property. In the next step, you will change the reference planes with this parameter.

5. For each of the two reference planes (highlighted in Figure 6.15) select the plane and select the check box for the Defines Origin parameter in the Properties palette.

You may need to press the Tab key several times while the cursor is over the horizontal reference plane because of its close proximity to other geometry.

		Properties		×	
		R		-	
		Reference Planes (1)	👻 🚰 Edit Typ	be	
	1	Construction		*	P
	1	Wall Closure			1
	1	Identity Data		*	1
		Name			1
		Extents		*	1
		Scope Box	None		1
		Other		*	I
		Is Reference	Weak Reference		Reference Planes : Reference Plane
		Defines Origin			
	1				1
					1
\sim					
	Reference Planes : Reference Plane : Front				
					1
					1
					1
					1
					1

FIGURE 6.15 Editing the origin of a family

6. Click Load Into Project from the ribbon to reload the family into the project, and select Overwrite The Existing Version from the Family Already Exists warning dialog that will automatically display in your view. The family initially moves to align the old insertion point with the new insertion point, effectively relocating the desk. Select the desk, and move it back relative to the chair. Afterward, if you change the type it will use the new origin and resize at the current location (Figure 6.16).



FIGURE 6.16 Different-sized desks

The Defines Origin parameter can also be set in elevation for specific types of families, such as wall-based families. For example, this may be useful for wall cabinets where specifying an exact elevation for the top of cabinets is required.

- **7.** Select the Upper Cabinet family above the desk family, and click Edit Family in the ribbon to open the cabinets in the Family Editor.
- **8.** Open the Placement Side elevation view, and select the reference plane at the top of the cabinets. Select the check box for the Defines Origin parameter in the Properties palette as you did for the reference planes earlier (Figure 6.17). Note that the reference plane elevation is 6'-0" (2000 mm) above the floor line.



FIGURE 6.17 Reference Planes Defines Origin parameter

- **9.** Click Load Into Project from the ribbon to reload the family into the project, and select Overwrite The Existing Version as you did earlier. Notice that as with the desk, the Upper Cabinet family updates to reflect the new origin.
- **10.** From the Level 1 floor plan view, place a new instance of the overhead cabinet family on any of the walls.

Notice that the default elevation when placing an instance in the floor plan view matches the 6'-0'' (2000 mm) elevation of the reference plane. If you select the family, there is an Elevation instance parameter in the Properties palette, which should be set to 6'-0'' (2000 mm) (Figure 6.18).

Only one horizontal reference plane can be checked in an elevation view for the Defines Origin parameter.


FIGURE 6.18 Elevation parameter available in project

Changing this value will move the cabinet family in elevation relative to the reference plane you set in the Placement Side elevation view. In this example, you can enter a precise value for the top of the cabinets (Figure 6.18).

In the following exercise you will make various changes to a generic host window that is part of the default library. A hosted family has a required relationship to a specific host category, such as Floors, Walls, Roofs, or Ceilings. Without the host, the hosted family can't be placed.

Exercise 6.5: Modify Hosted Components

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 6, and open the file c06-ex-6.5start.rvt.

 From the Project Browser under Families, locate and expand the Windows category. Right-click Fixed (M_Fixed), and select Edit from the context menu to open the family in the Family Editor (Figure 6.19).



FIGURE 6.19 Window plan and 3D view in the Family Editor

- **2.** You want to keep the existing type, so begin by renaming the family via Save As.
- **3.** Press VV on the keyboard to access Visibility/Graphic Overrides (the left image in Figure 6.20). Make sure the Walls category is checked as shown and click OK. The 3D view now resembles the image on the right in Figure 6.20. Use Zoom To Fit to adjust your view.

Visibility/Graphic Overrides for 3D View: (3D) Model Categories Annotation Categories Imported Categories Show model categories in this view	
Visibility	
Rev Walls	
Common Edges	
Hidden Lines	
☐ ✓ Windows	Ϋ́
Frame/Mullion	
🗹 Glass	
- Hidden Lines	
- 🗹 Opening	
All None Invert Expand All Categories that are not overridden are drawn according to Object Style settings. Qbject Styles	

FIGURE 6.20 Visibility/Graphic Overrides for the view

4. Activate the Exterior elevation view from the Project Browser window by double-clicking the Exterior elevation view (Figure 6.21).



FIGURE 6.21 Reference planes and dimension parameters

Reference planes (displayed as green dashed lines) serve as guides that allow the geometry to flex. As you can see, the window geometry has not been directly assigned to dimension parameters. Instead, the parameters are associated to the reference planes. The window geometry is then associated to the planes. This is the preferred method for constructing family geometry.

- **5.** Go to the Create tab's Datum panel, and click the Reference Plane tool. Draw a horizontal plane around the midpoint of the window.
- 6. Go to the Modify | Place Reference Plane tab's Measure panel, and click the Aligned Dimension tool. Create a continuous dimension between the two outermost horizontal reference planes and the new plane you created in step 4. Click the temporary EQ icon that is active when you select the dimension just created to establish an equality constraint (Figure 6.22).

No matter how the window height changes, the new reference plane will remain centered.



FIGURE 6.22 Adding a new reference plane and keeping it equally spaced

MODIFYING CONTENT IN A FAMILY

Making changes to a hosted component is an important part of modifying existing content. This window family is full of dimension parameters that control different types. You do not need to create new geometry from scratch; you can modify what is already in the family. This approach may seem like cheating, but this is usually how content is modified. In addition to this process being efficient, the geometry that you modify will likely continue to "remember" existing relationships to reference planes and other parameters.

- **7.** Select the Frame/Mullion Extrusion, and click Edit Extrusion from the ribbon (Figure 6.23).
- 8. Sketch new internal lines, as shown in Figure 6.24, to split the window into three panels. Before you finish the sketch, delete the sketch segments between the new lines (for example, by using the Split tool with the Delete Inner Segment option checked from the Options Bar). When complete, the sketch should look like the blue highlighted area in Figure 6.24.
- 9. Click the green check button on the ribbon to finish the sketch.



FIGURE 6.23 Frame/Mullion Extrusion



FIGURE 6.24 Edit the existing window frame.

After the sketch is finished, it's important to flex the family to make sure the different sizes will behave before you load the family into the project.

- **10.** Click the Family Types button to view all the various family types. Select a few different types from the drop-down at the top of the dialog box, and click Apply after each type is specified.
- **11.** Click OK to close the dialog box, and look at the window in 3D. The window geometry is flexing, but the window pane is still one piece of glazing.
- 12. Select the glazing, and then click the Edit Extrusion button from the Mode panel on the contextual Modify | Frame Mullion tab. Return to the Exterior elevation, and add sketch lines aligned with your previously modified window trim, as shown in Figure 6.25. You can use the Pick Lines option in the Draw panel to make this process even easier. Remember to remove the segments of outer line using the Split tool, as you did in step 7.



FIGURE 6.25 Modifying the window glazing

13. Finish the sketch, and then repeat the previous process of testing a few different family-type parameters in order to make sure the window glazing will flex with the different sizes.

Modifying 2D Families

In addition to 3D families that contain model geometry, Revit Architecture has other categories of 2D families that consist of detail or annotation elements. These 2D families are handled differently than 3D model families. For example, tag families are treated as annotation, meaning they will resize according to the view scale. A 3D model family in Revit does not resize and is treated as physical geometry with real-world dimensions.

In the following exercises you will work with the most common types of 2D families (tags, profiles, detail components, and title blocks) to better understand their functionality and use cases: You will edit and make some changes to an existing tag family; then you will load the family back into the project.

Exercise 6.6: Edit a Tag Family

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 6, and open the file c06-ex-6.6start.rvt. The example file opens to the South elevation view; note the furniture tag. You will edit and modify this existing tag for your project (Figure 6.26).



FIGURE 6.26 Existing furniture tag

- 1. From the Project Browser under Families, expand Annotation Symbols.
- **2.** Find the Furniture Tag (M_ Furniture Tag) family, right-click it, and then select Edit from the context menu.
- 3. In the Family Editor, click the Create tab, and activate the Line tool.
- 4. Choose one of the arc draw tools and add lines to both sides of the tag.
- **5.** Delete the vertical lines, leaving just the horizontal lines and new arc lines (Figure 6.27). Adjust the horizontal lines if needed.



6. Click Load Into Project from the ribbon to reload the tag into the project and overwrite the existing tag.

Notice that the tag instance has updated, and the finished tag should look similar to Figure 6.28. Any tags of the same type in the project will also update to reflect the changes.



FIGURE 6.28 Completed furniture tag

In the following exercise you will edit and make changes to a profile family, which you will use to generate geometry for the railing.

Exercise 6.7: Edit a Profile Family

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 6, and open the file c06-ex-6.7start.rvt.

- In the Project Browser under Families, click to expand Profiles, and then right-click Rectangular Handrail (M_ Rectangular Handrail). Choose Edit from the context menu; Rectangular Handrail (M_ Rectangular Handrail) opens in the Family Editor.
- Because you want to keep your existing handrail profile intact, from the Application button choose Save As ➤ Family, and name the new profile L Shaped Handrail (M_L Shaped Handrail).
- 3. There are some parameters that you want to maintain in this family. To make them visible, go to the Visibility/Graphic Overrides dialog box (type VV on your keyboard), and select the Annotation Categories tab. Select all the options, as shown in Figure 6.29, and click OK to close the dialog box.

Visibility/Graphic Overrides for Floor Plan: Level 1
Model Categories Annotation Categories Imported Categories
Show annotation categories in this view
Visibility
Dimensions
Automatic Sketch Dimensions
■ Reference Lines
Reference Planes
All None Invert Expand All
Categories that are not overridden are drawn Object Styles
according to Object Style settings.

FIGURE 6.29 Adjusting the Visibility/ Graphic Overrides properties of the view



The profile view resembles the image in Figure 6.30.



4. On the Create tab in the ribbon, click the Line tool, and add new profile lines to resemble Figure 6.31. Load the profile into your project; the L Shaped Handrail profile family is now listed in your Project Browser under Families, along with the other profile families.



FIGURE 6.31 New handrail profile

Note that the parameters for Width and EQ have been retained.

- Next, you need to create a new railing type and associate it to your stair. In the Project Browser under Families, expand Railings ➤ Railing, and right-click Handrail Rectangular. Select Duplicate from the context menu. The copy is named Handrail Rectangular 2; Rename it to L Shaped Handrail (M_L Shaped Handrail).
- 6. Now you need to modify the properties of the railing to include the new handrail profile. To do so, right-click the L Shaped Handrail (M_ L Shaped Handrail) type you just renamed in the Project Browser, and select Type Properties, or just doubl e-click the L Shaped Handrail (M_ L Shaped Handrail) type.
- 7. In the Type Properties dialog box, select Edit from the Rail Structure (Non-Continuous) option. Doing so opens the Edit Rails (Non-Continuous) dialog box (Figure 6.32). Click in the Profile cell to activate the list drop-down, and select the L Shaped Handrail: 2" × 2" profile, as shown in Figure 6.32.

alis	Name	Height	Offset	Profile	Material
L	Rail 1	3' 0"	-0' 1"	haped Handrail: 2" x 2" Circular Handrail: 1 1/2" Circular Handrail: 1 " L Shaped Handrail: 2" x 2" L Shaped Handrail: 2" x 3" Rectangular Handrail: 2" x Rectangular Handrail: 2" x	<by category=""></by>
	Insert	Duplicate	Delete	Up	Down

FIGURE 6.32 Editing the profile for the railing

8. Click OK twice to return to the project. The new profile has been associated to the duplicate railing. All you need to do is swap out the default stair railing for the new one! Select the handrails assigned to the stair, and then choose L Shaped Handrail from the Type Selector in the Properties palette (Figure 6.33).



FIGURE 6.33 Selecting the new railing

In the following exercise you will edit and make changes to an existing break line family that needs to be updated for your project.

Exercise 6.8: Update Detail Components

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 6, and open the file c06-ex-6.8start.rvt. The example file should open to the starting view Callout of Section 1.

- 1. In this detail callout view there is a Break Line family that you need to modify. Select the break line, and click Edit Family from the ribbon to open the family in the Family Editor.
- 2. Select the break line in the Family Editor, and then click Edit Boundary from the ribbon.

This element is not a line (see Figure 6.34). It's actually a masking region (kind of like a white solid hatch) that is used to obscure geometry in your project. Some of the boundary line styles are Medium Lines, and some are Invisible Lines.

3. Before you begin to modify the masking region, you should be aware of any constraints established in the family. Press VV on the keyboard. Switch to the Annotation Categories tab, and check both the Dimensions and Reference Planes options. Click OK to close the dialog box.

Text added directly inside a detail component (or standard component family) does not display in the project.





FIGURE 6.34 Selecting and editing the break line

4. In the View Control Bar, change the scale of the view to $1 \frac{1}{2''} = 1'-0''$ (1:10) so the dimensions are more legible. Use Zoom To Fit to see the extents of the constraints (Figure 6.35).



FIGURE 6.35 The masking region with all constraints displayed



5. Delete the squared jag lines, as shown in Figure 6.36.



FIGURE 6.36 Delete the existing jag lines in the masking region.

6. From the Create tab in the ribbon, click the Line tool, and make sure Subcategory is set to Medium Lines at the right end of the ribbon. Draw new jag lines, as shown in Figure 6.37. Make sure the lines you draw snap to the midpoints of the previous jag lines and the end points of the remaining straight lines.



FIGURE 6.37 Sketch new jag lines in the masking region boundary.

7. Click the green check button in the Mode panel of the ribbon to finish the sketch.

8. Go to the Modify | Detail Items tab's Properties panel, and click the Family Types button. Change the Jag Depth value to 0'-6" (150 mm), as shown in Figure 6.38, and then click Apply. The size of the jag in the masking region should change. Try a few different values for Jag Depth to make sure the masking region flexes correctly. Click OK to close the dialog box.

lame:			•	
Parameter	Value	Formula	Lock	Family Types
Dimensions			*	<u>II</u> ew
Right (default)	1'0"	=		<u>R</u> ename
Left (default)	1'0"	=		Delete
Jag Depth (de	0'6"	-		
Jag Width (def	0'3"	-		
Masking dept	0' 7 5/16"	=		Parameters
Identity Data			×	A <u>d</u> d
				Modify
				Remo <u>v</u> e



9. Click Load Into Project from the ribbon to reload the break line into your project and overwrite when prompted. Your break line will be updated in the Section Callout view to reflect the new shape.

Repeating Details

Repeating details are based on detail component families that are given rules to repeat, based on a defined spacing and rotation. As an example, elements such as brick or concrete masonry units (CMU) in a wall section are elements that repeat on a regular interval. Rather than use an array each time you need to draw these elements in a detail, the repeating detail component allows you to create persistent rules for these components. You can then draw a repeating detail with the ease of drawing a simple line.

Repeating details are located on the Annotate tab's Component drop-down; click Repeating Detail Component. If you edit the type of any existing repeating

<

It is important to flex families with parametric dimensions before you load them into projects. detail component, you can create a new type using Duplicate. Then you can set the detail component you want to repeat (any that is loaded into the current project) along with the layout, spacing, and detail rotation (Figure 6.39).

Detail Specify the detail component to repeat.

Layout Specify the spacing type to use (such as Fixed Distance or Maximum Spacing).

Inside Restrict spacing to the path length.

Spacing Set the distance to space detail components.

Detail Rotation Apply detail component rotation (None, 90 Degrees Clockwise, 90 Degrees Counterclockwise, and 180 Degrees).

Type Properties			×
<u>F</u> amily: S	ystem Family: F	Repeating Detail 🔹 🔻	<u>L</u> oad
<u>T</u> ype: B	rick	•	Duplicate
			<u>R</u> ename
Type Parameter	s		
Parar	meter	Val	ue
Pattern			*
Detail		Brick Standard : Runn	ing Section 💌
Layout		Fixed Distance	
Inside		V	
Spacing		0' 2 171/256"	
Detail Rotati	Detail Rotation		
<< Preview		OK Cancel	Apply

FIGURE 6.39 Repeating Detail Component type properties

In the following exercise you will investigate editing other 2D annotations by modifying the default title block family. Title blocks are considered 2D families, similar to tags and detail components.

Exercise 6.9: Modify the Title Blocks

To begin, go to the book's web page at www.sybex.com/go/ revit2015essentials, download the files for Chapter 6, and open the file c06-ex-6.9start.rvt.

- 1. Open sheet A101 from the Project Browser. Select the title block, and then choose Edit Family from the ribbon.
- 2. You need to create a new line type for use in a grid. Go to the Manage tab's Settings panel, and click Object Styles. When the Object Styles dialog box opens, click New under Modify Subcategories. Use the New Subcategory dialog box to create a new line called Grid Lines, as shown in Figure 6.40. From the Subcategory Of drop-down, select Title Blocks. Then click OK.

Category	Line Weight	Line Color	Line	Pattern	
cutegory	Projection	Line Color	eneraten		
Generic Annotations	1	Black			
Reference Lines	1	RGB 000-127-000			
Reference Planes	1	RGB 000-127-000	Dash		
Title Blocks	1	Black]
Medium Lines	3	Black	Solid		
Thin Lines	1	Black	Solid		
Wide Lines	1	Black			
				Name: Grid Lines Subcatego Title Block	s sary of: G V Cancel
Select All Select None	Invert			New	Delete Rename

FIGURE 6.40 Adding a new subcategory

- **3.** Select the Line Color option, and modify the color to a light blue. Click OK twice to exit the Object Styles dialog box.
- **4.** You're ready to draw the grid lines. Go to the Create tab's Detail panel, and click the Line tool. Select the Grid Lines subcategory at the right end of the ribbon.



5. Draw five vertical lines and four horizontal lines. Add a continuous dimension to each set of lines so there are two (the dimensions will not show up in the project environment). Click the EQ option, and all the lines become equally spaced (Figure 6.41).





TURNING THE GRID ON AND OFF GLOBALLY

If you were to reload this sheet in the project, you'd be able to control the visibility of the grid like any other object: via Visibility/Graphic Overrides. But it's useful to be able to turn the visibility of the grid on and off throughout the project, not just one sheet at a time. You can do this by associating a type parameter to the grid lines you've just created. Then when you've finished using the grid line to set up your project views, you can turn it off with one click!



Notice that the parameter type is set to Yes/ No automatically since you selected the lines first.

- 6. Select all the grid lines you just created. In the Properties palette, click the Associate Family Parameter button to the right of the Visible check box to open the Associate Family Parameter dialog box.
- **7.** Click Add Parameter to open the Parameter Properties dialog box. In the Name field, type **Grid Visibility**. Click the Type radio button, and set Group Parameter Under to Graphics, as shown in Figure 6.42.

ameter Properties	X
Parameter Type	
Family parameter	
(Cannot appear in schedules or tags)	
 Shared parameter (Can be shared by multiple projects an appear in schedules and tags) 	nd families, exported to ODBC, and
	Select Export
Parameter Data	
Name:	
Grid Visibility	Type
Discipline:	
Common 👻	Instance
Type of Parameter:	Reporting Parameter
Yes/No 👻	(Can be used to extract value
Group parameter under:	report it in a formula or as a
Graphics 💌	schedulable parameter)
<pre> Tooltip Description: </pre> <pre> </pre> <pre> </pre> <pre> </pre> <pre> </pre> <pre> </pre> <pre> </pre> <pre> </pre> <pre> </pre> <pre> </pre> <pre> </pre> <pre> </pre> <pre> </pre> <pre> </pre> <pre> </pre>	er to write a custom tooltip. Custom t
ОК	Cancel Help

FIGURE 6.42 Creating a visibility parameter

- 8. When you've finished, click OK to close both dialog boxes.
- **9.** Click Load into Project to reload the title block into your project, overwriting the parameters of the existing title block.
- **10.** Select the title block in the project, and click Edit Type in the Properties palette to open the Type Properties dialog box (Figure 6.43).

Type Propert	ies						×
Family:	E1 30 x	42 Horizor	ntal		•	L	oad
Type:	E1 30x4	2 Horizont	tal		•	Du;	olicate
						Re	name
Type Para	meters			1		-	
Graphic	Param s	leter			v	aiue	\$
Grid Visi	bility						
<< Pre	view		ОК		Cancel		Apply

FIGURE 6.43 The Grid Visibility parameter in the Type Properties dialog box

Notice that the Visible property is now inactive because it is being controlled by the new Grid Visibility parameter. This is how you expose properties of individual family elements in the project environment.

 \triangleleft

If you uncheck the Grid Visibility parameter, it turns off the grid throughout your project, rather than just one view at a time.

11. Deselect the parameter. When you click OK, the grid is no longer visible in the title block.

Family Tips and Best Practices

The following are some additional tips and best practices for modifying and working with families:

Name Your Reference Planes After adding new reference planes, make sure to assign them a name in the Properties palette's Name field. This makes it much easier to keep track of each reference plane and allows them to be selected by name when you are editing the work plane.

Edit Work Planes When working in the Family Editor, you may at times need to move a work plane–based element (such as an extrusion) from one work plane to another. When selecting the element, the option to Edit Work Plane becomes available on the ribbon. You can select from a list of levels and reference planes to move the element to. This is another reason to name reference planes; if Name is blank, it will not appear under the Specify A New Work Plan > Name list.

Flex Reference Planes before Adding Geometry When creating new geometry in a family or adding a parameter to existing reference planes, be sure to properly flex the family before adding geometry. Think of reference planes as the framework for the geometry. First add reference planes, and then add dimensions between the reference planes as needed. Once the dimensions/parameters are in place, the values should be adjusted to ensure the reference planes adjust properly.

Use the Wall Closure Option For wall-hosted families (such as door and windows), reference planes can be used to determine the point where the wall layers will wrap around the family insert. You can see the difference in Figure 6.44 with Wall Closure checked and unchecked.



FIGURE 6.44 Wall Closure options

It is much easier to troubleshoot a potential issue before adding additional geometry into the family.

Deal with Filled Regions Blocking Lines in the Title Block This is a common scenario when adding filled regions and lines in a title block family.

- In the Family Editor, the filled region is added first, and the lines are added second (so the display order appears as expected with the lines on top).
- 2. Load the title block into the project, and the filled region now overstrikes the lines. One workaround is to start a new Revit generic annotation family and cut and paste the filled regions into the generic family.
- **3.** Lastly, load the generic annotation family into the title block family and locate as needed.

Know When Objects in a Family Cannot Be Deleted Notice that when you start a new family using a default template, some of the existing elements cannot be deleted (such as some reference planes). Why is this? Any geometry that is included as part of the family template cannot be deleted when a new family is created.

Create a New Family Template By default, you cannot save an existing Revit family (.rfa) as a family template (.rft). However, you can copy the file in Windows Explorer and rename the extension from .rfa to .rft. Revit will consider this a family template afterward.

Use a "Super" Masking Region By default, masking regions mask model geometry in the project environment, but they do not mask annotation elements such as text, dimensions, tags, or detail lines. If you want to mask model and annotation elements, create a generic annotation family, and add a masking region in the family. When loaded into the project, the generic annotation family will mask both types of objects.

Use a Family Parameter Lock For parameters in a family (Family Types dialog), there is a column with an option to lock. If you lock a parameter in the family, any labeled dimension with that parameter applied will be locked. This means you will be unable to change the value in-canvas. This also means you won't be able to dynamically flex the family in-canvas (such as dragging a reference plane with a labeled dimension attached). This is good to keep in mind if you run into odd behavior when flexing the family; make sure to first confirm whether the parameter is locked.

While the display order may appear incorrect in the title block family, it should display (and print) correctly in the project.

Now You Know

In this chapter we expanded on the principles that we covered in Chapter 5. There is still much more that could be covered, but the lessons learned in this chapter have covered the essentials. In this chapter you've learned about editing 2D and 3D families. You've created new families and edited existing families, including assigning a new family category. You've learned about modifying the family insertion point, the visibility of geometry for specific detail levels, and where to create new Object Styles. And finally, you've learned to edit the wide range of 2D families such as masking regions, title blocks, detail components, tags, and profiles.

CHAPTER 7

Schematic Design

Design inspiration comes from any source, at any time. Some designers like to sketch by hand; others use digital tools to create a 3D sketch. When design sketches are digital, the transitions between concept design, schematic design, and design development are simplified.

When you bring a 3D sketch into the Autodesk[®] Revit[®] Architecture platform, you start with 3D volumes, primal elements called *masses*, to make sure your form and square footage are correct before modeling walls and floors. Once you've confirmed that your building mass can contain the building program, you will use the mass as an armature on which to place building elements.

In this chapter, you'll learn to:

- Import a 2D image
- Scale an imported image
- Create a 3D sketch
- Link a 3D sketch
- Add a new level
- Calculate mass floor area
- Reload a linked sketch
- Create floors from a mass
- Create walls from a mass
- Create a curtain system
- Create a roof from a mass

Importing a 2D Image

S[®] PRO To create a 2D digital sketch, Autodesk released a tool for Apple's iPad called SketchBook Pro, which allows you to sketch directly on a tablet using a stylus or your finger like you would use a pen or pencil. The sketch in Figure 7.1 was created on an iPad, but the following steps apply to any scanned image—from either a magazine or trace paper.



FIGURE 7.1 A 2D sketch from Autodesk SketchBook Pro for iPad

Exercise 7.1: Import and Scale a 2D Image

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, and download the files for Chapter 7.

 On the home screen, select Architecture Template to open one of the default Revit Architecture templates. Open the East elevation by double-clicking East in the Project Browser.

- 2. On the Insert tab, find the Import panel, and click the Image button. Select the Massing_Sketch.png file from the Chapter07 folder. Click the Open button.
- **3.** You may need to zoom out to see the preview graphic consisting of blue grips and an *X*. This preview indicates the size of the image. Click the mouse to place the image. Use the arrow keys to nudge the image so that the ground plane of the building sketch roughly aligns with Level 1, as shown in Figure 7.2.



FIGURE 7.2 The imported image. Note the location of the levels relative to the ground plane in the image.

- Zoom into the Level symbols. Select the level line for Level 2. From the Properties palette change the Elevation parameter from 10'-0" (3.04 m) to 15'-0" (4.57 m); this height is more consistent with commercial construction.
- **5.** The image is a bit out of scale for the Revit model. Select the image and choose the Scale tool from the Modify panel. Refer to Figure 7.3 for the eventual goal.
- **6.** Hover the mouse over Level 1 until it highlights blue and then click. This is the shared base point.
- **7.** Move your mouse straight up so the cursor roughly aligns with the second floor of the sketch; then click. This is the image reference point.
- 8. Finally, move you mouse straight down so the cursor aligns with Level 2 of the model; then click. This is the model reference point. After this last click, the image scales to look similar to Figure 7.3.





ф	0	-03
		-[ii
	i	×



Three clicks are necessary to scale the image correctly; you must click the shared base point, the image reference, and then the model reference. FIGURE 7.3 The scaled image





Each image you import in Revit Architecture can be seen only in the view in which it's placed. In other words, an image placed in the East elevation view is seen only in that elevation view.



If you create your own Formit models and then send them to Autodesk 360 for conversion to .sat files, notice that there is a Revit (.rvt) version of your file available as well! The .rvt file will be created using the same steps we outline here but will be imported instead of linked.

>

9. Once the imported image is scaled and in the right place, it is best to pin the image so it doesn't accidentally move. Select the image and click the Pin tool from the Modify panel.

This concludes Exercise 7.1. You can compare your results with the sample file c07-ex-07.1end.rvt available in the files you downloaded from the Sybex website.

Designing with a 3D Sketch

Autodesk has also released a 3D digital sketch tool for iPad and Android devices called FormIt. This is a conceptual design modeling tool that allows you to create building forms and then export the geometry to Revit for further development. The FormIt tablet apps are fun and intuitive, so I recommend you try them out. Figure 7.4 was created on an iPad in roughly 20 minutes. You can upload your 3D sketch to Autodesk 360, automatically convert it to an .sat file and a .rvt file, and then download it locally. We'll go through the steps to link the .sat file into Revit and update the linked file when changes are made.

Exercise 7.2: Link a 3D Sketch

To begin, open the file c07-ex-07.2start.rvt from this chapter's download.



1. To link the 3D sketch you need to insert the FormIt geometry into an In-Place Mass family. On the ribbon, find the Massing & Site tab, then find the Conceptual Mass panel, and click the In-Place Mass icon.



FIGURE 7.4 The FormIt 3D sketch

- 2. Revit displays a dialog telling you that it has now enabled Show Mass mode in the current view—but only for this Revit session. Click the Close button. Now Revit allows you to name the Mass; call it **Trapelo** Sketch and click OK.
- Click the Insert tab of the ribbon and choose Link CAD. A filenavigation dialog appears. This dialog defaults to show .dwg files. Click the Files Of Type drop-down, and choose ACIS SAT files. Select the Trapelo_Sketch.sat file from the Chapter07 folder. Click Open.
- 4. The geometry should appear successfully on Level 1 of your model. Click the Finish Mass button from the ribbon. Then click the 3D View button on the View tab of the ribbon. Your geometry and view should look like Figure 7.5.
- 5. Click the View tab, and then click the Visibility/Graphics button from the Graphics tab (or type the keyboard shortcut VG). Find the Mass category in the list, and check the box next to it. This way your mass will be visible in this view in the next exercise.

You can link or import SketchUp files using the same tools. Change the Files Of Type drop-down filter to show . skp files.







FIGURE 7.5 The linked 3D sketch as an in-place mass

This concludes Exercise 7.2. You can compare your results with the sample file c07-ex-07.2end.rvt available in the download from the Sybex website.

VISIBILITY OF MASS ELEMENTS

The visibility of the Mass element can be tricky. The Massing & Site tab of the ribbon has a drop-down menu with two important options we need to clarify. The first option, Show Mass By View Settings, depends on the Mass category in the Visibility/Graphic Overrides dialog. This means you can enable visibility of the mass per view. The second option, Show Mass Form And Floors, enables you to see the mass in all views but only per session—the visibility of the mass is not saved. This option means the mass probably won't be visible the next time you open the file.

Exercise 7.3: Add a New Level

To begin this exercise, open the file c07-ex-07.3start.rvt.

1.4	Level
s∰	Grid

- 1. Open the North elevation view from the Project Browser. The mass is visible because the category is checked in the Visibility/Graphic Overrides dialog.
- **2.** Go to the Architecture tab of the ribbon, find the Datum panel, and click the Level tool.

- 3. In the Draw panel, choose the green Pick Lines tool.
- **4.** On the Options Bar, set the offset value to 15'-0'' (4.57 m).
- **5.** Hover your mouse over the Level 2 annotation element. Look for a dashed blue line to appear *above* Level 2. This dashed line indicates where the new level will be placed; see Figure 7.6.



FIGURE 7.6 Use the Pick Lines tool to create a new level.

6. Click to place the new level, called Level 3, at 30'-0".

This concludes Exercise 7.3. You can compare your results with the sample file c07-ex-07.3end.rvt from the download for this chapter.

LEVELS VS. REFERENCE LEVELS

If you copy a level instead of create a new one, Revit creates a *reference level*. Reference levels are useful for Top Of Parapet or Bottom Of Eave—architectural references that don't need a floor plan. Reference levels show black level symbols in elevation views instead of blue level symbols. The blue symbols are hyperlinked to their corresponding floor plan. Try double-clicking the blue level marker, and Revit will open the floor plan view.

Exercise 7.4: Calculate Mass Floor Area





Schedules are covered in more depth in Chapter 12, "Drawing Sets." Open the file c07-ex-07.4start.rvt from the download to start this exercise.

- **1.** The file should open in the 3D view. Select the Mass element, and click the Mass Floors button in the ribbon.
- **2.** Check the box next to Levels 1, 2, and 3; then click OK. The Mass element has been divided at the level intersections.
- **3.** Click the View tab; then click the Schedules button and choose Schedule/Quantities.
- **4.** In the New Schedule dialog, review the list of categories on the left, find Mass, and expand it. Click Mass Floor, and click OK.
- **5.** In the Schedule Properties dialog, in the Fields tab, choose the following parameters from the list on the left; then click the Add button. Add them in this order: Mass: Family, Level, Floor Area (see Figure 7.7).

s	chedule Properties			X
	Fields Filter Sorting/Grouping	Formatting Appearance		
	Available fields:		Scheduled fields (in order):	
	Comments Conceptual Constructions	Mass: Family Level		
	Count Exterior Surface Area	< Remove	Floor Area	

FIGURE 7.7 The list of Mass Floor parameters

- **6.** Click the Formatting tab. Choose the Floor Area parameter from the list on the left. Check the Calculate Totals box from the options to the right.
- **7.** Now click the Sorting/Grouping tab. Check the box for Grand Totals; then choose Totals Only from the drop-down list. Click OK.
- **8.** You can see that the Floor Area total is roughly 51,500 SF (15,697.2 m), as shown in Figure 7.8. This is valuable information to have early on in schematic design.

This concludes Exercise 7.4. You can compare your results with the sample file c07-ex-07.4end.rvt that you downloaded earlier.

<mass floor="" schedule=""></mass>				
Α	В	С		
Mass: Family	Level	Floor Area		
Trapelo Sketch	Level 1	18590 SF		
Trapelo Sketch	Level 2	18590 SF		
Trapelo Sketch	Level 3	14340 SF		
		51521 SF		

FIGURE 7.8 The Floor Area schedule

Exercise 7.5: Reload a Linked Sketch

To begin, open the file c07-ex-07.5start.rvt.

- If the design changes, the 3D sketch changes, and you'll need to update the linked building mass by reloading the .sat file. Open the 3D view.
- **2.** Go to the Insert tab of the ribbon, and click the Manage Links button on the Links panel. Click the CAD Formats tab of the dialog.
- 3. Click the cell named Trapelo_Sketch.sat. Then click the Reload From button from the options below it.
- 4. The Find Link dialog appears. From the Chapter 7 folder, choose the file named Trapelo_Sketch_Update.sat and click Open.
- 5. Click OK to confirm the changes in the Manage Links dialog.
- 6. The building mass has updated slightly. Revit automatically recalculates the mass floors as well. Go to the Schedules/Quantities node of the Project Browser and open the Mass Floor Schedule. The Floor Area total is now 55,201 SF (16,825 m).

This concludes Exercise 7.5. You can compare your results with the sample file c07-ex-07.5end.rvt available in the download.

IMPORT CAD VS. LINK CAD

If you plan to iterate on the building form and building area using FormIt and Revit, you should link your .sat file instead of importing it. This will allow you to reload the link easily when changes are made.



Creating Revit Elements from a Mass

Once your mass is approximately the right size and shape, you can start to advance from the conceptual design phase to early design development. The mass itself has few properties aside from area and volume. You need to add building elements like floors, walls, and curtain systems to enclose and define your building. Revit uses the mass as an armature to place these real model elements upon.

Exercise 7.6: Create Floors from a Mass

To start this exercise, open the file c07-ex-07.6start.rvt.

- 1. The file should open in the 3D view. Go to the Massing & Site tab, find the Model By Face panel, and then click the Floor tool.
- 2. Select the three mass floors; this is easy to do because you are allowed to select only mass floors in this tool.
- **3.** After choosing all three mass floors, click the Create Floor button in the ribbon. Now you have real Revit floors that will be displayed in all views. The benefit of creating floors by face is that you don't need to sketch a custom shape for any of your floors—Revit uses your mass floor to automatically generate the floor outline.

This concludes Exercise 7.6. You can compare your results with the sample file c07-ex-07.6end.rvt.

Exercise 7.7: Create Walls from a Mass

Open the file c07-ex-07.7start.rvt to begin this exercise.

- In order to make the next steps easier, turn on Face Selection. Find the Modify button on the far-left side of the ribbon, and click the Select button underneath it. Now check the box next to Select Elements By Face.
- 2. Go to the Massing & Site tab, find the Model By Face panel, and then click the Wall tool. You will place solid walls now and place glass walls in the next exercise. Hover your mouse over one of the third-floor walls, as in Figure 7.9. Click to place a new wall.



You can change the type of floor you want to create before you make floors by face. Choose from the Type Selector drop-down after you start the Floor By Face command but before you click the Create Floor button.







FIGURE 7.9 Place a solid wall by face.

- **3.** It is difficult to differentiate the mass from the Revit wall. To show which walls have been created and which still need to be placed, adjust the graphics by changing the visual style from Hidden Line to Shaded.
- 4. Open the Visibility/Graphic Overrides dialog by typing the shortcut VG. Find the Floors category, and uncheck the box next to it.
- Also in the Visibility/Graphic Overrides dialog, find the Mass category and click into the cell in the third column titled Transparency; then click again to make the Surfaces dialog appear. Set the Transparency value to 50. Click OK.
- 6. Also in the Visibility/Graphic Overrides dialog, expand the Mass node. Uncheck the box next to the Mass Floor subcategory. Click OK to confirm all of these changes to the Visibility/Graphic Overrides dialog. Make sure that the Massing & Site tab has the Show Mass By View Settings button enabled.
- **7.** Now the mass and walls are distinguishable. Click the Massing & Site tab, choose the Wall By Face tool, and click to place walls until the volume in the middle of the mass looks like Figure 7.10.

This concludes Exercise 7.7. You can compare your results with the sample file c07-ex-07.7end.rvt.







FIGURE 7.10 Place the solid walls by face.



The Curtain System tool is similar to the Curtain Walls tool (Chapter 2), but curtain systems are specific to massing and allow you to place many curtain walls at once.

🔠 Edit Type

Before making Type property changes, it is best practice to duplicate the type and rename the new type. This way you don't accidentally change other model elements that look to that type property.



Exercise 7.8: Create a Curtain System

To begin this exercise, open the file c07-ex-07.8start.rvt.

- 1. To place the glass walls on the mass you'll use a different tool called the Curtain System. Go to the Massing & Site tab and click the Curtain System button.
- 2. You can change the spacing of the grids from the defaults. Click the Edit Type button in the Properties palette. Click the Duplicate button, and rename the type to $10' (3.04 \text{ m}) \times 5' (1.524 \text{ m})$ Trapelo. Click OK to confirm the new name.
- **3.** Change the Grid 1 Spacing parameter from 10'-0" (3.04 m) to 5'-0" (1.524 m). Change the Grid 2 Spacing parameter from 5'-0" (1.524 m) to 10'-0" (3.04 m). Click OK to confirm these changes to the Curtain System type.
- 4. Click all of the vertical faces that will become glass walls. You will have to use the ViewCube to rotate the view in order to see the vertical faces on the other side of the building. One word of caution—you are allowed to click horizontal faces of the mass (like roofs), so be careful clicking!
- **5.** Click the Create System button from the ribbon. Click Esc to close the tool. Your model should look like Figure 7.11.

This concludes Exercise 7.8. You can compare your results with the sample file c07-ex-07.8end.rvt.

Creating Revit Elements from a Mass



FIGURE 7.11 Curtain systems added to the mass

Exercise 7.9: Create a Roof from a Mass

Open the file c07-ex-07.9start.rvt to begin this exercise.

- The last building element needed to enclose the design is the roof. Click the Massing & Site tab, and choose the Roof By Face tool.
- **2.** Click the four horizontal surfaces that need a roof element. Then click the Create Roof button from the ribbon.
- **3.** Type the keyboard shortcut VG to access the Visibility/Graphic Overrides dialog box. Turn the Floors category back on.
- 4. Uncheck the Mass category in the same dialog.
- **5.** Click OK. Your finished schematic design should resemble Figure 7.12.



FIGURE 7.12 Finished schematic design

	-1
F	\mathbf{J}
Ro	oof



This concludes Exercise 7.9. You can compare your results with the sample file c07-ex-07.9end.rvt.

CREATE MASSES DIRECTLY IN REVIT

In the previous exercises you used an imported Formlt model as your mass geometry. That is not the only way to progress from the schematic to the conceptual design. Revit has robust geometry-creation tools within the massing environment, including extrusions, blends, sweeps, swept blends, and revolves. After you've created basic forms, you can use voids to carve away at your initial form.

We don't have the space to go into all of the Revit massing tools. However, modeling more complex masses is something that you'll likely want to learn and experiment with. You may want to investigate the *Mastering Revit Architecture 2015* book from Sybex for insights into these tools.

Now You Know

Masses are an essential part of the early conceptual design process when using Revit. Working with other software tools like Autodesk FormIt or Autodesk Sketchbook Pro is supported and even encouraged to get the design right before moving into design development. The information gleaned from simple massing studies in Revit can inform building orientation and building program validation. The nice part of the Revit massing workflow is that you can add walls and floors to the mass faces, thus allowing your design to maintain its intelligence into the early stages of design development.
Rooms and Color Fill Plans

In the previous chapters of this book, we discussed creating physical elements such as walls, floors, roofs, stairs, and railings; however, one of the most important elements in architecture is the spaces bounded by those physical elements. In the Autodesk[®] Revit[®] Architecture software, you have the ability to create and manage rooms as unique elements with extended data properties. Keeping room names and areas coordinated has the potential to free hours of manual effort for more productive and meaningful design-related tasks. Once rooms are tagged, you'll be able to create coordinated color fill plans that automatically reflect any data about the rooms in your project. Any changes to the rooms are immediately reflected throughout the entire project.

In this chapter, you'll learn to:

- Define rooms in spaces
- Add a room tag
- Modify a room boundary
- Delete a room object
- Generate color fill room plans
- Modify a color scheme
- Add tags and color fill to sections

Defining Rooms in Spaces

Rooms are unique types of objects because they do not have a clear physical representation like other model elements such as furniture and doors. Their horizontal extents are automatically determined by bounding objects in the

form of walls, columns, or boundary lines that you can customize. These planar boundaries will determine the extent of the room object and thus the area of each defined room. As an additional option, you can allow Revit Architecture to calculate room volumes. The volumetric or vertical extents of rooms are determined by floors, ceilings, and roofs.

To access these calculation options, find the Room & Area panel on the Architecture tab. Click the panel title to expose the special commands, and select Area and Volume Computations (Figure 8.1).

Room Room Tag Area Boundary Area	Area and Volume Computations Computations Volume Computations Volume Computations
[문 Color Schemes [말] Area and Volume Computations 네 Room & Area	Volumes are computed at finish faces. Areas only (faster) Areas and Volumes
	Room Area Computation At wall finish At wall center At wall core layer At wall core center



The area and volume settings are shown at the right of Figure 8.1. In addition to setting the volume computation option, you have the ability to customize the area computation as it relates to walls. This is important to understand because it will affect the area values calculated and displayed in room tags. In this section, you will place rooms and room tags in a floor plan of a project in progress.

Room Tags



Before you begin placing room objects, you should understand the distinction between rooms and room tags. The *room* is the spatial object that contains all the metadata about the space. The *tag* merely reports those values. In many cases, you can change the values in the room tag, and the room properties will

update (and vice versa). But whereas deleting the room will delete the tag, the opposite is not true. You can delete a room tag, and the room will remain. Tags are simply 2D view–specific elements that attach to modeled objects, or, in this case, the room object.

Because rooms do not represent physical objects, they have two unique properties to help you visualize and select them. One is a reference — a pair of invisible, crossing vectors that are usually near the middle of the space. You can find these by moving your mouse pointer around in a space. The reference will highlight when your mouse pointer is over one. The second unique property of a room is an interior fill. You can make these properties visible in the Visibility/ Graphics settings for any view (Figure 8.2).



FIGURE 8.2 Room references and interior fill in the Visibility/Graphics settings

Room Boundaries

Rooms will automatically fill an enclosed area and will always recalculate their area when bounding objects are defined and adjusted. Elements such as walls, floors, columns, and ceilings have a Room Bounding property that lets you customize this behavior to suit your designs. You can find this property in the Properties palette when you select one of the aforementioned model elements.

Room Separation Lines



There are times when you have a large, central open space, as in the following exercise, and you'll need that space to be subdivided and tagged into smaller functional areas. You don't want to add walls to carve the large space into smaller areas, especially if they don't exist in the program; fortunately, there's a better option. You can draw spatial dividers known as *room separation lines*. Room separation lines are model lines, and they show up in 3D views. The great thing about them is that they allow you to create spaces without using 3D geometry.

Deleting Rooms

While using the Room command, you can place a room and a room tag simultaneously; however, deleting a room completely from a project takes multiple steps. If you simply delete a room tag, the room object remains in the space. You can add another tag to the room object later or tag it in a different view.

If you delete a room object, the definition of the room remains in your project until you either place another room using the same definition or delete it in a room schedule. We'll explore this behavior later with a quick exercise in which you will delete a room object, observe the unplaced room in a schedule, and then replace the room object in the floor plan.

Exercise 8.1: Add Rooms and Room Tags

From the book's web page (www.sybex.com/go/revit2015essentials) download the project file c08-ex8.1start.rvt. Make sure the Level 1 floor plan is activated and set the scale to 1/4'' = 1'-0'' (1:50).

To add a room to your project, follow these steps:

- 1. Go to the Architecture tab's Room & Area panel, and select the Room tool.
- 2. Hover over an enclosed space, and notice that the room boundary highlights, indicating the space in which you're about to place a room object (Figure 8.3).
- **3.** Click to place a room in the upper-left space on the Level 1 floor plan. Notice that the default room tag indicates only the room name and number (Figure 8.4), but more options are available.

You don't have to tag rooms as you place them, but by default this option is selected, as highlighted in the Modify | Place Room tab.



FIGURE 8.3 Adding a room and a room tag



FIGURE 8.4 Room tag

- **4.** Click the Modify button or press the Esc key to exit the Room command, and then select the room tag.
- **5.** Choose the Room Tag With Area option from the Type Selector in the Properties palette. The room tag shows the area based on your project units (Figure 8.5). In this case, the room is 230 square feet (21 square meters).





- 6. Select the first room you created by finding the set of invisible crossing vectors, and examine its properties in the Properties palette. You can modify the room name and number here by editing the settings under Identity Data or by directly editing the Name and Number values in the room tag. It doesn't matter where you modify the data, because it is all stored in the room object. This makes it easy to create various plan diagrams to suit your needs.
- **7.** Change the name of the room to **Small Meeting**, and change the number to **101**.
- **8.** Place some other rooms within the floor plan, and observe how the numbering scheme has changed.
- **9.** Select the wall at the right edge of the Small Meeting room, as shown in Figure 8.6, and move it 2'-0" (600 mm) to the left.

The area feature of the room tag is incredibly helpful, because you can constantly confirm that your spatial program requirements are being maintained as your design develops. As locations of walls are modified, the room object will adjust accordingly and display the recalculated area values.

You can change the automatic numbering of rooms by editing the room number of the first one placed and then continue placing others.



FIGURE 8.6 Moving the wall

Notice that the moment you release the wall, the room updates with the new area information, which is immediately reported by the room tag (Figure 8.7).



FIGURE 8.7 Updated room space and tag

10. Continue to add rooms and tags to the Level 1 floor plan, as shown in Figure 8.8. The rooms will be numbered as you place them, so place the rooms according to the numeric sequence shown in the figure, starting with room 102.



FIGURE 8.8 Adding rooms and tags

You can compare the file in its finished state on the book's web page. Download the file titled c08-ex8.lend.rvt.

Exercise 8.2: Modify a Room Boundary

From the book's web page (www.sybex.com/go/revit2015essentials), download the project file c08-ex8.2start.rvt. Make sure the Level 1 floor plan is activated. If you completed Exercise 8.1, you can begin the following steps where you left off.

Follow these steps to subdivide the open space in the project into three functional spaces:

- 1. Start to add a tag to the large central open space and notice that the space will be tagged as a single room (Figure 8.9). In this exercise you want this space to be divided into smaller functional areas. Do not place a room object in this area.
- **2.** Return to the Room & Area panel on the Architecture tab of the ribbon, and select Room Separator.
- **3.** Draw a line between the wall intersections labeled 1 and 2 in the sample file.

You can turn off room separation lines in the Visibility/ Graphic Overrides for a view under the Lines category.



FIGURE 8.9 Tagging a large space

By default, these lines are thin and black, but you can change the settings to make it easier to distinguish the lines from other elements. You will modify the Room Separator line style to be more visible in a working view, but it will be turned off in your sheet views.

- 4. Go to the Manage tab's Settings panel, click the Additional Settings flyout, and select Line Styles. Maximize lines to view all available line styles in the sample project.
- 5. Change the default values for the <Room Separation> lines as follows:
 - ▶ Line Weight: 5
 - Color: Blue
 - ▶ Line Pattern: Dot 1/32″ (Dot 1 mm)
- 6. Click OK to finalize these changes.
- **7.** Sketch another room separator in the sample file between the wall intersections labeled 1 and 3.
- 8. Add rooms and room tags to the subdivided open space, as shown in Figure 8.10.



You may customize these settings for room separation lines, or any other line style, as needed by your project.



FIGURE 8.10 Adding room separation lines

Compare your completed floor plan to the example file c08-ex8.2end.rvt, available for download from the book's web page.

Exercise 8.3: Delete a Room Object

In this exercise, we will explore what happens when you delete a room object, observe the unplaced room in a schedule, and then replace the room object in the floor plan.

From the book's web page (www.sybex.com/go/revit2015essentials), download the project file c08-ex8.3start.rvt. If you completed Exercise 8.2, you can begin the following steps where you left off:

- 1. From the Level 1 floor plan, delete the Small Meeting room in the upper-left corner by selecting and deleting the room object. A warning appears in the lower-right corner of the application. This warning tells you that the room you just deleted will remain in the project and can be removed or added back by deleting it from or adding it to a room schedule.
- **2.** Go to the View tab's Create panel, click the Schedules flyout, and click Schedule/Quantities.
- 3. Select Rooms from the Category list, and click OK.
- 4. Add the following fields to the room schedule in this order:
 - Number
 - Name
 - Area

Schedules

- **5.** Click OK. One room in the schedule displays Not Placed in the Area column.
- **6.** To replace the room you just deleted, return to the Level 1 floor plan, and start the Room command again. This time, open the Room drop-down on the Options Bar. You see any unplaced rooms available in your project (Figure 8.11).
- **7.** Select the unplaced room from the list, and place the room back in the floor plan.



There are filters in the ribbon to *show, hide, or isolate* not placed or unenclosed rooms when you are viewing a room schedule. These filters are useful when you want to perform quality control on your project and quickly clean up not placed rooms.

 \checkmark

FIGURE 8.11 Place rooms with unplaced room definitions.

- 8. Return to the schedule you created by locating the Schedules/Quantities category in the Project Browser and opening the Room Schedule.
- **9.** Highlight the name field for the first unnamed room object, and modify the value to read Large Meeting. Practice renaming all the remaining rooms, either in the schedule or in the floor plan, as shown in Figure 8.12, naming the spaces appropriate to their function.

<room schedule=""></room>							
A	A B C						
Number	Name	Area					
101	Small Meeting	204 SF					
102	Large Meeting	323 SF					
103	Office	214 SF					
104	Office	216 SF					
105	Small Meeting 277 SF						
106	Office	208 SF					
107	Office	173 SF					
108	Waiting	700 SF					
109	Entry	111 SF					
110	Hallway	159 SF					

FIGURE 8.12 Renaming rooms in a room schedule

Certification Objective Compare your completed exercise to the example file c08-ex8.3end.rvt, available for download from the book's web page.

Generating Color Fill Room Plans

Creating color fill plans in Revit Architecture is easier to accomplish than most other design applications. Because color fills are associated with the elements of your building design, they will constantly update as existing information is modified or new information is added. This allows you to focus on communicating rather than coordinating your design information — as if resolving your design isn't already hard enough!

In the following exercises, we will explore how to add a color scheme to your floor plan and section and how to modify the values. By default, solid fill colors will be automatically assigned to each unique value in a color scheme. Fortunately, you can completely customize the colors and fill patterns for the scheme.

Exercise 8.4: Add and Modify a Color Scheme

From the book's web page (www.sybex.com/go/revit2015essentials), down-load the project file c08-ex8.4start.rvt.

Color Fill				
E	Color	Fill	Legend	
10	Pipe	Leg	end	
Đ	Duct	Leg	end	

You can create any number of color schemes based on various data in your project model. For example, you could also create color fill legends according to department

or custom parameters such as floor finish, occupancy type, and even ranges in area.

- 1. Go to the Annotate tab's Color Fill panel, and select the Color Fill Legend tool.
- 2. Click anywhere in the whitespace of the drawing area, and a dialog opens that allows you to select the space type and color scheme (Figure 8.13).
- 3. Set Space Type to Rooms and Color Scheme to Name. Click OK.

Choose Space Type and Color Scheme					
A color scheme has not been assigned to the view. The legend will appear blank. To apply a color scheme to the view, choose a space type and scheme and press OK.					
Space Type:	Rooms				
Color Scheme:	Name				
	OK Cancel				



- 4. To edit the color assignments, select the color fill legend in the plan view. You can then select the Edit Scheme tool from the contextual ribbon. You can also access the same settings in the Properties palette for the current view. Just find the Color Scheme property, and click the button in the parameter field.
- **5.** Select the Edit Scheme tool, which opens the Edit Color Scheme dialog where all the values are available for editing (Figure 8.14).

chemes	Scheme	Defi	nition			- ·		
Category:		Title:		Color:		By value		
Rooms 🔻		Ro	oom Legend	Name	•	O By range	Edit Format	
(none)		Г	Value	Visible	Color	Fill Pattern	Preview	In Use
Name Department	†E	1	Entry	1	PANTONE 6	Solid fill		Yes
o op an an an a	IE	2	Hallway	V	RGB 096-17	Solid fill		Yes
	*⊑	3	Large Meeting	1	PANTONE 6	Solid fill		Yes
	+	4	Office	V	RGB 209-20	Solid fill		Yes
		5	Small Meeting	1	RGB 156-18	Solid fill		Yes
		6	Waiting	1	RGB 139-16	Solid fill		Yes
(† e *								
	Options	ude	elements from links					

FIGURE 8.14 Edit Color Scheme dialog

- **6.** With the Edit Color Scheme dialog box open, select the Color field in the row for Small Meeting. The Color dialog box opens.
- **7.** Modify the color values to Red 203, Green 242, and Blue 222. When you complete the changes, the fill color automatically updates to reflect your changes (Figure 8.15). Notice that all rooms that share the same name also share the same color fill. Color fills were automatically created based on assigned room names. If a room is renamed, the color fill should change accordingly.



\triangleleft

You can edit the color in the Edit Color Scheme dialog as well as the fill pattern. Changing the fill pattern is helpful if you want to create an analytic fill pattern for a black-and-white or grayscale print.



FIGURE 8.15 Resulting color fill

8. Continue modifying the color values in your color scheme until you are satisfied with its appearance (Figure 8.16).





Compare your completed floor plan to the example file c08-ex8.4end.rvt, available for download from the book's web page.

Exercise 8.5: Add Tags and Color Fills in Section

Room tags and color fills are not just for use in floor plans — they can be utilized in sections as well. Let's examine this functionality with a quick exercise. From the book's web page (www.sybex.com/go/revit2015essentials), download the project file c08-ex8.5start.rvt. If you completed Exercise 8.4, you can begin the following steps where you left off:

1. Activate the Level 1 floor plan. Go to the View tab's Create panel, and select the Section tool.



2. Create a section across the project plan view, as shown in Figure 8.17.

FIGURE 8.17 Creating the building section

3. Press the Esc key to deselect the section you just created. Doubleclick the section head to open the new view. Figure 8.18 illustrates the new building section. Although all the geometry is shown correctly, it would certainly help to tag the spaces with their room names.



FIGURE 8.18 Resulting building section

You can also right-click

a view reference such

as a section and select

Go To View from the

context menu.



You have two options to tag the room objects. Room Tag lets you place each tag manually. This approach is fine for a small project, but on larger projects you can save time by using the Tag All Not Tagged command to automatically place tags in the current view. **4.** Select the Tag All tool on the Annotate tab's Tag panel. Doing so opens the Tag All Not Tagged dialog, allowing you to tag numerous element categories in a view simultaneously. You need to tag only rooms in this exercise, so select the Room Tags category, as shown in Figure 8.19, and then click OK.

g All Not Tagge	d					
Select at least one non-annotated obj	Category and Tag ects:	or Symbol Family to ann	otate			
All objects in cu	irrent view					
Only selected o	bjects in current vie	W				
Include elemen	ts from linked files					
Category Loaded Tags						
Door Tags		Door Tag				
Room Tags		Room Tag				
Span Direction	Symbol	Span Direction : One Way Sla				
Structural Fram	ing Tags	Structural Framing Tag : Boxe				
View Titles		View Title				
Wall Tags		Wall Tag : 1/2"				
Window Tags		Window Tag				
Leader Leader Length:		1/2"				
	Tag Orientation:	Horizontal 💌				
OK	Cancel	Annly	Holp			

FIGURE 8.19 Adding room tags with the Tag All Not Tagged tool

5. To move a tag that may be overlapping element geometry, click the Modify button in the ribbon (or press the Esc key), select a tag, and drag it using the grip that appears near the selected tag (Figure 8.20). You can also grab and drag a tag directly without selecting it first.



FIGURE 8.20 Room tags shown in section

- 6. Return to the Annotate tab's Color Fill panel, select the Color Fill Legend tool, and place the legend in the section view.
- Once again, set Space Type to Rooms and Color Scheme to Name, and click OK. The rooms are filled with the same pattern and color in the section view as the color fill in the plan view, as shown in Figure 8.21.



FIGURE 8.21 Room colors in the section view match the plan colors.

8. Notice in Figure 8.21 that the color fill is obscured by some of the model elements such as doors and furniture. This is because the color fill can be placed as a background or foreground in any view. Find the Color Scheme Location parameter in the Properties palette for the settings of the current view. Change this setting to Foreground, and observe how the color fill display is modified.

Compare your completed section to the example file c08-ex8.5end.rvt, available for download from the book's web page.

Now You Know

In this chapter you have learned how to define rooms within spaces and add room tags to those spaces. You have also learned how to modify the boundary of a room object based on your project's program and delete a room object if necessary. In addition, you created a color fill plan and section by adding a color scheme to your views and modifying the color values.

There's a lot of wonderful functionality with regard to rooms, room tags, and color fills that we haven't been able to cover in this brief chapter. Instead, we focused on typical uses to get you up to speed so you can be confident and productive as quickly as possible.

You can set the color fills in the section view to describe Department or other values, while the room tags display the room name.

CHAPTER 9

Materials, Visualization, Rendering

Being able to visualize an architectural building before completion is one of the many advantages of building a 3D model. The Autodesk[®] Revit[®] Architecture platform offers various opportunities for you to visualize your design in exciting ways. We'll discuss how to set the material properties for your building information model, create compelling presentation graphics, and then produce beautiful renderings. As you become a skilled Revit user, you will also become a visualization expert.

In this chapter, you'll learn to:

- Define a material
- Assign a material to walls
- Apply presentation graphics to an elevation view
- Apply presentation graphics to a 3D axon view
- Make an exploded axon
- Render a model
- Create an interactive rendering
- Render a model using the cloud

Materials

Materials have many applications within Revit Architecture. In this chapter, we'll talk about the Graphic and Appearance tabs of the Material Editor to help you create and control the visualizations of your design. First we'll

discuss how to create materials in your model. Then we'll apply a material to a brick wall.

Exercise 9.1: Define a Material

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 9, and open the file c09-ex-09.1start.rvt.



- 2. The Material Browser dialog has a list of material names to the left with a very helpful search box at the top of the list. Type the word **Brick** into the search field, and the list will filter to only one material named Masonry Brick.
- **3.** Click the Masonry Brick material and notice that the properties on the right update, as in Figure 9.1. You're looking at the Graphics tab of the material's properties. You can choose a unique color for the brick by clicking the Color button under the Shading header. You can also redefine the surface pattern. The brick pattern looks good, so leave it as is.

Material Browser - Masonry - Brick	X 9
Brick	X Identity Graphics Appearance +
Project Materials: All 🔹	E - ▼Shading
Search results for "Brick"	Use Render Appearance
Name	Color RGB 170 98 104
Masonry - Brick	Transparency 0
	▼ Surface Pattern
	Pattern AR-BRSTD
	Color RGB 0 0 0

FIGURE 9.1 Search results for Brick and the Graphics tab

4. Now click the Appearance tab and you'll see a small rendered preview of the brick material (Figure 9.2). Below this preview are properties that affect the way this material looks in renderings. Above the preview image are buttons related to the material asset. Click the icon with arrows that allows you to replace the asset with a different material map.



The Graphics tab has a Shading property. These settings are displayed only in views set to Shaded or Consistent Colors.

Material Browser - Masonry - Brick				? X
brick	×	Identity Graph	ics Appearance +	
Project Materials: All 🔹		🔊 Masonry - E	Brick	:
Search results for "brick"			WEINER Scorenster	
Name	^			
Masonry - Brick			A.	
		▶ Information		
		▼ Masonry		
		Туре	Masonry	-
		Image		
			Brick_Non_Uniform_Running_B	urgundy
		Finish	Unfinished	-

FIGURE 9.2 The Appearance tab and the swap icon

5. The Asset Browser dialog appears (Figure 9.3), and it also has a search field at the top. Type in Brick; then click the Masonry option under the Autodesk Physical Assets folder and you'll see a variety of options. You should drag the column widths so you can see the material asset names. Double-click the Non-Uniform Running - Red brick material.

Asset Browser					2 2	۲
Bri	ck					×
Autodesk Physical Assets	: Ma	sonry: Brick			1	≣ -
Search results for "Brick"						
Document Assets		Asset Name	•	Aspect	Туре	Cat
▼ Autodesk Physic 🕀		Adobe - Beige		App	Mas	Ma
Masonry	~ 6	Cored		App	Gen	Ma
Ceramic		Herringbone - Light Brown		App	Mas	Ma
Default		Modular - Light Red		App	Mas	Ma
► Flooring		Non-Uniform Running - Burgundy		App	Mas	Ma
► Masonry		Non-Uniform Running - Gray		App	Mas	Ma
Metallic Paint	A .	Non-Uniform Running - Red		App	Mas	₽ a
Sitework		Norman - One-Third Running	Nor	n-Unifo	rm ŀ	Ma
Stone		Uniform Running - Orange	Run	ining - I	Red	Ma

FIGURE 9.3 The Asset Browser

6. The preview in the Appearance tab updates. Click the Graphics tab again, and check the Use Render Appearance box; see Figure 9.4. The shaded color updates to reflect an average color sample from the material render appearance! This is very helpful for consistency between different visual styles. Click OK to exit.

The settings specified on the Appearance tab are displayed only in renderings and views set to Realistic visual style.

 \triangleleft

Duplicating a material before modifying it is a safe way to edit a material without affecting all model elements that use the original material. The same is true when editing a material render appearance asset.

Graphic Display Options
@ Wireframe
🗇 Hidden Line
🗐 Shaded
Consistent Colors
Realistic
🖄 Ray Trace
🗇 🄄 🤉 🦚 🚑 🖓 🤉 🛤

Remember that changing the type properties of a wall (like editing the wall material) affects all segments of that wall type throughout the entire model.



Material Browser - Masonry - Brick		9 X
Brick	×	Identity Graphics Appearance +
Project Materials: All 🔹		▼ Shading
Search results for "Brick"		Use Render Appearance
Name	•	Color RGB 100 63 60
Masonry - Brick		Transparency 0

FIGURE 9.4 The finished Graphics tab

This concludes Exercise 9.1. You can compare your results with the sample file c09-ex-09.lend.rvt included in the chapter's download.

Exercise 9.2: Assign a Material

To begin, open the file c09-ex-09.2start.rvt from the chapter's download.

- 1. Make sure you're in the 3d Cover Shot view, and change your visual style to Shaded by using the icon on the View Control Bar.
- 2. Select one of the gray walls (Figure 9.5). Then, in the Properties palette, click the Edit Type button to open the Type Properties dialog box for the wall you have selected, Basic Wall 8 1/2" (21 cm) Masonry.





3. Find the Construction header to the right of the Structure label, click the Edit button, and the Edit Assembly dialog box will appear. Find the Material column, and click into the first cell; it currently says Default Wall. Notice that a small button appears in the cell. Click the button.

- **4.** The Material Browser dialog appears. Type **Brick** into the search field at the top of the list. Double-click the Masonry Brick material that appears in the list on the left. This is the material you edited in the previous exercise. Click OK to close the Edit Assembly dialog, and click OK again to close the Type Properties dialog. The drawing updates dramatically by replacing the gray material with a nice red brick shading!
- You've now applied your new material called Brick to all the walls of the type Basic Wall 8 1/2" (21 cm) Masonry throughout your model. You can follow the same steps to apply materials to floors, roofs, and other walls in your projects.

This concludes Exercise 9.2. You can compare your results with the sample file c09-ex-09.2end.rvt included in the chapter's download.

DESIGNING WITH GENERIC ELEMENTS

Developing your building design from generic ideas to specific elements plays an important role in your Revit Architecture workflow. When you're creating your design, it's not practical to invest time defining wall layers and material properties until you're ready. If you get too specific too soon, you might become frustrated.

Generic elements and materials help convey the intent of your design and allow your ideas to stay flexible. They'll help you emphasize where something is as well as some of what something is, without getting into the detail of how it's supposed to be assembled. Most of the frustration in design comes from working from specific to general, rather than the other way around. Designing with generic elements will help you avoid this trap.

Graphic Display Options

Now that you understand the basics of assigning building materials to your model elements, you will open an example file that has many materials and views already set up. You'll use this model to create a presentation drawing of an elevation and a 3D isometric drawing. You won't use rendering, just the techniques available in the Graphic Display Options.

Exercise 9.3: Presentation Elevation View

To begin, open the file c09-ex-09.3start.rvt.

 Find the East elevation in the Project Browser. Right-click the name East and choose Duplicate View, and then in the flyout menu choose Duplicate (Figure 9.6). This will make a copy of the view but without copying detail annotation elements.

Duplicate View	•	Duplicate
Convert to independent view		Duplicate with Detailing
Apply Dependent Views		Duplicate as a Dependent

FIGURE 9.6 Duplicate a view from the Project Browser.

- Right-click the newly created view in the Project Browser, named East Copy 1, and click Rename. Type in a new name, East – Presentation. Next you'll turn off the level markers and the reference planes in the view.
- Select one of the green dashed reference planes, right-click, and choose Hide In View ➤ Category (Figure 9.7). All of the reference planes are now hidden. Select one of the level datum graphics, rightclick, and choose Hide In View ➤ Category. Notice that all of the level markers are now hidden.

	Hide in View	•	Elements	
	Override Graphics in View	•	Category	
<u>an</u>	Create Similar		By Filter	

FIGURE 9.7 Hide the category in the view.

- 4. Now you are ready to embellish the presentation drawing with effects found in the Graphic Display Options (GDO) dialog box. Open the GDO from the Properties palette by clicking the Edit button next to the Graphic Display Options view parameter.
- **5.** Click the Smooth lines with anti-aliasing check box. This effect improves the line quality in the view dramatically. It has a negative performance impact, so use it in presentation views only.
- 6. Expand the Shadows section. Click the Cast Shadows and Show Ambient Shadows check boxes. Click the Apply button at the bottom of the dialog to see the effect these have on the model.

Click the Reveal Hidden Elements light bulb on the View Control Bar to see hidden elements and categories. You can select any hidden element and chose Unhide Category from the ribbon. This will make the element visible.

- **7.** Expand the Sketchy Lines section, and click the Enable Sketchy Lines check box. Slide the Extensions control to 7, and click Apply.
- **8.** Expand the Lighting option, and find the Shadow slider. Slide this to the left to make your shadows lighter. Click Apply and adjust until you're satisfied with the darkness of the shadows.
- **9.** Expand the Background section, and choose Gradient from the options. Click Apply. You should see something similar to Figure 9.8. Click OK to close the GDO dialog.



FIGURE 9.8 Elevation presentation view and GDO settings

10. The visual effects are all set, but the crop region needs to be adjusted. Select the crop region. Note the blue grips that appear in the middle of the edges. These can be dragged so that the elevation is framed as you desire.

11. Once you have the elevation centered in the crop region, you can turn off the crop region. The control for the crop region visibility is on the View Control Bar at the bottom of the screen. Click the Hide Crop Region button. Now you have an elevation view ready to be placed on a sheet.

This concludes Exercise 9.3. You can compare your results with the sample file c09-ex-09.3end.rvt available in the download for the chapter.

Exercise 9.4: Presentation 3D View

To begin, open the file c09-ex-09.4start.rvt from the files you downloaded earlier.



- Open the 3D view titled 3D Isometric in the Project Browser. The view is locked so that you cannot accidentally change the angle of the view. You can unlock the view by clicking the Unlock 3D View button on the View Control Bar, next to the Hide Crop Region button.
- 2. Click the Visual Style button on the View Control Bar, and choose the Shaded option. Then click the Visual Style button again, but this time click the Graphic Display Options text at the top of the list. This is a handy shortcut to the GDO dialog.
- **3.** Check the Smooth lines with anti-aliasing, Cast Shadows, and Show Ambient Shadows check boxes. Turn on Enable Sketchy Lines and set the Extension slider to 7. Set the Background option to Gradient. Click Apply to see these effects.
- 4. Expand the Lighting option, and adjust the Shadows, Sun, and Ambient Light slider controls. The Sun and Ambient Light sliders make an impact when your visual style is set to Shaded or Realistic. Set each of these values to 40, and click OK. You may need to zoom in a bit to see the surface patterns; then your view should look like Figure 9.9.
- Select the large brick wall that is blocking your view into the house. Right-click and choose Override Graphics In View ➤ By Element. Click the arrow next to Surface Transparency, and use the slider to set the value to 40. Click OK, and deselect the wall by hitting the Esc key twice.



FIGURE 9.9 3D Isometric with GDO effects

6. You can see into the house, but the brick surface pattern is still obscuring the view. Select the wall again, right-click, and choose Override Graphics In View >> By Element. Expand the Surface Patterns control, and uncheck the Visible parameter as in Figure 9.10 Click OK, and then press Esc to deselect the wall.

View-Specific Eleme	nt Graphics
Visible Projection Lines Surface Patterns Visible Color:	Halftone Halftone Sey Material>
Pattern: Surface Transparency: Cut Lines Cut Patterns Reset	<by material=""></by>

FIGURE 9.10 Selected wall and element overrides

Displacing elements is a view-specific override much like hiding an element in one view only. The changes made using Displacement will not affect the model or any other views of the model.



Displace	ment S	et
Displace	aniene o	C1
(Z)	67	Creek.
Edit	Reset	Path
Displacement Set		

This concludes Exercise 9.4. You can compare your results with the sample file c09-ex-09.4end.rvt available in the chapter's download.

Exercise 9.5: 3D Exploded View

To begin, open the file c09-ex-09.5start.rvt from the files you downloaded for this chapter.

- Open the view 3D Exploded View. Select the large brick wall, and click the Displace Elements button on the View panel of the Modify tab.
- 2. A widget appears with green, red, and blue arrows. This widget allows you to move the displaced set of elements. Click and drag the red arrow away from the house. Release the mouse button to place the wall. With the wall still selected, look in the Properties palette for the X Displacement value. Set this value to 25'-0" (7.6 m).
- 3. Since the windows are hosted in the wall, they move with it. You can displace these elements farther from the wall. Hover your mouse over a window, and click the Tab key until the window highlights. Select the window; then hold down Ctrl and click the other two windows so you have all three selected. Click the Displace Elements button. In the Properties palette, set the X Displacement value for the window to 20'-0" (6 m).
- 4. Click any of the displaced windows to select the displacement set, and from the ribbon choose the Path tool. Hover your mouse over one of the corners of your displaced windows. Click to add a dashed line back to where the element originated; repeat for the other corners. If you accidentally add a path line you don't want, you can select it and click Delete on the keyboard.
- **5.** Now you can add graphic effects using the GDO to make a beautiful and informative presentation drawing using steps from the previous exercises. Your results may look like Figure 9.11.

This concludes Exercise 9.5. You can compare your results with the sample file c09-ex-09.5end.rvt from the files you downloaded.



FIGURE 9.11 Finished exploded vie

Rendering

The technique of computer rendering is a complex science that has been simplified and tailored for architects in Revit Architecture. There are many expert computer renderers in the architecture field, and we recommend this tutorial as an initiation to the activity of rendering.

Exercise 9.6: Render a View

To begin, open the file c09-ex-09.6start.rvt from the chapter's download.

1. Open the view 3D Cover Shot. Get a quick preview of the render appearance of the materials used in the scene by switching to the Realistic visual style using the View Control Bar.



NOTE If you're unsatisfied with any of the materials used, you can refer to Exercises 9.1 and 9.2 to change the material's Appearance properties (not the material's Graphics properties) to make the material more suitable for renderings.





- 2. Open the Rendering dialog by clicking the teapot icon in the View Control Bar or by clicking the Render button on the View tab. This dialog does not have an OK or Cancel button. It has a big Render button at the top. Click Render now.
- 3. Congratulations, you've just made a Revit rendering! Now let's refine the quality of this image. First, change the Quality setting to Medium, and click Render again. Then, change the Quality setting to High, and click Render again. Note that changing the Quality setting improves the rendering but lengthens the time it takes to finish the rendering. Change the Quality setting back to Medium for the rest of this exercise.
- 4. Click the Sun Settings button in the Lighting group. The dialog that opens allows you to specify the location of the sun during your rendering. Change the time from 10:15 a.m. to 1:15 p.m. (Figure 9.12), and click OK. Click Render again to see how this iteration changes the rendering.

Solar Study	Settings		
Still	Location :	User Defined	
Single Day	Date :	6/21/2005	
🔘 Multi-Day	Time :	1:15 PM	×
rresets (In-session, Still> Sun and Shadow Settings Elevation - East			
	🗹 Ground Pla	ne at Level : Grade	•
[h 🛯 🎦			

FIGURE 9.12 Sun Settings dialog box

- 5. Click the Adjust Exposure button. The very first slider control in this list allows you to lighten or darken the image. Adjust the Exposure Value parameter to 13. The other sliders are useful if you want to adjust the colors of your image without using photo-editing software. Click OK, and notice the changes made without having to re-render!
- **6.** Find the Output Settings group. So far in this tutorial you've been rendering at screen resolution, so the rendering will finish faster.

Click the Print radio button. When switching to print output, you can specify the DPI. The higher the DPI, the longer the rendering takes. To have crisp edges in your finished rendering, set DPI to 150.

7. Once this rendering finishes (Figure 9.13), click the Save To Project button. This will prompt you to name the image. The image will be saved in your Project Browser under the Renderings branch. You can also click the Export button, which will save your rendering to your computer's hard drive as a .bmp, .jpg, .png, or .tif file.



FIGURE 9.13 The finished rendering

You can continue to test different rendering quality settings and background options. Rendering is an iterative process; working from low quality toward high DPI is a fast way to reach a finished image. If you want to select a wall or change a material, you can click the Show The Model button at the bottom of the dialog to switch from a static rendered image back to the model.

This concludes Exercise 9.6. You can compare your results with the sample file c09-ex-09.6end.rvt in the downloaded files for this chapter.

Exercise 9.7: Interactive Rendering

To begin, open the file c09-ex-09.7start.rvt from this chapter's download.

- In the Project Browser, find the 3D Views node, right-click the 3D Cover Shot view, and choose Duplicate View ➤ Duplicate. Rename the new view Interactive Rendering.
- 2. Change the visual style of the new view to Ray Trace using the View Control Bar. Ray Trace is a temporary, interactive rendering mode, where you can use the navigation wheel to pan, zoom, and orbit your model.
- **3.** The rendering in Ray Trace mode will automatically start. At first, the image will be low quality and low resolution, but it will improve quickly the longer you let the view idle. When you begin navigating your model, the rendering will restart as soon as you stop navigating and let the view idle.
- 4. To change the rendering settings for Ray Trace mode you need to access the GDO. You can type the keyboard shortcut GD or click the Visual Style menu on the View Control Bar. Make sure to change the Background setting to Sky. You can also brighten the scene using the Manual option of Photographic Exposure. Finally, you can change the Sun location in Sun Settings; click OK. In the GDO dialog click Apply to preview the changes, and then click OK when you're ready.
- 5. Click the navigation wheel icon, and use the Orbit command, the Walk command, as well as the Pan command to move the camera to various vantage points. The Look command is especially useful on interior scenes. When you find an interesting camera angle, you can stop there and let the Ray Trace rendering improve for a few seconds (Figure 9.14).
- **6.** You can save the image to the Renderings node of your Project Browser. Just click the Save button from the ribbon. Name the rendering **Back of House**. Finally, click the Close button on the ribbon to exit Ray Trace mode.

This concludes Exercise 9.7. You can compare your results with the sample file c09-ex-09.7end.rvt from the files you downloaded for this chapter.



		×
Stop	Save	Close
Interac	tive Ra	y Trace

Graphic Display Options...
 Wireframe

🔕 🖢 🧠 🕼 🕼 🖓 🖉 🛤 📾

Hidden Line

Shaded
 Consistent Colors

Realistic



FIGURE 9.14 A Ray Trace rendering after 15 seconds

Exercise 9.8: Cloud Rendering

Autodesk offers a very reliable and fast service that will render your Revit views in the cloud, thus allowing you to continue working while your renderings process somewhere else.

To begin, open the file c09-ex-09.8start.rvt in this chapter's download.

- 1. To use the cloud service, click the Render in Cloud button on the View Tab. You will be asked to sign in using your Autodesk 360 account. Create an account if you don't have one. After logging in, you should see a Render in Cloud dialog box with a few informational steps for cloud rendering; click Continue.
- The Cloud Rendering Service provides an interface for you to select which views you'd like to have rendered. First, expand the 3D View drop-down; then check the boxes for Interactive Rendering and 3D Cover Shot — or choose to render all five of the 3D views.
- **3.** There are other options below, but as long as you set Render Quality to Standard and Image Size to Medium (1 Mega Pixel), then the renderings do not cost any cloud credits; they are free! See Figure 9.15.

☞ Render
 ☞ Render in Cloud
 ■ Render Gallery

ender in Cloud			X
	360	0	<u> </u>
	Select 3D views to render in the Cloud		
3D View	5 selected	~	
Output Type	Still Image	-	
Render Quality	Standard	-	
Image Size	Medium (1 Mega Pixel)	-	STATES 1
Exposure	Advanced	-	
File Format	PNG (Lossless)	~	
	Alpha (Transparency Background)		
Cloud cred	its required: 0 (Free)		
Cloud cred	ts available: 11		
Cloud credits left after	his request: 11		
Cloud credits FAQ			
Email	when complete St	art Rendering	

FIGURE 9.15 Render In Cloud options

When the Render in Cloud Exposure property is set to Native, the Revit view-rendering setting for Exposure will be used instead of the default cloud-rendering Exposure setting.

- **4.** Click the Start Rendering button at the bottom of the dialog. Revit will process for a few moments as your model is uploaded to the cloud service. Then you'll be able to work on modeling while the renderings are finished on another machine.
- **5.** In a few minutes, you will get an e-mail, or your communication center will notify you that your renderings are ready. Click the Render Gallery button on the ribbon and review your new rendered images.
- 6. You can get these renderings back into your Revit project by saving them from the cloud onto your desktop. Then duplicate the Back of House view from the Renderings node of the Project Browser. Rename the copied view Cloud Cover Shot. Delete the old rendering, and import one of the new renderings as an image file to the blank drafting view.

This concludes Exercise 9.8. You can compare your results with the sample file c09-ex-09.8end.rvt in the files you downloaded earlier.

Now You Know

In this chapter, you learned how to render in three different ways and create presentation graphics in elevation and 3D views. You applied various Graphic Display Options to achieve a sketchy design look. You also used the Displace Elements tool to create exploded axonometric views. Using these techniques, you can visualize your model in interesting ways: for presentations, for working on a detail, or for communicating construction methods.

CHAPTER 10

Worksharing

Understanding multi-user workflow is essential to completing your Autodesk[®] Revit[®] Architecture training. There's plenty of work to go around in the design, development, and eventual documentation of a building project for multiple team members.

If you've never used Revit Architecture before in a multi-user environment, you may be familiar with the CAD workflow. Multi-user workflow in CAD is a very different process. Whereas CAD projects are typically divided along the lines of what needs to be drawn (plan, section, and elevation at various levels of detail), Revit Architecture envelops you in the entire process. 2D, 3D, schedules, and so on are in a single database, waiting for the input and direction of your team.

In this chapter, you'll learn to:

- Enable worksharing
- Create a Central Model and a local file
- Create worksets
- Adjust workset visibility
- Use worksharing display modes
- Understand editing requests
- Review worksharing best practices

Configuring Worksharing

The default configuration of your Revit Architecture project allows for one user to open and work with the model. When the project reaches a milestone where more than one user needs to work simultaneously, worksharing can be enabled to accommodate multiple user collaboration. Revit identifies each user in the project by the username specified in the Application menu > Options > General > Username (Figure 10.1). It is critical that each user working in the model have a unique username.

Username		
duellr		
You are cu Autodesk I	rrently not signed in to Autodesk 360. When you sign in, your D will be used as your username.	
Sign In to	Autodesk 360	

FIGURE 10.1 Username setting in Options

In the following exercise you will open an existing project, enable worksharing, and save it as the new Central Model.

Exercise 10.1: Enable Worksharing

Worksets

The first time you click the Worksets tool it enables worksharing. Clicking the tool afterward allows you to access and modify worksets. To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 10, and open the file c10-ex-10.1start.rvt.

 With the example file now open, navigate to the Collaborate tab and select the Worksets tool. The initial Worksharing dialog box (Figure 10.2) appears, outlining the worksets that project elements will be assigned to.

Worksharing	×
You are about to enable Worksharing.	
Note: Sharing a project requires carefu to enable Worksharing or Cancel to retu Worksharing.	l planning and management. Click OK urn to your project without enabling
Move Levels and Grids to Workset:	Shared Levels and Grids
Move remaining elements to Workset:	Workset1
	OK Cancel



2. By default, datum objects are moved to a workset called Shared Levels and Grids. Project content that is not view specific (geometry and rooms) is all assigned to Workset1. Click OK to continue.
THE CENTRAL MODEL

In a real-world project, the next step would be to save your Central Model onto a server location so the entire project team could access the model. Team members never work in the Central Model directly; instead, they create and work in local files. Local files communicate directly with the Central Model, so it needs to be in a location accessible to all.

3. The Worksets dialog box (Figure 10.3) opens next. Your username appears in the Owner field. Currently, you own everything in the project since you enabled worksharing. Click OK to continue.

					×
•	Gray Inacti	ve Workset Gra	aphics		
Editable	Owner	Borrowers	Opened	Visible in all views	New
Yes	duellr		Yes	V	
Yes	duellr		Yes		Delete
					Rename
					Open
					Close
					Editable
	<u> </u>				Non Editable
	Project :	Standards			
	Views				
			0	K Cancel	Help
	Yes	Gray Inacti Editable Owner Yes duellr Yes duellr Pes	Gray Inactive Workset Gra Editable Owner Borrowers Yes duellr Yes duellr Project Standards Views	Gray Inactive Workset Graphics Editable Owner Borrowers Opened Yes duellr Yes duellr Yes duellr Project Standards Views O	

FIGURE 10.3 Worksets dialog box

4. Next, you want to save the project as the Central Model. Navigate to Application > Save As > Project. Before clicking Save, click the Options button. In the File Save Options dialog you can confirm that this will be the Central Model. You will have other options, such as the maximum number of backups that Revit Architecture will maintain for the Central Model (Figure 10.4). Confirm that Make this a Central Model after save is checked, and click OK to close the File Save Options dialog.

Before you save the model, think about where you need it to be located. When the Central Model is saved, it will include the file location as part of the project, so it can't be easily moved afterward.

File Save Options
Maximum backups: 20
Worksharing
$\boxed{\checkmark}$ Make this a Central Model after save
☑ Compact File
Open workset default:
Last Viewed 🔻
Thumbnail Preview Source: Active view/sheet
Regenerate if view/sheet is not up-to-date.
OK Cancel

FIGURE 10.4 File Save Options dialog

 In the Save As dialog, enter the filename c10-ex-10.2start.rvt. You will use this Central Model for the start of the next exercise. Click Save to create your Central Model (Figure 10.5).



FIGURE 10.5 Save the Central Model.



- **6.** After the save completes, from the Collaborate tab click the Relinquish All Mine tool. This will release ownership of all model elements and is an important step to allow other users to work with the model.
- **7.** Close the Central Model. You should not be prompted to save or relinquish any elements since you have already done so.

In the following exercise you will create a local file using the newly saved Central Model from Exercise 10.1.

Exercise 10.2: Create the Local File and Worksets

To begin, ensure that Exercise 10.1 has been completed. You will utilize the Central Model you previously saved to create your local file. This is important because in order to create a local file, the Central Model cannot be moved around (since the initial save includes the model location).

- Click Open in the Application menu and browse to your Central Model, c10-ex-10.2start.rvt.
- 2. Select it, but don't open it just yet.
- **3.** As shown in Figure 10.6, ensure that the Create New Local option is checked.

Π	Deskter	File name:	c10-ex-10.2start.rvt		•	
		Files of type:	All Supported Files (*.rvt, *.rfa, *.a	dsk, *.rte, *.rft)	•	
	Too <u>l</u> s 👻	Audit	Worksharing Detach from Central	🗹 Create New Local	Open V	Cancel

FIGURE 10.6 Creating the local file

Selecting this option will not open the Central Model directly but instead will create a local file (Figure 10.6).

By default, your local file is saved in your Documents folder with a suffix based on your Revit username. In this author's case, the username is duellr. So, the local file is saved in the Documents folder as c10-ex-10.2start_duellr.rvt.

 Click Open to create a local file that communicates directly with the Central Model. This is the process you would use when working on real-world projects.

Next, you'll create several worksets that can be used to organize your model elements.

- 5. Open the Worksets dialog box from the Collaborate tab > Worksets.
- 6. Click New, and then create three additional worksets called Core, Exterior, and Interior (Figure 10.7).

Keep in mind that worksets are not layers, and little granularity is required. Basically, worksets should be used as collections of objects based on how you want them to be organized in the project.

7. Click OK to close the dialog.

Norkset1 (Not Editable)	-	Gray Inacti	ve Workset Gra	aphics		
Name	Editable	Owner	Borrowers	Opened	Visible in all views	New
Shared Levels and Grids	No			Yes	V	
Workset1	No			Yes	V	Delete
Core	Yes	lleud		Yes	V	Pename
Exterior	Yes	lleud		Yes	V	
Interior	Yes	lleud		Yes		
						0000
						Open
						Close
						Editable
						Non Editable
Show:		Dunin at (- to a danda			
V User-Created		Project :	standards			

FIGURE 10.7 Creating additional worksets

8. Open the Visibility/Graphic Overrides dialog box for the view (keyboard shortcut VG).

Notice that there is now an additional Worksets tab that didn't exist before worksharing was enabled. This tab allows you to turn off the visibility of elements based on their workset assignment. When you've finished examining this tab, close the local file before starting the next exercise.

WORKSET VISIBILITY

Worksets can be used as an additional method to control the visibility of elements in a view. The default setting for workset visibility is Use Global Setting (Visible) under the view Visibility/Graphic Overrides \succ Worksets tab. On a view-by-view basis, you can override the Visibility setting should you need to show or hide elements on individual worksets. In the following exercise you will assign model elements to worksets and adjust the workset visibility settings of the view.

Exercise 10.3: Assign Elements to Worksets and Control Visibility

To begin, make sure that you've downloaded the file c10-ex-10.3start.rvt, but don't open it just yet.

- From the Revit Application menu click Open, browse to c10-ex-10.3start.rvt, and select the file. Check Detach From Central and click Open. This will allow you to open an existing Central Model to resave it in a new location.
- When the Detach Model From Central dialog displays, choose Detach And Preserve Worksets. This will preserve all worksets in the model. After the model opens, click the Save button and save as c10-ex-10.3start.rvt. If you're saving the file in the same location as the original model, when prompted that the workset file already exists, click Yes.
- 3. The model should open the Level 1 floor plan view. Open the Visibility/Graphic Overrides dialog box for the view (keyboard shortcut VG) and click the Worksets tab. Change the Visibility setting for the Core, Exterior, and Interior worksets to Hide (Figure 10.8). Click OK to close the dialog.

Model Categories	Annotation Categories	Analytical Model Categories	Imported Categories	Filters	Worksets				
These visibility s Select Use Globa Select Show or H	These visibility settings control the display of worksets in the current view. Select Use Global Setting to use the workset's 'Visible in all views' setting defined in the Worksets dialog. Select Show or Hide to show or hide the workset, regardless of its 'Visible in all views' setting.								
	Worksets			١	isibility Set	ting			
Core			Hide					-	
Exterior									
Interior			Hide						
Workset1			Use Global Setting	(Visible	a				

FIGURE 10.8 Workset Visibility setting

4. Window-select the elements shown in Figure 10.9. While the elements are selected, click the Filter tool from the Selection contextual panel. Uncheck Room Tags and click OK to close the Filter dialog (Figure 10.9).



Worksharing Detach from Central



FIGURE 10.9 Element selection and filter

- **5.** From the Properties palette, locate the Workset parameter. This indicates the element's workset assignment. With the multiple elements still selected, change this value from Workset1 to **Core**. Notice that the elements are no longer visible, since in step 3 you set this workset to be hidden.
- 6. Next, you will assign some interior elements to the Interior workset. Draw a selection window from the lower right to the upper left inside the exterior walls. Windowing from this direction will include every element you cross or include within the window you draw. (If you windowed from left to right, it would select *only* the elements fully contained within the selection box (Figure 10.10).



FIGURE 10.10 Selecting and assigning the Interior workset

- **7.** With the multiple elements still selected, use the Filter tool again to uncheck Room Tags and <Room Separation>. Change the Workset value from Workset1 to Interior.
- 8. For the final selection set, select everything remaining in the view, and use the Filter tool. Click Check None; then check only Walls and click OK. In the Properties palette change the workset from Workset1 to Exterior.
- 9. By this step the only items visible are two room separation lines. Select them and assign them to the Interior workset. Now no geometry should be visible in the Level 1 view. Open the Visibility/Graphic Overrides dialog for the view, and reset the visibility settings back to Use Global Setting (Visible), as shown in Figure 10.11. Click OK to return to the view, and all elements should once again be visible.

Model Categories Annotation Categories Analytical Mode	el Categories Imported Categories Filters Worksets				
These visibility settings control the display of worksets in the current view. Select Use Global Setting to use the workset's "Visible in all views" setting defined in the Worksets dialog. Select Show or Hide to show or hide the workset, regardless of its "Visible in all views" setting.					
Worksets	Visibility Setting				
Core	Use Global Setting (Visible)				
Exterior	Use Global Setting (Visible)				
Interior	Use Global Setting (Visible)				

FIGURE 10.11 Resetting the visibility settings

At this point you can close this model and save your changes when prompted. The next section elaborates on the options available when working in local files and interacting with the Central Model (such as saving your changes).

Saving to the Central Model

When working in your local file there are several options available for saving your changes back to or interacting with the Central Model. The following worksharing-specific options are available on the Synchronize panel of the Collaborate tab. Synchronize And Modify Settings and Synchronize Now are available in the Synchronize With Central flyout.

Synchronize And Modify Settings Synchronize And Modify Settings provides more specific control when saving the Central Model. The dialog box shown in Figure 10.12 displays the Central Model location and gives you options to relinquish worksets, compact the Central Model, and save your local file (after the sync with the Central Model is complete).

Synchronize with Central	×
Central Model Location:	
C:\Projects\c10-ex-10.3start.rvt	Browse
Compact Central Model (slow)	
After synchronizing, relinquish the following worksets and elements:	
Project Standard Worksets View Worksets	
Family Worksets	ets
Borrowed Elements	
Comment:	
Save Local File before and after synchronizing with central	
OK Cancel	Help

FIGURE 10.12 Synchronize And Modify Settings

Synchronize Now This option is probably used more frequently than the other options. Consider creating a keyboard shortcut so you don't have to return to the Collaborate tab as you work when you want to save to the central file.

Synchronize Now saves your local copy and syncs with the Central Model as well as updates your file with any changes from the Central Model. Any borrowed elements are also relinquished by default. But if you have an entire workset checked out, it's not checked back in. It will still be editable by you after the save completes.

Reload Latest The Reload Latest option lets you reload the latest version of the Central Model in your local project. However, it doesn't publish any of your work in the Central Model.

Relinquish All Mine Relinquish All Mine allows you to check in elements that you may have borrowed but did not change. If you've made changes, you have to either sync them with the Central Model or discard the changes without saving. You cannot relinquish elements in a file that has been modified.

If you select this option, Revit Architecture will ask you what to do with the elements you've borrowed or worksets you have enabled (Figure 10.13). If you relinquish the elements and worksets, other people will be able to modify them in their local files. If you keep ownership, the changes you've made will be lost, but you'll still have the elements and worksets enabled.



FIGURE 10.13 Relinquishing elements and worksets

When you have no elements or worksets enabled in a project, you can confirm this by opening the Worksets dialog box, shown in Figure 10.14.

Name	Editable	Owner	Porrowers	Opened	Visible in all views	New
ivaine	Luitable	Owner	Donowers	Vor		TACAN
oterior	No			Ver	×	Delete
nterior	No			Vec	V	
Norkset1	No			Ver	V	Rename
						Close
					(Editable
						Non Editable
Show:						
User-Created		Project :	Standards			

FIGURE 10.14 Relinquished elements and worksets

In the following exercise you will work with closing and opening worksets in an existing model to globally update visibility.

Exercise 10.4: Open and Close Worksets

To begin, make sure you've downloaded the file c10-ex-10.4start.rvt, but don't open it just yet.

OPEN OR CLOSE WORKSETS

In addition to the workset per-view visibility settings, worksets can be opened or closed for the entire project. Doing so will globally turn on or off the visibility of everything on that workset, for all project views regardless of the Workset Visibility setting for that view. This is a great method to improve performance or turn off the display for entire portions of the model.

 From the Revit Application menu browse to c10-ex-10.4start.rvt and select the file. Check Detach From Central and click Open. This will allow you to open an existing Central Model to resave it in a new location.

- When the Detach Model From Central dialog displays, choose Detach And Preserve Worksets. This will preserve all worksets in the model. After the model opens, click the Save button and save as c10-ex-10.4start.rvt. If you're saving in the same location as the original model, when prompted with The Workset File Already Exists, click Yes.
- Open the Worksets dialog box under Collaborate ➤ Worksets (or click the Worksets button on the status bar). Notice that currently all worksets are set to Open (the Opened column will read Yes or No accordingly).
- 4. In this example model there are five worksets: Doors-Windows, Exterior Walls, Furniture, Interior Walls, and Rooms. Select the Furniture and Rooms worksets and click the Close button (Figure 10.15). You can select multiple worksets at the same time by holding down the Ctrl key while selecting.

ave workset						
oors-Windows	•	Gray Inacti	ve Workset Gra	aphics		
Name	Editable	Owner	Borrowers	Opened	Visible in all views	New
oors-Windows	Yes	duellr		Yes	V	
xterior Walls	Yes	duellr		Yes	V	Delete
urniture	Yes	duellr		No		Rename
nterior Walls	Yes	duellr		Yes	V	
ooms	Yes	duellr		No	\checkmark	
					ſ	
						Open
					(Close
					(Editable
				<u> </u>		Non Editable
Show:						
User-Created		Project	Standards			
Families		Views				

FIGURE 10.15 Closing worksets in the model

5. Click OK to close the Worksets dialog. Notice in the Level 1 view that the rooms and furniture are no longer visible. Unlike the Visibility/ Graphic Overrides Worksets Visibility setting, closing or opening a workset will affect all views. 6. Open the {3D} view to confirm this and note that the furniture is not visible. Open the Worksets dialog and additionally close the Interior Walls and Doors-Windows worksets. Click OK to return to the {3D} view (Figure 10.16).



FIGURE 10.16 Worksets Open and Closed

7. At any point you can reopen worksets to make the elements on those worksets visible again. Open the Worksets dialog again and select the Furniture and Interior Walls worksets. Click Open, and then click OK to return to the {3D} view. Note that the furniture is visible again in this and any additional project views where it was previously. You can save and close this model when finished.

Worksharing Display Modes

Worksharing display modes are a great way to visually understand the current worksharing status of your project. For this example, all three authors of this book are accessing the Central Model saved on the server (from the three local files) at the same time. Furthermore, all of us have borrowed elements in the central file.

In Figure 10.17, the Worksets dialog box shows that no worksets are editable but that the user duellr has borrowed elements.

Vorksets				1	$1 \mathbf{b}$	×
Active workset:						
Shared Levels and Grids (N	ot E 👻 🔳	Gray Inact	ive Workset G	raphics		
Name	Editable	Owner	Borrowers	Opened	Visible in all views	New
Core	No			Yes		-
Exterior	No			Yes	V	Delete
Interior	No		duellr	Yes	V	Bonomo
Shared Levels and Grids	No			Yes	V	Kertaille
Workset1	No		duellr	Yes	V	

Now let's look at the Worksharing Display Settings available for worksharing display in a project: Checkout Status, Owners, Model Updates, and Worksets. These settings are based on the particular parameters in your project (number of worksets, active users, and so forth). To activate any of these settings, click the icon 🗟 on the bottom of the view window (View Control Bar), and choose one of the menu items from the list (Figure 10.18).

	Worksharing Display Settings
	温 <u>C</u> heckout Status
	A. Owners
	C Model Updates
	🕸 Worksets
	😪 Worksharing Display Off
1/4" = 1'-0" 🔲 🗇 🔅 😪 🞼 🕼 📎 🖇	🚱 🕮 🔦

FIGURE 10.18 Worksharing Display Settings options

Activating any of the worksharing display modes from the menu toggles your visibility settings and applies an orange border to the view you're in, alerting you that you've activated the mode. To turn it back off, choose the Worksharing Display Off option from the same menu.

Let's set some of these modes active one at a time and view the results. Click the Worksharing Display button and choose Worksharing Display Settings. Start with the Checkout Status tab; the checkout status helps you distinguish between elements that are owned by you, others, or no one (Figure 10.19).



FIGURE 10.19 Checkout Status tab

Selecting the Owners display mode will show you exactly which elements belong to which users (Figure 10.20).



FIGURE 10.20 Owners tab

The Worksets tab helps you visualize elements based on the workset to which they're associated (Figure 10.21).



FIGURE 10.21 Worksets tab

Editing Requests

Eventually while working on a project team, another user will own an element you need to modify. For you to modify that element, the other user will first need to relinquish it. Let's take UserA and UserB as a simple example for this scenario:

- 1. UserA attempts to modify a wall but receives an error dialog noting that UserB currently owns the element (Figure 10.22).
- **2.** UserA clicks the Place Request button in the dialog so UserB will be notified (Figure 10.22).

	Editing Request Placed
Utodesk Revit 2015 Error - cannot be ignored Can't edit the element until 'UserB' resaves the element to central and can't edit the element until 'UserB' resaves the element to central and	Your request has been placed to the user(s) listed below. This message will update when a response is received.
Show More Info Expand >>	UserB To continue working instead of waiting for the response, close this dialog and cancel your change in the error dialog. Your Editing Request will still be active and you will receive a notification when it is granted or denied.
Place Request OK Cancel	Close

FIGURE 10.22 Placing a request

- **3.** While UserB is working in their local file, they receive a modal Editing Request Received dialog indicating that UserA has requested the wall element.
- **4.** UserB clicks Grant, which will give editability to UserA for that wall element only (Figure 10.23).



FIGURE 10.23 Granting a request

5. Lastly, UserA receives the confirmation dialog back that UserB has granted permission to edit the wall element (Figure 10.24).

In this example, no further action is required from UserA; UserA can start making modifications to the wall. The editing request serves as both a user notification system and an automated method to swap element ownership.



FIGURE 10.24 Granted confirmation

Worksharing Best Practices

Now that you have a general understanding of how worksharing and worksets operate, take a moment to consider a few best practices.

Think of worksets as containers. Worksets aren't layers as in CAD. Think of them as containers for major systems in your building (interior, exterior, roof, core, and so on). You need to manage or be mindful only of objects that belong to user-created worksets, such as the following:

- Datum (levels and grids)
- Geometry (building elements that show up in multiple views)
- Rooms (the spaces that can be tagged)

Be mindful of the active workset. As you're creating datums, geometry, or rooms, be mindful of the active workset. And keep in mind that Revit Architecture automatically manages the worksets for everything else (views, families, and project standards), and these cannot be changed by the user.

Borrow elements on the fly. Don't check out worksets by making the entire workset editable. Instead, just borrow elements on the fly. This approach lets you avoid many conflicts that occur when one person needs to modify something you own (but don't really need) in the model. With the interconnected nature of buildings, you don't even need to deliberately make an element editable. All you have to do is modify an existing element, and Revit Architecture will transparently borrow it for you. This works the same when adding new elements as well.

Associate linked files to their own workset. Associate any linked files to their own workset. Then you can open and close the worksets associated to those links. This strategy is much more predictable than loading and unloading links

(which will have an effect on everyone working on the project). Opening or closing a workset affects only your local file.

Stay out of the Central Model. Stay out of the Central Model—don't move it, and don't rename it (unless you know what you're doing). Opening the Central Model restricts access by the files that are trying to connect to it. And if you break something in the Central Model, you'll break the connections that others have from their local file, which means they may end up losing their work (which in turn means your team will not like you).

Open and close worksets selectively. Selectively opening and closing worksets is a lot faster than opting to modify the visibility settings of multiple views or using hide/isolate on a view-by-view basis. If you're supposed to be working only on the core and internal areas of a multistory building, opening only the worksets associated to those areas will save a lot of computing power.

Now You Know

This chapter served as both an introduction and reference to multi-user collaboration in Revit Architecture. You enabled worksharing and saved a Central Model. Next, you created a local file, created and modified worksets, controlled element visibility using those worksets, and explored the options to save your work back to the Central Model. Moving forward, this chapter should also serve as a strong reference for more advanced collaboration topics such as worksharing display modes and editing requests. We concluded this chapter with some best practices for you to utilize on your real-world projects.

Details and Annotations

So far, you have used the Autodesk[®] Revit[®] Architecture software to create walls, doors, roofs, and floors; to define space; and to bring your architectural ideas into three-dimensional form. In each of these cases, the geometry is typically modeled based on a design intent, meaning that your goal hasn't been to model everything but rather to model enough to demonstrate what the building will look like. To this end, it becomes necessary to embellish parts of the model or specific views with detailed information to help clarify what you've drawn. This embellishment takes the shape of 2D detail elements in Revit Architecture that you will use to augment views and add extra information.

In this chapter, you will learn to:

- Create a detail
- Enhance a detail with 2D elements
- Create a repeating detail component
- Annotate a detail
- Create a legend

Creating Details

Even when you're creating details, Revit Architecture provides a variety of parametric tools that allow you to take advantage of working in *building information modeling (BIM)*. You can use these tools to create strictly 2D geometry or to augment details created from 3D plans, sections, or callouts. To become truly efficient at using Revit Architecture to create the drawings necessary to both design and document your project, you must become acquainted with these tools.

These view-based tools are located on the Detail panel of the Annotate tab (Figure 11.1). This small but very potent toolbox is what you will need to familiarize yourself with in order to create a majority of the 2D linework and components that will become the details in your project. To better understand how these tools are used, let's quickly step through some of them. You're going to use the Detail Line, Region, Component, and Detail Group tools, because they will make up your most widely used toolkit for creating 2D details in Revit Architecture.

🔣 Detail Line	🕄 Revision Cloud
🖺 Region 🔹	🖪 Detail Group 🔹
🔠 Component 🔹	🔀 Insulation
De	tail

FIGURE 11.1 The Detail panel of the Annotate tab

Detail Line



The Detail Line tool is the first tool located on the Detail panel of the Annotate tab. This tool is the closest thing you'll find to traditional drafting in the Revit Architecture software. It lets you create view-specific linework using different lineweights and tones, draw different line shapes, and use many of the same manipulation commands you would find in a CAD program, such as offset, copy, move, and so on.

DETAIL LINES ARE VIEW SPECIFIC

Detail Lines appear only in the view in which they're drawn. They also have an arrangement to their placement, meaning you can layer them under or on top of each other or other 2D objects. This feature is especially important when you begin using regions, detail lines, and model content to create details.

Using the Detail Line tool is fairly easy. Selecting the tool changes your ribbon tab to look like Figure 11.2. This tab has several panels that allow you to add and manipulate linework.



This tab primarily contains three panels: Modify, Draw, and Line Style. You've seen the Modify panel before. It contains the host of tools you've used so far for walls, doors, and other elements. Here you can copy, offset, move, and perform other tasks. The Draw panel lets you create new content and define shapes, and the Line Style drop-down allows you to choose the line style you'd like to use.

Region

The next tool on the Detail panel of the Annotate tab is the Region tool. *Regions* are areas of any shape or size that you can fill with a pattern. This pattern (much like a hatch in AutoCAD) dynamically resizes with the region boundary. Regions layer just like detail lines do and can be placed on top of, or behind, other 2D linework and components. Regions also have opacity and can be completely opaque (covering what they are placed on) or transparent (letting elements show through).

There are two types of regions: filled regions and masking regions.

Filled Regions *Filled regions* allow you to choose from a variety of hatch patterns to fill the region. They are commonly used in details to show things such as rigid insulation, concrete, plywood, and other material types defined by a specific pattern.

Masking Regions *Masking regions*, on the other hand, come in only one flavor. They are white boxes with or without discernible border lines. Masking regions are typically used to hide, or *mask*, from a view certain content that you don't want shown or printed.

Component

The Component drop-down menu lets you insert a wide array of component types into your model. These are 2D detail components, or collections of detail components in the case of a repeating detail. Detail components are schedulable, taggable, keynotable 2D families that allow an additional level of standardization in your model.

Detail components are 2D families that can be made into parametric content. In other words, a full range of shapes can be available in a single detail component. Because they are families, they can also be stored in your office library and shared easily across projects.

To add a detail component to your drawing, follow these steps:

1. Select Detail Component from the Component drop-down list located on the Annotate tab.







 \triangleleft

Some examples of when you'd use detail components are blocking, steel shapes, and brick coursing in section—just about any replicated 2D element that comes in a standardized shape.

2. Use the Type Selector to choose from detail components that are already inserted into the model.

If you don't see a detail component you want to insert in the Type Selector, try this:

- 1. Click the Load Family button on the Modify | Place Detail Component tab.
- 2. Insert one from the default library or your office library.

Arranging Elements in the View



Knowing how to change arrangement is an important part of detailing so you don't have to draw everything in exact sequence. Arrangement allows you to change the position of an element, such as a line or a detail component, relative to another element. Much like layers in Adobe Photoshop or arrangement in Microsoft PowerPoint, Revit Architecture allows you to place some elements visually in front of or behind others. Once an element or group of elements is selected and the Modify menu appears, on the far right you'll see the Arrange panel.

From here, you can choose among four options of arrangement:

- Bring to Front
- Bring Forward
- Send to Back
- Send Backward

Bring Forward and Send Backward are available selections using the dropdown arrows next to Bring to Front and Send to Back, respectively. Using these tools will help you get your layers in the proper order.

Certification Objective

	8	[]
Component *	Revision Cloud	Detail _ Ir Group
Detail Co	omponent	
Repeatin	ig Detail Co	omponent
Legend 🛛	Componer	t

Repeating Detail Component

Repeating elements are common in architectural projects. Masonry, metal decking, and wall studs are some common elements that repeat at a regular interval. The Revit Architecture tool you use to create and manage these types of elements is called the repeating detail component, and it's located in the Component flyout on the Annotate tab.

This tool lets you place a detail component in a linear configuration in which the detail component repeats at a set interval; you draw a line that then becomes your repeating component. The default Revit Architecture repeating detail is common brick repeating in section. Creating elements like this not only lets you later tag and keynote the materials but also allows you some easy flexibility over arraying these elements manually.

Before you create a repeating detail component, let's examine one such component's properties. Select Repeating Detail Component and choose Edit Type from the Properties palette to open the Type Properties dialog box shown in Figure 11.3.

amily:	System Family: Rep	eating Detail	•	Load
ype:	Default		•	Duplicate
			[Rename
lype Parar	neters			
ype Parar	neters Parameter		Va	lue
ype Parar Pattern Detail	neters Parameter	<none></none>	Va	lue
'ype Parar Pattern Detail Layout	Parameter	<none> Fixed Dist</none>	Va	lue
'ype Parar Pattern Detail Layout Inside	Parameter	<none> Fixed Dist</none>	Va	lue

FIGURE 11.3 Type Properties dialog box for a repeating detail

Here's a brief description of what each of these settings does:

- **Detail** This setting lets you select the detail component to be repeated.
- **Layout** This option offers four modes:

Fixed Distance This represents the path drawn between the start and end points when the repeating detail is the length at which your component repeats at a distance of the value set for Spacing.

Fixed Number This mode sets the number of times a component repeats itself in the space between the start and end points (the length of the path).

Fill Available Space Regardless of the value you choose for Spacing, the detail component is repeated on the path using its actual width as the Spacing value.

Maximum Spacing The detail component is repeated using the set spacing, and the number of repeated components is set so that only complete components are drawn. Revit Architecture creates as many copies of the component as will fit on the path.

Inside This option adjusts the start point and end point of the detail components that make up the repeating detail. Deselecting this option puts only full

components between start and end points rather than partial components. As an example, if you have a run of brick, selecting the Inside check box will make a partial brick at the end of the run. If you want to see only full bricks (none that would be cut), deselect the option.

Spacing This option is active only when Fixed Distance or Maximum Spacing is selected as the method of repetition. It represents the distance at which you want the repeating detail component to repeat. It doesn't have to be the actual width of the detail component.

Detail Rotation This option allows you to rotate the detail component in the repeating detail.

Insulation



The best way to think of the Insulation tool is as a premade repeating detail. You'll find this tool on the Detail panel of the Annotate tab.

Selecting this tool allows you to draw a line of batt insulation, much like a repeating detail. You can modify the width of the inserted insulation from the Options Bar (Figure 11.4). The insulation is inserted using the centerline of the line of batt, and you can shorten, lengthen, or modify the width either before or after inserting it into your view.

Modify Place Insulation	Width 0'	' 3"	📃 Chain	Offset:	0' 0"	to center 🔻
---------------------------	----------	------	---------	---------	-------	-------------

FIGURE 11.4 Modifying the Insulation width in the Options Bar

Detail Groups

Detail groups are similar to blocks in AutoCAD and are a quick alternative to creating detail component families. Like modeled groups, these are a collection of graphics though contain detail lines, detail components, or any collection of 2D elements. While you will probably want to use a detail component to create something like blocking, if you plan to have the same blocking and flashing conditions in multiple locations, you can then group the flashing and block-ing together and quickly replicate these pieces in other details. Like blocks in AutoCAD, manipulating one of the detail groups changes all of them consistently throughout the model.

There are two ways to make a detail group. Probably the most common is to create the detail elements you'd like to group and then select all of them. When you do, the Modify context tab appears:

- **1.** Click the Create Group button under the Create panel to make the group.
- 2. When you're prompted for a group name, name the group something clear like Window Head Flashing or Office Layout 1 rather than accepting the default name Revit Architecture wants to give it (Group 1, Group 2, and so on).

The other way to create a detail group is as follows:

1. Go to the Annotate tab's Detail Group flyout and click the Create Group button. You are prompted for the type of group (Model or Detail) as well as a group name.

Model Model groups contain model elements (elements that are visible in more than one view). Choose Model if you want elements to be visible in more than one view or if they are 3D geometry.

Detail Detail groups contain 2D detail elements and are visible only within the view you're in (you can copy or use them in other views). Choose Detail if you're creating a group containing detail lines or other annotations and 2D elements.

When you select the elements, you're taken into Edit Group mode. A yellow transparency is overlaid on top of the view, and elements in the view appear gray.

2. To add elements to the group, click Add and then choose your selected items (Figure 11.5).

You can also remove unwanted elements.

 \times

Finish Cancel

S

Add Remove Attach

Edit Group panel

Edit Group

£

3. When you've finished, click the green Finish check mark, and your group will be complete.

You can place any group you've already made using the Place Detail Group button on the Annotate tab's Detail Group flyout. Groups insert like families, and you can choose the group you'd like to insert from the Type Selector on the Properties palette.







Linework

Ģ	*	ø
1	Ŧ	\$
1	/ie	w

Although not part of the Annotate tab, the Linework tool is an important feature in creating good lineweights for your details. Revit Architecture does a lot to help manage your views and lineweights automatically, but it doesn't cover all the requirements all the time. Sometimes the default Revit Architecture lines are heavier or thinner than you desire for your details. This is where the Linework tool comes in handy; it allows you to modify existing lines in a viewspecific context.

To use the Linework tool, follow these steps:

1. Go to the Modify tab's View panel and click the Linework button, or use the keyboard shortcut LW.

You will see the familiar Line Style Type Selector panel on the right of the tab.

- 2. Select a line style from the list.
- **3.** Simply choose the style you want a particular line to look like; then select that line in the view.

The lines you pick can be almost anything: cut lines of model elements, families, components, and so on. Selecting the line or boundary of an element changes the line style from whatever it was to whatever you have chosen from the Type Selector. Figure 11.6 shows a before and after of the sill detail with the linework touched up.



FIGURE 11.6 Before and after the Linework tool

You can return a line to its default lineweight by using the <By Category> line type. You can also choose to visually remove lines using this tool. Doing so leaves the line in the view or as a part of the 3D element but makes it effectively invisible for the sake of the view. Do this by selecting the <Invisible Lines> line type. This is a good alternative to covering unwanted linework with a masking region.

Exercise 11.1: Enhance a Detail with Regions

Enhancing your model with 2D linework and components is an efficient way to add more information to specific views without modeling everything. It is not necessary to model flashing, blocking, or other elements shown only in largescale format detail drawings. Using detail lines, regions, and detail components, you can enhance your views to show additional design intent.

From the book's web page (www.sybex.com/go/revit2015essentials), download the c11-ex11.1start.rvt file and open the view Exterior Detl, Typ, which you'll find in the Sections (Building Section) node of the Project Browser. In the following exercise, you will create a detail and enhance the detail using filled and masking regions to accurately represent built conditions within a typical window detail:

 Use the Callout tool on the View tab to create a new detail of the second-floor window sill: Create a new callout, and name it Exterior Window Sill, Typ. The starting view looks like Figure 11.7.



FIGURE 11.7 The window sill detail before embellishment

 Click the Filled Region button under the Region flyout on the Annotate tab. Choose <Invisible lines> from the Line Style Certification Objective

Chapter 11 • Details and Annotations

drop-down on the Modify tab, and create a box bounding the floor slab (Figure 11.8).



FIGURE 11.8 Modifying the boundary of the filled region

- **3.** Select the top and bottom edges of the bounding box, which should align with the cut planes of the floor, and use the Line Style drop-down to change the lineweight to Medium Lines.
- 4. Click the Edit Type button in the Properties palette to open the Type Properties dialog box. Because there is no defined region type that is identical to existing materials, you need to make one. Click Duplicate, name the new region type 00 Existing, and click OK.
- 5. Check to make sure these settings are in the Properties palette:

Fill Pattern: Set this field to Drafting, and choose ANSI31.

Background: Set this to Opaque.

Line Weight: Set this to 1.

Color: Set this to Black Click OK when you've finished.

- 6. Click the green check mark *✓* to complete the sketch. Your finished filled region appears highlighted and slightly transparent.
- **7.** Click off the region to see the finished product. The invisible line on the left doesn't cover the cut of the wall, and a thinner line remains.
- 8. Highlight the filled region again and use the Nudge tool (the arrow keys on the keyboard) to move the region over slightly to cover the remainder of the finished wall. The finished region looks like Figure 11.9.



FIGURE 11.9 The finished filled region

- **9.** Choose the Masking Region tool from the Region flyout on the Annotate tab.
- **10.** With Line Style set to Thin Lines, create a box 1" (25 mm) deep under the window sill, creating a blank space where you will later add some other 2D components, such as blocking. (Figure 11.10).



FIGURE 11.10 Adding a masking region

11. Click the green check to complete the sketch. The finished sill looks like Figure 11.11.



FIGURE 11.11 The completed sketch

Upon completion, your detail should resemble the c11-ex11.1end.rvt file, available in the download for this chapter. Save this detail; you'll return to it again in the next exercise.

Exercise 11.2: Add Detail Components and Detail Lines

The next step is to add some detail components for blocking and trim. From the Chapter 11 downloadable files, open the cll-ex11.2start.rvt file, or continue with your opened file if you've completed the previous exercise. Choose Application > New > Family, and choose Detail Item.rft. When you're creating detail components, as with any other family, you'll start with two reference planes crossing in the center of the family. This crossing point is the default insertion point of the family.

The first family, Blocking, is straightforward. You'll use Masking Region instead of the Lines tool so you have a clean, white box that you can use to layer over and mask other elements you might not want to see.

- Select the Masking Region tool on the Create tab, and draw a box with the lower-left corner at the origin. The box should be 1" (25 mm) high and 3" (75 mm) wide.
- 2. Click the green check mark to complete the region.
- **3.** On the Create tab, click the Line tool, and draw a line diagonally across the box to denote blocking. The family should look like Figure 11.12.



FIGURE 11.12 Creating a blocking detail component

- Choose Application > Save As > Family, and name the family 06 Blocking. Place it in a folder with the model.
- 5. Click the Load Into Project button at the far right on the ribbon to add the family to the model.

If you have more than one project open, make sure you choose either your continued exercise file or the example file for this exercise, cll-exll.2start.rvt.

- 6. To add the blocking detail component to your view, return to the Exterior Window Sill, Typ. detail, and click the Detail Component button from the Component flyout button on the Annotate tab.
- **7.** Insert pieces of blocking at the left, right, and center of the sill (Figure 11.13).



FIGURE 11.13 Inserting and placing the blocking

Create a new detail item using steps 1–3 for another detail component representing the baseboard (do not create a diagonal line to denote blocking), and use the dimensions 1" (25 mm) wide by 6" (150 mm) high.

The component you insert will become the default component; you can see the name 06 Blocking in the Type Selector.

- 9. Name the new family 06 Baseboard.
- **10.** Save the baseboard, and click Load Into Project, selecting the accurate project file if more than one file is open.
- **11.** Navigate to the view Exterior Window Sill, Typ. if it's not already open, and place the baseboard at the corner of the gypsum board and finished floor. The detail looks like Figure 11.14.



FIGURE 11.14 The sill detail with base

Sometimes, it is easier and more effective to simply use detail lines to create the necessary features in a detail. For these purposes, you want to create some flashing at the window sill.

- **12.** Choose the Detail Line tool, and select Medium Lines from the Line Style drop-down menu.
- **13.** Using the Detail Line tool, draw in some flashing for the window sill (Figure 11.15).



FIGURE 11.15 Adding flashing using detail lines

Families offer more functionality and versatility down the line for faster documentation, making them taggable objects using the Keynote tool.

Compare your finished detail with the c11-ex11.2end.rvt file, available in the download from the book's web page. You'll return to this detail again for the next exercise.

Exercise 11.3: Create a Repeating Detail Component

In the following exercise, you will create a custom repeating detail for the sill detail you've been working on. The exterior of the building is terracotta brick and will have visible joint work every 8" (200 mm). From the Chapter 11 downloadable files, open the cll-exll.3start.rvt file, or continue with your opened file if you've completed the previous exercise. Follow these steps:

- Select a new Detail Component family again. Choose Application > New > Family, and choose Detail Item.rft from the list.
- 2. Create a masonry joint 6" (150 mm) long and 3/8" (10 mm) high with a strike on one of the short ends (Figure 11.16) using a filled region with no hatch pattern.
- **3.** Save the family as **04** Grout, and load it into the project, selecting the correct open project file if more than one file is open.

1	
)	
 r	

FIGURE 11.16 The grout detail component

- 4. Click the Esc button to clear the active command. Back in the project file, go to the Annotate tab's Detail panel, open the Component flyout, and choose the Repeating Detail Component tool.
- **5.** Choose Edit Type from the Properties palette, and then click the Duplicate button in the Type Properties dialog.
- 6. Name the new type 04 Terracotta Grout, and click OK.
- **7.** Change the properties of this new type to reflect the detail component you just created and its spacing. Change only the following fields:

Detail: Set this field to 04 Grout, the family you just created.

Spacing: Set this value to 8" (200 mm).

8. The Type Properties dialog box looks like Figure 11.17. Click OK when you've finished.

e riopenies			
Family:	System Family: Repeating	Detail 🔻	Load
Type:	04 Terracotta Grout	•	Duplicate
			Rename
Type Parameter	rs Parameter	,	/alue
Type Parameter Pattern	rs Parameter		/alue ;
Type Parameter Pattern Detail	rs Parameter	04 Grout	/alue ;
Type Parameter Pattern Detail Layout	rs Parameter	04 Grout Fixed Distance	/alue ;
Type Parameter Pattern Detail Layout Inside	rs Parameter	04 Grout Fixed Distance	/alue ;
Type Parameter Pattern Detail Layout Inside Spacing	rs Parameter	04 Grout Fixed Distance	/alue ;



- **9.** With the Repeating Detail command still active, draw a line all the way up the left edge of the exterior wall, starting at the base of the view, placing the new joint over the terracotta exterior.
- **10.** Place one of the joints directly below the window sill, by using the Nudge tool to shift the detail into the right location. This appears on top of the flashing you drew earlier, so you'll want to move the flashing to the front.
- **11.** Select the flashing detail line, and choose Bring To Front from the Arrange panel. The completed detail looks like Figure 11.18.



FIGURE 11.18 The finished window sill detail

Although this detail needs annotations before you can think about placing it onto a sheet, you can begin to see how you have used the 3D geometry of the model and were able to quickly add embellishment to it in order to create a working project detail. Compare your finished detail with the cll-exll.3end .rvt file, available in the download from the book's web page. You'll return to this detail again for the next exercise.

Annotating Your Details

Notes are a critical part of communicating design and construction intent to owners and builders. No drawing set is complete without descriptions of materials and notes about the design. Now that you've created a detail, you need to add the final touches of annotations to communicate size, location, and materiality. The tools you will use for annotations are found on the same Annotate tab that you used to create details. These are the Dimension, Text, and Tag panels shown in Figure 11.19.

FIGURE 11.19 The Revit Architecture annotation tools

Dimensions

The Dimension panel is the first panel located on the Annotate tab. Revit Architecture provides you with a variety of options for dimensioning the distance between two objects, including Aligned, Linear, Angular, Radial, Diameter, and Arc Length dimensioning tools. The dimension tool you will use the most often is Aligned, located on the left side of the Dimension panel shown in Figure 11.19. It can also be found on the Quick Access toolbar \checkmark . Using the Aligned dimension tool is quite simple. Click once on the first reference object to start the dimension string, and click again on the second reference object to finish the dimension.

Tags

Tags are 2D view-specific elements that attach to modeled or detail elements to report information based on that element's type or instance properties. Any modeled or detail element can be tagged; however, they are most commonly used to identify your basic building blocks—doors, windows, wall types, and Certification Objective

> The Tag All tool is a quick way to tag everything in a view of a certain category. For example, you can tag all the windows shown in a floor plan with a single click.

rooms. You can add tags to your project by navigating to the Tag panel located on the Annotate tab. When you select the Tag by Category tool and then select an object in your model, Revit Architecture will automatically assign the correct tag type to the associated material. From there, you can enter the appropriate information within the tag object.

Text

Not all elements in Revit Architecture have materiality to them, and sometimes tags are not the best way to convey information. In these cases, you can use text. The Text tool is located on the Text panel of the Annotate tab.

When you're using text in your model, it's important to remember that text is not linked to any element or material; it's 2D view-specific information. If you label something with text or use text to call out notes, the text doesn't dynamically update as elements change in the model.

Exercise 11.4: Add Dimensions to Your Detail

In your detail, you have added aspects to the window family to reflect some of the details needed for construction. Now, with much of the linework and elements in the view, you need to annotate and add dimensions. From the Chapter 11 downloadable files, open the cll-exll.4start.rvt file, or continue with your opened file if you've completed the previous exercise.

1. Select the Aligned dimension tool, and place a dimension string from the grid line to the centerline of the wall, as shown in Figure 11.20.



FIGURE 11.20 Adding a dimension string

Certification Objective

Dimensions are dynamic in Revit Architecture and are easy to relocate. 2. Click Esc to clear the active command. Highlight the dimension string, and you see two sets of blue dots on either side. One set controls the length of the *witness line* (the line that extends from the
actual element you dimensioned to the tick mark), and the other (on top of the tick mark) controls the witness line's location.

- **3.** To place the dimension string in the accurate location, select the blue dot that controls the witness line location, and drag it to the exterior of the wall. The dimension automatically updates.
- **4.** Add another dimension string from the grid line to the back of the window jamb.
- 5. To relocate the text, grab the blue dot under the text and drag the text string to the right. Once the dimension text is outside the dimension string, Revit Architecture adds an arc associating the text to the dimension (Figure 11.21).



FIGURE 11.21 Modifying the text location

6. Add another dimension that locates the gypsum board relative to the grid line (Figure 11.22). By default, the exterior face of the gypsum board won't highlight to accept the dimension. With your mouse hovering over the right edge of the gypsum board, press the Tab key, and you can place the other side of the dimension string.



FIGURE 11.22 Dimensioning the wall location

7. To change the dimension text to eliminate the white masking region behind the text, highlight the dimension by left-clicking it, and select Edit Type from the Properties palette. The Type Properties dialog box for dimensions opens, as shown in Figure 11.23.

The dimension type properties allows you to change all the dimension settings: text, color, length of each dimension element, and so forth.

 $\overline{}$

TEXT	*
Width Factor	1.000000
Underline	
Italic	
Bold	
Text Size	3/32"
Text Offset	1/16"
Read Convention	Up, then Left
Text Font	Arial
Text Background	Opaque
Units Format	1' - 5 11/32" (Default)
Alternate Units	None
Alternate Units Format	[1235 [mm]]
Alternate Units Prefix	
Alternate Units Suffix	
Show Opening Height	
Suppress Spaces	
Other	*
Equality Text	EQ
<< Preview	OK Cancel Apply

FIGURE 11.23 Dimension type properties

- 8. Scroll to the bottom to find the Opaque value next to the Text Background option. This controls that white box behind the dimension. Set it to Transparent, and click OK. The dimension now has a transparent background.
- **9.** Add a dimension locating the window sill relative to the floor, as shown in Figure 11.24.



FIGURE 11.24 Dimensioning the window sill

10. To change the dimension string from the awkward length shown to a more reasonable value, you need to change the location of one of the two objects you've dimensioned. The floor probably isn't going to move, but you can reposition the window slightly. Select the window. The dimension string turns blue, and the numbers become very small (Figure 11.25).



FIGURE 11.25 To change the dimension string value, change the location of the objects dimensioned by selecting the window.

11. Select the blue text, and type 1' 4" (400 mm) in the text box (Figure 11.26). Press Enter. The window pushes up just a bit and resets the dimension string.



FIGURE 11.26 Entering a value into a dimension string

With all the dimensions on the detail, it should look like Figure 11.27. Compare your finished detail with the cll-exll.4end.rvt file, available in the download from the book's web page. You'll return to this detail again for the next exercise.



FIGURE 11.27 The dimensioned detail

Exercise 11.5: Add Tags and Text to Your Detail

From the Chapter 11 downloadable files, open the c11-ex11.5start.rvt file, or continue with your opened file if you've completed the previous exercise.

Now that you have embellished and dimensioned the detail, it's time to add some annotations in the form of tags and text. In this exercise, you'll tag the window as well as some of the materials in the detail to help identify these items to the contractor. Also, the shims you placed as part of the window family do not have a way to tag a material and need to be called out using text. Follow these steps:



1. Choose the Tag by Category button on the Annotate tab's Tag panel, and select the window.

Revit Architecture displays the warning shown in Figure 11.28. It tells you that Revit Architecture has added a tag, but that it has fallen outside of your view. By default, Revit Architecture places tags in the center of the element being tagged. In this case, the tag resides in the middle of the window cut in section, which is above your crop box.



FIGURE 11.28 The tag fell outside of the crop window.

- 2. Click Esc to clear the active command. Select the box that defines the crop region for the detail. Doing so highlights the crop box and also an invisible, dashed box called the *annotation crop box*.
- **3.** Drag the upper limit of the annotation box higher, and you will eventually see the Window tag you placed on the window (Figure 11.29).



FIGURE 11.29 Extending the annotation crop window

<

Crop regions can be turned on and off per view through the Properties palette. 4. Highlight the tag, and in the Options Bar deselect the Leader check box that is shown checked (Figure 11.30). Doing so lets you drag the tag down—leader free—and place it in the crop region.

Modify | Window Tags I Removing the leader from the Window tag

5. Choose the Material Tag button from the Tag panel on the Annotate tab. With the tag selected, mouse over the vertical panel shown in Figure 11.31. The material there has been prepopulated with 5/8" GYPSUM BOARD as a tag through the material (from the Manage tab). Select the material, and place the tag.



FIGURE 11.31 Using the Material tag

6. Notice that by default the tag has no arrowhead. Select the tag, and choose Edit Type from the Properties palette. Here in the tag's Type Properties dialog, you can assign an arrowhead. Choose 30 Degree Arrow for the Leader Arrowhead property, and click OK (Figure 11.32).

Girmy .	Material Tag	•	Load
Туре:	Material Tag		Duplicate
			Rename
Type Para	meters		
	Parameter		Value
Graphics	:		~

FIGURE 11.32 Adding an arrowhead to the tag

Material tags let you tag materials consistently throughout the model. If you tag something like Concrete once in the model, the material will remember the tag you used and show that same tag every time you tag it in any other view.

For materials that aren't already specified, Revit Architecture will display a question mark. Click the Material tag, and enter the text describing that material. Changes made to this material will be broadcast throughout the model.

- **7.** Choose the Text command on the Annotate tab. Doing so opens the Modify Text tab. The tools on the Format panel control the leaders, leader location, justification, and font formats, respectively.
- For now, leave the selections at the defaults, choose a location on the screen, and click the left mouse button. Doing so begins a text box. Type 1/2" SHIMS (Figure 11.33). Click the mouse to finish the text and hit Esc to clear the active command.



- Select the text you just created. To add a leader, click the Add Leader button at the upper left of the Format panel A.
- **10.** Move the text and leader into position with the other notes. In this way, you can complete the annotations on the detail (Figure 11.34) and begin the next one.



FIGURE 11.34 Finishing the detail

Compare your finished detail with the cll-exll.5end.rvt file, available in the download from the book's web page.



Creating Legends

Certification Objective Legends are unique views in Revit Architecture because you can place them on more than one sheet, which is not typical for most view types. These can be great tools for things such as general notes, key plans, or any other view type you want to be consistent across several sheets. It's important to note that anything you place inside a legend view—doors, walls, windows, and so on—will not appear or be counted in any schedules. Legend elements live outside of any quantities present in the model.

The Legend tool is located on the View tab. You can create two types of legends from this menu: a *legend*, which is a graphic display, or a *keynote legend*, which is a text-based schedule. Both legend types can be placed on multiple sheets, but for the following exercise, you'll focus on the legend.

The simplest type of legend would include notes such as general plan or demolition comments that would appear in each of your floor plans. More complex legends include modeled elements, such as walls.

You can add modeled elements to the legend view by expanding the Families tree in the Project Browser and navigating to the chosen family. Once a modeled element is added to a legend, you'll notice three sections on the Modify | Legend Components settings in the Options Bar. This menu is consistent for any of the family types you insert.

Family This drop-down menu allows you to select different family types and operates just like the Type Selector does for other elements in the model.

View The View option lets you change the type of view from Plan to Section.

Host Length This option changes the overall length (or, in the case of sections, height) of the element selected.

As part of the sample workflow, you may want to present some of the wall types as part of your presentation package to demonstrate the Sound Transmission Class (STC) of the walls and the overall wall assembly. Because these wall types will appear on all the sheets where you use them in the plan, you'll make them using a legend.

Exercise 11.6: Create a Legend

From the Chapter 11 downloadable files, open the c11-ex11.6start.rvt file, or continue with your opened file if you've completed the previous exercise.

📰 Legends 🔹

Legend

Keynote Legend

Legends by default are blank views; it's up to you to add content. 1. Choose the Legend button on the View tab's Legends flyout. Creating a new legend is much like creating a new drafting view.

A New Legend View dialog box opens (Figure 11.35), where you can name the legend and set the scale.

Name this legend WALL LEGEND, and choose 1" = 1'-0" (1:10) for the scale. Click OK to create the legend.

New Legend View	
Name:	WALL LEGEND
Scale:	
Scale value 1:	12
	OK Cancel

FIGURE 11.35 Creating a legend

- **3.** To add wall types or any other family to the legend view, expand the Families tree in the Project Browser and navigate to the Walls family. Expand this node, and then expand the Basic Wall node.
- Select the Interior Gyp 4 7/8" wall type, and drag it into the legend view.
- 5. Change the view's detail level in the view's Properties palette from Coarse to Medium or Fine so you can see the detail in the wall. Remember, you can turn off the thicker lines in the view by clicking the Thin Lines button in the Quick Access Toolbar (QAT).
- **6.** Highlight the inserted wall, and look at the Modify | Legend Components settings in the Options Bar (Figure 11.36).

Modify Legend Components	Family:	Walls : Basic Wall : Interior - Gvp 4 7/8"	•	View:	Section •	Host Length:	1' 6"	
----------------------------	---------	--	---	-------	-----------	--------------	-------	--

FIGURE 11.36 Select a legend component to access its properties in the Options Bar.

7. Change View to Section, and change Host Length to 1'-6" (500 mm).

The wall now looks like a sectional element. By adding some simple text and detail components, you can embellish the wall type to better explain the elements you're viewing (Figure 11.37).





8. Continue the exercise by adding the Exterior – Brick wall type to the legend along with some additional text notes.

Compare your finished legend with the cll-exll.6end.rvt file, available in the files you downloaded from the book's web page.

Now You Know

In this chapter you have learned to create a detail and enhance the detail with 2D elements filled regions, masking regions, detail lines, and components—to more accurately represent built conditions. You have also learned to annotate the detail using dimensions, tags, and text to convey more information. In addition, you have created a legend to show typical wall assemblies in your project.

The process of embellishing a model to reflect the design intent and detailing gets easier with practice. Remember that you won't have all the geometry you need in the 3D model to show the level of detail you'll need for full documentation. By embellishing the callouts and sections with additional information, you can quickly add the detailed information you need to show.

CHAPTER 12

Drawing Sets

While the building industry moves towards a building information model as a contract deliverable, we still need to produce 2D documents for construction and permitting purposes. Using the Autodesk[®] Revit[®] Architecture software, you can create these sets of drawings with more accuracy than in the past.

In this chapter, you'll learn to:

- Create a window schedule
- Create a room schedule
- Create a sheet list
- Customize schedules
- Arrange plan views on a sheet
- Activate and deactivate views
- Adjust crop regions
- Add schedules to a sheet
- Specify a sheet set for printing
- Adjust print settings
- Print documents

Schedules

Schedules are lists of model elements and their properties. They can be used to itemize building objects such as walls, doors, and windows; calculate quantities, areas, and volumes; and list elements, such as the number of sheets, keynotes, and so on. Schedules are a valuable, spreadsheet-based way to view information about the building objects in a model. Once created,

schedules are dynamically kept up to date when new elements are added or when changes occur to the model.

Understanding Schedules

In a non-BIM project workflow, creating schedules of building elements, areas, or other objects is one of the most laborious tasks for architects. When this process is performed manually, it can take a long time and is typically error prone. In Revit Architecture, schedules update automatically and are inherently accurate. Every building element you model in Revit has properties. For example, doors have properties like location, type, size, and material. All this information can be scheduled and quantified. As those doors are changed, the properties update in the schedule automatically so everything is always coordinated.

Because Revit Architecture is a bidirectional parametric modeling program, you are able to make changes to properties from a schedule view, thus updating the model. Continuing with the door example, you can change the material of a door in the schedule view, and the Material tags and presentation views will instantly update.

DOOR SCHEDULE								
			DOOR PANE					
ID	DESCRIPTION	WIDTH	HEIGHT	THK	COMMENTS			
Level 1								
101	Double-Glass 2	5' - 8"	7' - 0"	0' - 2"	Exterior Door			
103	Overhead-Rolling	8' - 0"	6' - 6"	0' - 2"				
104	Single-Flush	3' - 0"	6' - 8"	0' - 2"	Standard			
105	Single-Flush	3' - 0"	6' - 8"	0' - 2"	Standard			
109	Single-Panel 3	3' - 0"	6' - 8"	0' - 2"	Metal panel door			
110	Sliding-Closet	5' - 8"	6' - 8"	0' - 2"				
111	Sliding-Closet	5' - 8"	6' - 8"	0' - 2"				
112	Single-Glass 2	3' - 0"	6' - 8"	0' - 2"				
Level 2								
201	Double-Panel 1	6' - 0"	7' - 0"	0' - 2"				
202	Single-Flush	3' - 0"	6' - 8"	0' - 2"	Standard			
203	Single-Flush	3' - 0"	6' - 8"	0' - 2"	Standard			
204	Single-Glass 2	3' - 0"	6' - 8"	0' - 2"				
205	Single-Glass 2	3' - 0"	6' - 8"	0' - 2"				
206	Single-Glass 2	3' - 0"	6' - 8"	0' - 2"				
207	Sliding-Closet	5' - 8"	6' - 8"	0' - 2"				
Grand total	·							

Exercise 12.1: Create a Window Schedule

To begin, go to the book's web page at www.sybex.com/go/revit2015essentials, download the files for Chapter 12, and open the file c12-ex-12.1start.rvt.

- Go to the View tab, select the Create panel, click the Schedules button, and click the Schedule/Quantities button. The New Schedule dialog box opens.
- Click in the Filter List drop-down in the upper-left corner, and uncheck all of the disciplines except for Architecture. This will filter out the categories listed below.
- 3. From the Category list, select Windows. Click in the Name field and title your schedule New Window Schedule, as shown in Figure 12.1. Because this project has multiple phases, you want to make sure the phase is set to New Construction, since you don't need to schedule the windows you're *removing*. Click OK to continue.

Category:		Name:
Railings Ramps Roofs Roofs Specialty Equipment Stairs Structural Beam Systems Structural Columns Structural Foundations Structural Framing Topography Wills Windows	* III +	New Window Schedule Schedule building components Schedule keys Key name: Phase: New Construction

FIGURE 12.1 The New Schedule dialog

- 4. You should find yourself in the Fields tab of the Schedule Properties dialog. Choose the following properties from the Available fields column; then click the Add button. The properties should now be listed in the Scheduled fields column, as shown in Figure 12.2. If the order of the fields is incorrect, you can use the Move Up and Move Down buttons to reorder.
 - ► Type
 - Type Mark

🖬 Schedules 🔹 🛅 Sheet 🗔 T	
Schedule/Quantities	
Graphical Column Schedule	
Material Takeoff	
Sheet List	
Note Block	
View List	

New Schedu	ıle	
Filter list:	Architecture	-
Category: <mult Area Area Area</mult 	Architecture Structure Mechanical Electrical Piping	

The lower-left corner of the Fields tab of the Schedule Properties dialog has an Include elements in links check box. Enabling this option allows you to schedule across multiple files; it can be a useful tool on larger projects.

- ► Width
- Height
- ► Count

Fields Filter	Sorting/Grouping	Formatting	Appearance		
Available field	s:			Scheduled fields (in order):
Comments Construction Cost Description Family Family and T Finish Glass Head Head Height Heat Transfe High Range IfcGUID Image Keynote	Type ype r Coefficient (U)		Add> < Remove dd Parameter	Type Type Mark Width Height Count	
Edit	Delete			Edit	Delete
Windows	le fields from.	•		Move Up	Move Down
Include ele	ements in links				

FIGURE 12.2 Scheduled Fields

5. Click the Filter tab at the top of the dialog. Choose to filter by Type Mark, and then click does not equal from the drop-down list to the right. Finally, choose A from the last column. This allows you to remove certain window types from your New Window Schedule when desired (Figure 12.3).

!	Schedule Prope	rties	X
	Fields Filter	Sorting/Grouping Formatting Appearance	
	Filter by:	Type Mark	•

FIGURE 12.3 Schedule filter

- 6. Click the Sorting/Grouping tab. From the Sort by drop-down, choose Type. Uncheck the Itemize Every Instance option, which is located at the bottom left of the dialog.
- 7. Click the Formatting tab, and select Count from the Fields list on the left. Change the Alignment setting to Right. Then choose the Type Mark field from the list on the left, and change Alignment to Center so all the letters will align nicely.
- 8. Click the Appearance tab, check the Outline field, and choose Wide Lines from the drop-down. You will see this graphic formatting of the schedule only when it is placed on a sheet (Figure 12.4). We'll get to that later in this chapter.

Schedule	Proper	rties				X
Fields	Filter	Sorting/0	Grouping	Formatting	Appearance	
Grap	hics					
	Build s	chedule:	Top- Botto	down m-up		
	Grid	lines: 🗸	Thin Lir	ies	▼ Grid in headers/footers/spacers	
	Οι	ıtline: 🔽	Wide Li	nes	▼	

FIGURE 12.4 Schedule appearance

9. Click OK to commit all of these Schedule Properties changes. Revit opens your new schedule. In the schedule view, you can alter the column heading names by clicking inside the spreadsheet cells. Let's change the first column to **OPENING** and the second column to **TYPE**. Your schedule view should appear as shown in Figure 12.5.

<new schedule="" window=""></new>									
Α	В	С	D	E					
OPENING	TYPE	Width	Height	Count					
18" x 54"	D	1' - 6"	4' - 8"	1					
18" x 64.75"	Н	1' - 6"	5' - 4 3/4"	1					
28" x 63.5"	С	2' - 4"	5' - 3 1/2"	1					
29" X 48"	F	2' - 5"	4' - 0''	1					
29" x 60"	E	2' - 5"	5' - 0"	6					
29" x 64 3/4	G	2' - 5"	5' - 4 3/4"	1					
34" x 82"	В	2' - 10"	6' - 10"	2					
36" X 12"	J	3' - 0"	1' - 0"	2					

FIGURE 12.5 The New Window Schedule



10. Now look in the Properties palette of the schedule view, and find the Phasing header. Under it you will find the Phase Filter parameter. Set it to Show New and click Apply, or move your mouse into the schedule. Notice that the list of windows is much shorter now (Figure 12.6). Remember, in step 3 you set the phase of the schedule to New Construction; however, this phase setting does not customize the display of the elements in the schedule view. The Phase Filter view property is required to exclude model elements that were demolished in a previous phase.

	<new schedule="" window=""></new>					
Α	В	С	D	E		
OPENING	TYPE	Width	Height	Count		
18" x 54"	D	1' - 6"	4' - 8"	1		
28" x 63.5"	C	2' - 4"	5' - 3 1/2"	1		
34" x 82"	В	2' - 10"	6' - 10"	1		
36" X 12"	J	3' - 0''	1' - 0"	2		

FIGURE 12.6 New Window Schedule

11. This concludes Exercise 12.1. You can compare your results with the sample file c12-ex-12.1end.rvt in the files you downloaded from the Sybex website for this book.

MULTI-CATEGORY SCHEDULES

You can create schedules that include more than one category. Perhaps you want to schedule all the windows and doors together. The way to accomplish this is to choose the <Multi-Category> option from the top of the Category list in the New Schedule dialog. One limitation of the Multi-Category schedule is that you cannot schedule host elements such as walls, floors, and ceilings when using this type of schedule.

Exercise 12.2: Create a Room Schedule

Creating other schedule types is fairly simple if you follow the guidelines we just discussed as you step through the tabs in the Schedule Properties dialog box. You have one schedule under your belt, so let's try another—this time you'll create a room schedule.



To begin this exercise, open the file c12-ex-12.2start.rvt from the files you downloaded for this chapter.

1. Let's try a different method for starting a new schedule. In the Project Browser, right-click the Schedules/Quantities node, and then select New Schedule/Quantities (Figure 12.7).



FIGURE 12.7 Start a new schedule from the Project Browser.

2. Choose Rooms from the Category list in the New Schedule dialog box, verify that the phase is New Construction, and click OK.

- **3.** In the Fields tab of the Schedule Properties dialog, add the following fields from the Available fields column to the Scheduled fields column (in order):
 - Number
 - Name
 - ► Floor Finish
 - ▶ North Wall
 - ► East Wall
 - ► South Wall
 - West Wall
 - Area
 - Comments
- 4. Click the Filter tab and choose Filter by Name, does not equal, Room. This will filter out rooms that haven't been updated with a specific name representing their function (Figure 12.8).

Schedule Proper	ties	X
Fields Filter	Sorting/Grouping Formatting Appearance Embedded Schedule	
Filter by:	Name	•

FIGURE 12.8 Filter out unnamed rooms.

- **5.** On the Sorting/Grouping tab, sort by number, and then make sure the Itemize every instance option is checked in the lower-left corner.
- 6. On the Formatting tab, select the Area field, and set the alignment to Right. Multi-select the North, East, South, and West Walls by hold-ing down Ctrl when you click them; then set the alignment to Center. Click OK to get the schedule you see in Figure 12.9.

<room schedule=""></room>								
Α	В	С	D	E	F	G	Н	I
Number	Name	Floor Finish	North Wall	East Wall	South Wall	West Wall	Area	Comments
100	LIVING ROO	WOOD					307 SF	a.
101	DINING RO	WOOD					99 SF	a.
102	OFFICE	WOOD					71 SF	a.
103	1/2 BATH	WOOD					25 SF	a.
104	KITCHEN						134 SF	
200	BEDROOM	WOOD					161 SF	a.
201	BATH 1						39 SF	
202	BEDROOM	WOOD					121 SF	a.
203	BATH 2						41 SF	
205	ΗΔΙΙ	WOOD					95 SF	9

FIGURE 12.9 Room schedule

7. Now add a header to the four wall finish columns so you can visually group them. Click in the <Room Schedule> field (the brackets denote that this text is reporting the View Name parameter value). Find the Rows panel on the ribbon. Click Insert ➤ Below Selected. Notice that you now have a row of headers corresponding to the columns below (Figure 12.10).



	<room schedule=""></room>							
A	В	С	D	E	F	G	Н	I
Name	Number	Floor Finish	North Wall	East Wall	South Wall	West Wall	Area	Comments

FIGURE 12.10 New row inserted

- 8. Hold down the Shift key, and click the four cells that are directly above the D, E, F, and G columns. With the four columns selected, click the Merge Unmerge button in the Titles & Headers panel of the ribbon. This gives you one large cell. Now type Wall Finishes into this cell. Select the cells above A, B, and C using the Shift key to select them all, and then click Merge Unmerge; name this header Room Information. Merge the cells above columns H and I as well, and name this header Area.
- 9. You can add data about the room elements while in the schedule view (Figure 12.11). This is quite a bit easier than selecting the room elements individually in a floor plan and inputting data about the wall finishes. Click into the cell for the Living Room, North Wall, and type in Beige Paint. When you click into another cell of the same column, you can choose the previous text from the drop-down. You can change all of the cells to Beige Paint if you like.



<room schedule=""></room>								
Ro	om Informa	ation		Wall Fi	nishes		Ar	ea
Α	В	C	D	E	F	G	Н	I
100	LIVING ROO	WOOD	Beige Paint				307 SF	a.
101	DINING RO	WOOD	Beige Paint				99 SF	a.
102	OFFICE	WOOD	Beige Paint				71 SF	a.
103	HALL BATH	WOOD	Beige Paint				25 SF	a.
104	KITCHEN		Beige Paint				134 SF	
200	BEDROOM	WOOD	Beige Paint				161 SF	a.
201	BATH 1		Beige Paint				39 SF	
202	BEDROOM	WOOD	Beige Paint				121 SF	a.
203	BATH 2		Beige Paint				41 SF	
205	HALL	WOOD	Beige Paint				95 SF	a.

FIGURE 12.11 The finished room schedule

10. You can edit existing information, like the names of the rooms. Change the name of 1/2 BATH to HALL BATH by clicking into its cell, deleting the old text, and typing the new text. Now open Floor Plans, Level 1, and zoom into the bathroom; you'll notice that the room name has updated in the plan (Figure 12.12)!



FIGURE 12.12 The updated room name in plan view

This ends Exercise 12.2. You can compare your results with the sample file c12-ex-12.2end.rvt in the files you downloaded from the Sybex website.

Exercise 12.3: Create a Sheet List

The last kind of schedule we'll discuss is a sheet list, which creates a customized list of drawing sheets in your project. This can be especially useful on larger projects where the sheet list can get long.

To begin this exercise, open the file c12-ex-12.3start.rvt from the down-load for this chapter.

1. Select the Sheet List tool from the Schedules button on the View tab. The Sheet List Properties dialog box appears, starting with the Fields tab.

Creating a View List schedule can help you manage your project's views efficiently, especially when using the filtering built into schedules.



- 2. Move the Sheet Number and Sheet Name fields from the list on the left to the column on the right.
- **3.** On the Filter tab, choose to filter by Sheet Number. From the next drop-down, choose begins with.
- **4.** In the third field, enter the letter A. (Be sure to use an uppercase *A*, because Revit filters are case sensitive.) The filter should look like Figure 12.13.



FIGURE 12.13 Create a filter for specific sheets.

- **5.** On the Sorting/Grouping tab, choose to sort by Sheet Number, and make sure the Itemize every instance is checked.
- 6. When you've finished, click OK to close the dialog box. You should have a schedule with only sheet numbers that begin with the letter *A*. You can drag the right-most edge of column B to make room for the full sheet name if necessary (Figure 12.14).

<sheet list=""></sheet>				
A B				
Sheet Number	Sheet Name			
A050	SITE PLAN			
A100	FLOOR PLANS			
A150	REFLECTED CEILING PLANS			
A500	INTERIOR ELEVATIONS			

FIGURE 12.14 The filtered Sheet List

- **7.** With the sheet list view still active, click the Insert button in the Rows panel of the ribbon; then choose Data Row. You should see a row appear with a sheet name defined as Unnamed.
- 8. Change the name to FLOOR PLANS and the number to A100. You have created a placeholder sheet. These are useful when creating an outline sheet set and filling in sheet parameters, before you create an actual sheet with a titleblock in your project.





- **9.** Click the View tab of the ribbon; then find the Sheet Composition panel and click the Sheet button.
- In the New Sheet dialog box, choose the Sheets CD C1 22 × 34 : Sheets - CD - C1 titleblock and select A100 - FLOOR PLANS from the list of placeholder sheets below (Figure 12.15).
- **11.** Click OK to create the new sheet. You'll notice in the new sheet that the sheet number and sheet name have been automatically set using the information you added to the sheet list when the sheet was a placeholder.

Select titleblocks:	Load
Sheets B 11x17 · Sheets - B1 - Horiz	
Sheets CD C1 22 x 34 : Sheets - CD - C1	
None	
Select placeholder sheets:	
Select placeholder sheets:	

FIGURE 12.15 Add sheets using a placeholder.

This ends Exercise 12.3. You can compare your results with the sample file c12-ex-12.3end.rvt in the files you downloaded from the Sybex website.

Placing Views on Sheets

Throughout this book, you have created several different kinds of views, from plans to elevations to perspectives. Eventually, you will need to lay out those views on sheets so they can be printed or converted to PDF and sent to clients or team members for review. Let's walk through laying out these views on sheets and see how each view can be further manipulated once it's placed on a sheet.

You can use the placeholder sheet feature to create a cartoon set, where the index of drawings may be planned in advance. As the design progresses and sheets are created, the design team can pick from the list of placeholder sheets.

Exercise 12.4: Arrange Plan Views on a Sheet

To begin this exercise, open the file c12-ex-12.4start.rvt from the files you downloaded earlier.

A series of views has already been created in the exercise file. Let's use the sheet you just made and place some views on it using a simple drag-and-drop procedure:

- 1. Open the example file, and you should be on sheet A100. If not, expand the Sheets node of the Project Browser, and then double-click sheet A100 FLOOR PLANS.
- 2. Under the Views heading in the Project Browser, find Floor Plans, and expand the tree to locate the plan view Basement. Click the Basement view and drag the view out of the Project Browser and drop it onto sheet A100. Release the left mouse button, and the outline of the view displays. Click anywhere to complete the placement of the view.
- **3.** You can always adjust the location of the view on the sheet (Figure 12.16). The arrow keys on the keyboard are good for nudging the view.



FIGURE 12.16 The view placed on a sheet

4. Add the Level 1 floor plan view next by dragging and dropping it from the Project Browser onto the sheet. When you're placing another view on the sheet, you will see a dashed line in the center of the view. This is an alignment indicator (Figure 12.17); Revit is assuming you want the plan views to align on the sheet, and it is intelligent enough to aid you in this process. You can casually drag the views around on the sheet to find the alignment lines and ensure that your plans line up.



FIGURE 12.17 Aligning views on a sheet

To adjust the text in the view tags, start by selecting the view itself, not the tag element.

 \triangleright



- **5.** Add the Level 2 floor plan view to Sheet A100 next using the same alignment guide. After all three views are placed on the sheet, use the arrow keys to nudge them left or right, so they are more or less evenly spaced on the sheet, as in Figure 12.18.
- 6. Select the Basement view placed on the sheet. The view tag highlights in blue. Click the number 1, and change the value to A1 (as per the ConDoc drawing system, which locates the view port using the letters and numbers along the sides of the sheet).



FIGURE 12.18 All three plan views on a sheet

7. Select the Basement view again. Using the blue circular grips on the view tag line, drag the left and right ends of the line. You will most likely need to zoom in to successfully drag the grips. Repeat steps 6 and 7 on the other two views. The numbers of the views should be A6 and A11. The results should be similar to Figure 12.19.



FIGURE 12.19 The edited view tags

- 8. To finish organizing your sheet, add a few detail lines to divide the views. Click the Annotate tab of the ribbon, find the Detail panel, and then click the Detail Line tool. This activates the Modify | Place Detail Lines contextual menu. On the Line Style panel at the far right, choose Wide Lines from the drop-down.
- **9.** By default, the Line tool is active. You can select one of the nodes on the sheet between views and draw a vertical line between the Basement and Level 1 plans and again between the Level 1 and Level 2 plans (Figure 12.20).





FIGURE 12.20 Adding lines to the sheet

10. With these dividing lines in place, some of the text annotations in the Basement view are crossing the dividing line onto the Level 1 floor plan you added to the sheet; see Figure 12.21.



FIGURE 12.21 Text to be adjusted in the sheet view

11. Right-click the Basement view, and choose Activate View from the context menu (Figure 12.22). You can also double-click your mouse on the view to activate it.

The Revit workflow of activating a view to make changes in the context of a sheet is much like working in a model-space viewport while in paper space using the Autodesk® AutoCAD® software.

	/		
	Cancel		- 100A PANEL BOX
	Repeat [Detail Line] Recent Commands	•	- TUCK POINT
	Activate View		MASONRY FOUNDATION AS
	Hide in View Override Graphics in View	*	NEEDED. PAINT WITH WHITE MASONRY SEALER, - FILE EXISTING
j.	Create Similar Edit Family Select Previous		OPENING WITH GLASS BLOCK 4" CIP CONC SLAB CN GRAVEL BASE W/ VAPOR RETARDER
~	Select All Instances	•	- HVAC UNIT. CEILING MOUNTED.

FIGURE 12.22 Activate the Basement view.

12. With the view activated, notice that the other views on the sheet have become grayed out. Select the text box you want to adjust, and drag the right grip toward the left so the text wraps and no longer crosses the line (Figure 12.23).



FIGURE 12.23 Modifying the text box

- **13.** To complete your edits, you need to deactivate the view. Right-click on the Basement view, and choose Deactivate View from the context menu.
- This ends Exercise 12.4. You can compare your results with the sample file c12-ex-12.4end.rvt available in the download from the Sybex website.

the view before moving on to other steps. The Deactivate View command is available in the context menu.

You must deactivate

 \triangleleft



Exercise 12.5: Adjust Crop Regions

One very important aspect of composing views on sheets is to adjust the size of the view port so that only the most pertinent information is shown in the view. This helps to make an accurate set of drawings for the builder and estimator. Open the file c12-ex-12.5start.rvt you downloaded previously to get started.

- 1. The file should open to sheet K100 KITCHEN LAYOUT.
- 2. Zoom into view 1 called Kitchen. This is an enlarged plan of the kitchen layout, and it doesn't fit into the sheet boundary.
- **3.** Select the view, and from the ribbon's contextual panel at the far right, click the Activate View button.
- **4.** Once the view is activated, select the crop region bordering the view. Notice the blue, circular grips that appear at the midpoint of each edge (Figure 12.24). These are used for dragging interactively.



FIGURE 12.24 Crop region grips

 Drag the left grip so that the view fits inside the sheet boundary. Revit allows you to customize the shape of your view beyond a simple rectangle.



- 6. Select the view again, and then click the Edit Crop button from the contextual panel on the ribbon. Now you are in a sketch mode where the crop region boundary lines are pink and the rest of the model is visible but grayed out. This is very similar to editing a floor sketch boundary. Note the Draw panel in the ribbon.
- **7.** Select the Line tool. Draw two lines and then trim them to form an L-shaped crop that excludes the kitchen door.
- 8. When your screen is similar to Figure 12.25, click the green check mark to finish editing the sketch.





- **9.** Now turn off the visibility of the crop region by clicking the Hide Crop Region button. The View Control Bar at the bottom of the canvas has many useful buttons; the one we care about has a crop symbol and a light bulb.
- **10.** Click this, and notice that the crop region is no longer visible, but it is still masking unwanted areas.
- **11.** Finally, right-click and choose Deactivate View. This is a simple example, but adjusting crop regions in the context of other views on sheets is an essential Revit skill you'll use often. The finished plan is shown in Figure 12.26.



FIGURE 12.26 Finished enlarged plan

289





This ends Exercise 12.5. You can compare your results with the sample file c12-ex-12.5end.rvt in the files you downloaded previously.

Exercise 12.6: Add Schedules to Sheets

With your sheet of floor plans and kitchen details composed, you can finish the sheet set by adding the schedules you created earlier. Adding a schedule to a sheet is like adding any other view—you drag and drop it from the Project Browser onto the sheet.

To begin, open the file c12-ex-12.6start.rvt from the download.

- 1. The file should open to the sheet named G000 COVER SHEET.
- 2. Find the Schedules/Quantities node of the Project Browser. Grab the New Window Schedule from the Project Browser; then drag and drop it onto an open area on the sheet.
- **3.** Repeat this process for the Room Schedule and the Sheet List. Notice that the dotted blue alignment line appears and helps you line up the left edges so the final layout looks like Figure 12.17. You can redefine the column width of your schedules on the sheet.



FIGURE 12.27 Place the schedules on sheet G000.

- **4.** Start by selecting the Sheet List schedule. The schedule turns blue, and inverted triangle grips appear at the top of each column.
- 5. Grab one, and drag it left or right to change the column sizing.

This ends Exercise 12.6. You can compare your results with the sample file c12-ex-12.6end.rvt in the downloaded files.

FIXING SCHEDULES THAT RUN OFF THE SHEET

You can *split* larger schedules to make them easier to read on the sheet. When you select a schedule, you'll notice a blue cut symbol. This cut symbol lets you break the schedule into parts while on the same sheet. This can be especially handy if you have a long schedule, such as a room or door schedule that has too many rows to fit on your sheet vertically. Selecting this break symbol splits the schedule in half (and you can split it into half again and again). If you choose to separate your schedule in this fashion, it retains all the necessary information and continues to automatically fill dynamically as a single schedule would. You can also change the overall height of the schedule once it is broken by grabbing the grips at the bottom of the schedule and dragging them up or down.

Printing Documents

You will eventually need to print or create PDFs of your documentation sheets from Revit Architecture. You'll find that printing from Revit Architecture is straightforward because the process resembles that used in other Windowsbased applications.

Exercise 12.7: Explore the Print Dialog Box

Open the downloaded file c12-ex-12.7start.rvt to begin this exercise.

- To begin printing, you do not need to be in any particular view or sheet. Click the Application menu and then select the Print button to open the Print dialog (or use the keyboard shortcut Ctrl+P). There are several groups of settings for us to discuss.
- 2. Choose the printer you want to use from the Name drop-down menu at the top of the Print dialog. This can be a physical printer or a virtual one (such as Adobe PDF).



Sheet List

Note that both the Current Window option and Visible Portion Of Current Window option allow you to do a print preview.

If you add more sheets to your project, they won't automatically be added to this print set. You'll need to revisit this dialog box, add the sheets, and click the Save button.

- **3.** The next group box is named File, and it appears only if you are printing documents to a file instead of a printer. If you're using a PDF printer, then name the output something specific, and browse to the file location you desire. You should choose to combine multiple sheets into a single file. This is a very important property to double-check *before* printing!
- 4. The Print Range settings allow you to specify what you want to print. The Current Window option prints the full extent of the current view, regardless of what extents of that view are currently visible on your screen. The Visible portion of current window option prints only what you currently see in the frame of the open view. Note that both of these options allow you to do a print preview.
- 5. Click the Selected views/sheets option. Then click the Select button. This option allows you to choose multiple sheets or views to print at once. You cannot do a print preview, but you do end up saving time by batch printing (Figure 12.28).

Print Range	Options	
Current window	Number of copies:	1 🔺
$\bigodot\ensuremath{\mathbb{O}}$ Visible portion of current window	Reverse print order	
Selected views/sheets	Condice	
Exercise 12	Settings 11x17	
Select	Setup	

FIGURE 12.28 The Print Range, Options, and Settings properties

- **6.** The View/Sheet Set dialog opens. You should start out by clicking the Check None button. This will give you a clean slate.
- 7. At the bottom of the dialog is an important filtering check box. Uncheck the Views option, so that you're viewing only sheets. There should be three sheets; let's check each of them.
- 8. Click the Save As button, and name the sheet set Exercise 12 (Figure 12.29). This will speed up the process if you ever need to reprint this same set of sheets. Click OK twice to return to the Print dialog.

/iew/Sheet	Set		? X
Name:	Exercise 12	•	Save
Sheet:	A100 - FLOOR PLANS		Save As
Sheet:	G000 - COVER SHEET K100 - KITCHEN LAYOUT		Revert

FIGURE 12.29 Specify the sheet set.

- 9. Click the Setup button in the Settings group (refer back to Figure 12.28). The Print Setup dialog opens with options for print settings such as paper size, zoom, and orientation. You can also save these settings with a name so that you can reuse them later.
- 10. Choose your desired paper size. Then choose the desired Zoom level; for this exercise choose 50 percent. To print the sheets to a specific scale, remember that every view is assigned a scale factor; therefore, printing a view is a factor of that assigned scale. For example, if a floor plan is assigned a scale factor of 1/4"=1'-0" (1:50) and you would like to generate a print of the plan at 1/8"=1'-0" (1:100), set the Zoom level to 50 percent. Sheets should be printed at 100 percent for full size or 50 percent for a half-size set.
- Next, spend a few moments reviewing the options at the bottom of the dialog. Make sure to check the Hide Ref/Work Planes, Hide Scope Boxes, and Hide Crop Boundaries boxes. These three options let you decide whether to see elements that are usually only helpful references when modeling the project.
- 12. Check the Hide Unreferenced View Tags box. During the course of modeling your project, you usually create helpful working views that you don't end up using on sheets, such as elevations, sections, or detail callouts. If these views are not placed on any sheets, these view tags are blank and therefore unreferenced. This is a helpful way to avoid printing them.
- Once your options are set, click the Save As button, and name the current setup Exercise 12 - Half Size; then click OK. Like the sheet set, you can reuse these settings on future prints. Your Print Setup dialog should look like Figure 12.30. Click OK to close this dialog.

<

The print settings can be transferred to other project files if necessary, using the Transfer Project Standards tool located on the Manage tab in the ribbon.

Printer:	Adobe PDF		
Name:	Exercise 12	-	Save
Paper Size: Source:	Tabloid	Orientation Portrait Quandscape	Save As Revert Rename
 Center Offset fractional corner: 	Printer limit • 0.0000" =x 0.0000" =y	Remove Lines Using: Vector Processing Raster Processing	Delete
Zoom Fit to pay Zoom:	ge 50 % size	Appearance Raster quality: High Colors: Grayscale	
Options View link Hide ref/ Hide unr Region e	s in blue vork planes verk planes verk planes verk planes verk tags dges mask coincident lines	Hide scope boxes Hide crop boundaries Replace halftone with thin lines	

FIGURE 12.30 Print Setup dialog

- 14. Now you're back to the Print dialog. If you click OK, Revit will move forward with the printing process, sending the selected drawings to the printer listed at the top of the dialog. If you click Close, then the changes made in the dialog are saved, and the dialog closes without printing.
- 15. In the case that your print set includes some views with shading or other graphics effects like shadows, Revit will show you a warning similar to Figure 12.31. This means that Revit will use raster processing instead of vector processing for these views. See the following sidebar for some additional information about the differences between vector and raster processing.
- **16.** This ends Exercise 12.7. You can compare your results with the sample file c12-ex-12.7end.rvt in the files you downloaded earlier.



FIGURE 12.31 Raster printing is required for some effects.

USING VECTOR OR RASTER PRINT PROCESSING

Views in Revit Architecture can be displayed in several visual styles: Wireframe, Hidden Line, Shaded, Consistent Colors, and Realistic.

The Hidden Line visual style is generally used for construction documents and can utilize vector processing, which is faster and creates sharper edges.

The Shaded, Consistent Colors, and Realistic visual styles are generally used for presentation views, and they require raster processing to handle color gradients, shadows, and other graphic effects. Raster is slower and creates pixelated edges, but it also creates output that is the same as the screen display. If you choose raster, you can specify low-, medium-, high-, or presentation-quality output in the Print Setup dialog.

Now You Know

This chapter illustrated how to move your Revit project from modeling to documentation using schedules, sheets, views, and printing. You learned how to quantify windows, rooms, and sheet elements in the model by using a schedule. Then you learned to place views, edit views, adjust crop regions, and compose sheets. Finally, you learned how to adjust the print settings to get your model information printed out.
Workflow and Site Modeling

Understanding the Autodesk[®] *Revit*[®] Architecture software and how to use it is not a difficult challenge. The real challenge is determining how using Revit Architecture and building information modeling (BIM) will change your organization's culture and your project's workflow, especially if you're coming from a CAD-based environment. Revit Architecture can be more than just a different way to draw a line. In this chapter, we'll focus on what those changes are and provide some tools to help you manage the transition.

In this chapter, you'll learn to:

- Staff a BIM project
- Model a site
- Create a building pad
- Purge unused families and groups
- Manage links and images
- Reduce number of views
- Maintain project warnings

Understanding a BIM Workflow

Regardless of the workflow you have established, moving to Revit Architecture is going to be a change. You'll need tools to help transition from your current workflow to one using Revit Architecture. To begin, we'll cover some of the core differences between a CAD-based system and a BIM-based one.

Moving to BIM is a shift in how designers and contractors look at the design and documentation process throughout the entire life cycle of the project, from concept to occupancy. In a traditional CAD-based workflow, represented in Figure 13.1, each view is drawn separately with no inherent relationship between drawings. In this type of production environment, the team creates plans, sections, elevations, schedules, and perspectives and must coordinate any changes between files manually.



FIGURE 13.1 A CAD-based workflow

In a BIM-based workflow, the team creates a 3D, parametric model and uses this model to automatically generate the drawings necessary for documentation. Plans, sections, elevations, schedules, and perspectives are all by-products of creating an embellished BIM model, as shown in Figure 13.2. This enhanced documentation methodology not only allows for a highly coordinated drawing set but also provides the basic model geometry necessary for analysis, such as daylighting studies, energy, material takeoffs, and so on.

Using Revit Architecture becomes more than a change in software; it becomes a change in workflow and methodology. As various design specializations interact and create the building model (Figure 13.3), you can see how structure, mechanical, energy, daylight, and other factors inform design direction. You can also draw relationships between some of these elements that might not have been as obvious in a more traditional approach. Although some of these specialties (such as structure and mechanical) are historically separate systems, by integrating them into a single design model, you can see how they interact in relation to other systems within a building.



FIGURE 13.2 A BIM workflow



Analysis such as daylighting can inform your building orientation and structure. Depending on your glazing, it can also affect your mechanical requirements (as solar gain). You can see some of these effects through a computational fluid dynamics (CFD) model (used to calculate airflow). Geographic information system (GIS) data will give you your relative location globally and allow you to see how much sunlight you will be receiving or what the local temperature swings will be during the course of a day. As you can see, all of these variables can easily affect building design.

Staffing a BIM Project

As you rethink the process of design and documentation, one of the semantic changes you will need to address is staffing. When the workflow changes from CAD to BIM, staffing allocations, time to complete tasks, and percentage of work by phase are all affected as a by-product of the change of method.

In a CAD-based project, the level of effort during each of the phases is fairly well known. The industry has been using some metrics over the past several years that should be fairly familiar. There is modest effort and staffing in the conceptual design and schematic design phases, and this effort builds until it crescendos during construction documentation. At this phase, a CAD project can greatly increase the number of staff in an effort to expedite the completion of the drawing set. This staff increase can be effective because the CAD drawings are typically separate files, and moving lines in one drawing won't dynamically change another.

In a BIM-based framework, there is still a gradual increase of staffing and effort through conceptual design and into the schematic phase, but the effort during schematic design is greater using BIM than in CAD. During schematic design and design development, the project team is still performing all the same tasks that occur in any design process: testing design concepts, visualizations, or design iteration. The increase in effort during the early design phases lets the team use the parametric nature of the model to significantly reduce the effort later during construction documents, allowing for a decrease in the overall effort over the project cycle.

Project Roles Using Revit Architecture

With such a significant change in the effort behind a BIM-based project flow, it's also important to understand how this can change the various roles and responsibilities for the project team. The changes in traditional roles can become a

A common misconception of project management when teams are first moving from CAD to BIM is that staffing the project will be the same in both workflows.

barrier to many projects successfully adopting BIM. Project managers need to be able to predict staffing and time to complete tasks throughout the project phases and have relied on the past precedent of staff and project types to do this. Because a BIM-based project can significantly alter the project workflow, many of the historic timetables for task completion are no longer valid. However, a BIM-based project can be broken down into a few primary roles that will allow you some level of predictability through the various project phases. Although the specific effort and staffing will vary between offices (and even projects), some general roles will need to be accounted for on every project.

There are three primary roles on every BIM project.

Architect Deals with design issues, code compliances, clear widths, wall types, and so on

Modeler Creates content in 2D or in 3D

Drafter Deals with annotations, sheet layout, view creation, and detail creation

These roles represent efforts and general tasks that you need to take into account on any Revit Architecture project. We'll now cover each of these in a bit more detail and discuss how these roles interact with the project cycle.

Architect

The role of the architect is to deal with the architectural issues revolving around the project. As the model is being created, you will naturally have to solve issues such as constructability and wall types, set corridor widths, deal with department areas, and deal with other issues involving either codes or the overall architectural design. This role will be the one applying standards to the project (as in wall types, keynotes, and so on) and organizing the document set. This role will need to be present on the project from the beginning to ensure consistency of the virtual building creation and isn't necessarily limited to only one person.

This role also might or might not be a "designer." Although it is possible to do early design in Revit Architecture, many project teams prefer to utilize other tools such as Trimble SketchUp or even pencil and trace paper. The job of the architect is steering the creation of the building in Revit Architecture. Tasks for this role include the following:

- Leading the creation of massing (if used) and major architectural elements and then building from within the model
- Designing around code requirements and other building logistics
- Ensuring constructability and detailing aspects of the design

On a large project, these roles could also represent individual people, whereas in a smaller project they might be all the same person, or one person might carry multiple roles.

Modeler

The role of the modeler is to create all the 2D and especially the 3D content needed in the project. This content includes all the parametric families for elements such as windows, doors, casework, wall types, stairs, railings, and furnishings. Typically, this role is the responsibility of less experienced staff who might not be able to fulfill the role of architect. These less experienced positions tend to have longer periods of undisturbed time, making them better suited to deal with some of the longer, more involved tasks in modeling content. Finally, they also tend to have some 3D experience coming out of school. They might not have worked with Revit Architecture directly but possibly with Autodesk[®] 3ds Max[®] or Trimble SketchUp and are thereby familiar with working in a 3D environment. Tasks for this role include the following:

- Exchanging any generic elements used during early design stages for more specific building elements
- Creating and adding new family components and modifying existing components in the project
- Regularly reviewing and eliminating project warnings

Drafter

The role of the drafter is to create sheets and views and embellish those views with annotations or other 2D content. This role will be doing the bulk of the work needed to document the project. In earlier stages of the project, this role is typically assumed by either the architect or the modeler, but as documentation gets moving into high gear, it can quickly become the role of multiple people on a larger project. Tasks for this role include the following:

- Keynoting
- Dimensioning
- Setting up sheets and views
- Creating schedules

For a staffing-planning purpose, we are discussing the ideal times to bring in some of these various roles into the project. At the inception of a project design, a modeling role will be of the best use. This person can help create the building form, add conceptual content, and get the massing for the building established. If you're using the conceptual modeling tools, the modeler can even do some early sustainable design calculations. Once the design begins to settle down, you'll need an architect role to step into the project. Since the design is more resolved, it's a good time to begin applying specific materials and wall types and validating spatial requirements and the owner's program. The process of moving from the general "what" something is and "where" it is to the more specific "how" something is going to be assembled isn't new. It's the same process that was used to create both traditional and modern buildings (Figure 13.4).



FIGURE 13.4 Traditional and modern designs

During schematic design, you'll need to include the role of the drafter to begin laying out sheets and creating views. These sheets and views don't have to be for a construction document set yet, but you'll have to establish views for any schematic design submittals. If these views are set up properly, they can be reused later for design development and construction-document submittals as the model continues to gain a greater level of detail.

Adding Team Members to Fight Fires

In many projects, there comes a time when the schedule gets tight and project management wants to add more staff to a project to meet a specific deadline. In a 2D CAD environment, new team members would be added to help meet a deadline and would have the burden of trying to learn the architecture of the building, the thoughts behind its design, and how its various systems interact. In a Revit Architecture project, they have that same obligation, but they have the additional task of learning how the *model* goes together. The model will have constraints set against various elements (such as locking a corridor width) as well as various digital construction issues (such as how floors and walls might be tied together, what the various family names are, or workset organization). This ramping-up period consumes additional time.

Regardless of planning, deadlines escape the best of architects and project managers. It's a good idea to know when and how you can staff to make sure you meet deadlines. Keep in mind that any team members new to the project have to learn about *both* the design and the model they have been thrown into; follow these suggestions so new staff can help production and don't accidentally break anything along the way:

Create content, content, content. You will find that you are making model families or detail components until the end of the project. This process will help get the newbie engaged in a specific part of the project and also isolate them until they learn more about how the model has gone together.

Put them into a drafting role. Even if this isn't their ultimate role on the project, having staff new to the design help create views and lay out sheets will get them familiar with the architecture while still allowing the team to progress on the document set.

Start them to work on detailing. Every project can always use someone who knows how to put a building together. If you have someone new to the project and possibly even new to Revit Architecture, let them embellish some of the views already created and laid out on sheets. These views can be layered with 2D components, linework, and annotations.

Modeling a Site

In the previous sections of this chapter, you learned about the fundamental roles and workflow for your project team. Now let's talk about some other less frequently used tools. Another set of tools you should become familiar with are the site tools. They allow you to create a context in which your building models can be situated. For example, a toposurface will create a hatched area when you view your building in a section, and it will function as a hosting surface for site

What you'd like to avoid, if possible, is adding staff during the construction-document phase. In a BIM/Revit Architecture workflow, this can sometimes cause more problems than it solves and slow down the team rather than get work done faster. components such as trees, shrubs, parking spaces, accessories, and vehicles (Figure 13.5).



FIGURE 13.5 A toposurface can host components such as trees, entourage, and vehicles.

The site tools in Revit Architecture are intended only to be used for the creation of basic elements, including topography, property lines, and building pads. Although editing utilities are available to manipulate the site elements, these tools are not meant to be used for civil engineering like the functionality found in Autodesk[®] AutoCAD[®] Civil 3D[®].

In the following sections, you'll learn about the different ways to create and modify a toposurface and how to model a building pad in a toposurface.

Toposurface

As its name suggests, a toposurface is a surface-based representation of the topography context supporting a project. It is not modeled as a solid in Revit Architecture; however, a toposurface will appear as if it were a solid in any section cut view, as in the 3D view with a section box enabled shown in Figure 13.6.

Certification Objective





FIGURE 13.6 A toposurface appears as a solid in a 3D view only if a section box is used.

You can create a toposurface in three ways: by placing points at specific elevations, by using a linked CAD file with lines or points at varying elevations, or by using a points file generated by a civil-engineering application. You'll create a site from an imported CAD file in the first exercise.

A common workflow you may encounter when creating the topography context involves the use of CAD data generated by a civil engineer. In this case, the engineer must create a file with 3D data. Blocks, circles, and contour polylines must exist in the CAD file at the appropriate vertical elevation to be used in the process of generating a toposurface in Revit Architecture.

Certification Objective

Building Pad



A *building pad* in Revit Architecture is a unique model element that resembles a floor. It can have a thickness and compound structure, it is associated with a level, and it can be sloped using slope arrows while you're sketching its boundary. The building pad is different from a floor because it will automatically cut through a toposurface, defining the outline for your building's garden level or basement.

Exercise 13.1: Model a Toposurface

In the following exercise, you will download a sample DWG file with contour polylines. You must link the file into your Revit Architecture project before creating the toposurface. Here are the steps:

- 1. Create a new Revit Architecture project using the Architectural Template.
- Download the file c13-ex13.1Site.dwg from this book's web page, www.sybex.com/go/revit2015essentials.
- 3. Activate the floor plan named Site in the Project Browser.
- Go to the Insert tab in the ribbon, and click the Link CAD button.Select the c13-ex13.1Site.dwg file, and set the following options:
 - Current View Only: Unchecked
 - ► Import Units: Auto-Detect
 - ► Positioning: Auto Center To Center
 - ► Place At: Level 1
- **5.** Click Open to close the dialog box and complete the insertion of the CAD link. Open a default 3D view to examine the results (Figure 13.7).



Certification Objective 6. Click the Toposurface button on the Massing & Site tab in the ribbon.

- **7.** In the Tools panel on the Modify | Edit Surface tab, select Create From Import and then choose Select Import Instance.
- **8.** Click the linked CAD file, and the Add Points From Selected Layers dialog box appears (Figure 13.8).
- **9.** Click the Check None button, and then select the layers C-TOPO-MAJR and C-TOPO-MINR.

Add Points from Selected Layers	X
	Check All
C-OVHD	Check None
C-PAVE C-PROP	Invert
C-TOPO-MAJR C-TOPO-MINR	
-	
4	
OK Cancel Apply	Help

FIGURE 13.8 Select only the layers containing 3D contour information.

- **10.** Click OK to close the dialog box. Revit Architecture may take a few seconds to generate the points based on the contour polylines in the linked file, but they will appear as black squares when they have all been placed.
- 11. If you want to use fewer points to define the toposurface, click the Simplify Surface button in the contextual ribbon, and enter a larger value such as 1'-0'' (300 mm), and click OK.
- **12.** Click the Finish Surface button in the contextual ribbon to complete the toposurface. Change the visual style of the view to Consistent Colors to examine your results.

Upon completion, your toposurface should resemble c13-ex13.lend.rvt file, available for download from the book's web page.

All of the active layers in your CAD file will appear in this dialog box. To ensure that your CAD file will be usable for a 3D toposurface, isolate and rename the contour lines as their own linetype within the CAD file.

Exercise 13.2: Create a Building Pad

The process to create a building pad is virtually identical to that of creating a floor. Let's run through a quick exercise to create a building pad in a sample project:

- 1. Download the file c13-ex13.2start.rvt from this book's web page and open it.
- 2. Activate the floor plan named Site in the Project Browser. You see an existing topographic surface and a property line. Notice that reference planes were created to demarcate the required zoning setbacks from the property line. Foundation walls have been created in these reference planes.
- 3. Activate the Cellar floor plan from the Project Browser.
- **4.** Go to the Massing & Site tab in the ribbon, and click the Building Pad button.
- **5.** In the Properties palette, change the Height Offset From Level value to **0**.
- 6. Switch to Pick Walls mode, if not already selected, in the Draw panel of the contextual ribbon, and then click the inside edges of the four foundation walls. You can use the Tab+select method to place all four lines at once.
- **7.** Click the Finish Edit Mode button in the contextual ribbon to complete the sketch.
- 8. Double-click the section head in the plan view to examine your results. Notice that the top of the building pad is at the Cellar level and the poche of the topographic surface has been removed in the space of the cellar (Figure 13.9).



FIGURE 13.9 This section view illustrates how the building pad adjusts the extents of the topographic surface.

You don't have to create a property line and walls before creating a building pad. You might create a building pad before any other building elements. Upon completion, your building pad should resemble c13-ex13.2end.rvt file, available for download from the book's web page.

Adjusting the Section Poche for Topographic Surfaces

If you want to customize the settings for the fill pattern and depth of the poche, click the small arrow at the lower right of the Model Site panel on the Massing & Site tab of the ribbon to open the Site Settings dialog box shown here:

	🔽 . Ado	At Interv litional Co	als of: ontours:	10' 0"	Passing Thr	ough Elevation: 0' 0
		Start	Stop	Increment	Range Type	Subcategory
	1	0' 0"	1000'	1'0"	Multiple Val	Secondary Conto
	_		<u>i</u>	l	<u> </u>	
				Insert	Delet	e
S	ecti	on cut m	aterial:		Elevation o	f poche base:
S	ecti Site	on cut m : - Earth	aterial:		Elevation o	f poche base:
S	ecti Site	on cut m : - Earth erty Data	aterial:		Elevation o	f poche base:
P	ecti Site rop	ion cut m : - Earth erty Data e Display	aterial:		Elevation o	f poche base:

Performing Quality Control on Your Model: Keeping an Eye on File Size

You can take several measures to ensure that your model is a smooth-running and efficient machine. From time to time, ideally after major project milestones, someone on the project team should oversee the following steps to manage your model's file size and number of warnings.

Watch the size of your file. It's a good metric for general file stability. A typical Revit Architecture file size for a project in construction documents will be between 100 MB and 250 MB (250 MB is on the high side of file sizes). Beyond that, you will find that the model will be slow to open and hard to rotate in 3D views, and other views, such as building elevations and overall plans, will also be slow to open.

Should your file become large or unwieldy, you have several ways to trim the file down and get the model lean and responsive again.

Purging Unused Families and Groups

On the Manage tab is a command called Purge Unused. This command removes all the unused families and groups from your model by deleting them. Many times in a design process you will change window types or wall types or swap one set of families for another. Even if those elements are not being used in the project, they are being stored in the file, and therefore when the file is opened, they are being loaded into memory. Depending on the stage of your project, you should periodically delete these elements from the model to keep your file size down.

Select the Manage tab, and choose Purge Unused on the Settings panel. Depending on the size of your model and how many families you have loaded, it might take Revit Architecture a few minutes to complete this command.

After Revit Architecture is done thinking, it will provide you with a list of all the families and groups in the file that are not actively in a view (Figure 13.10). At this point, you have the option to select the elements you want to delete or to keep and remove the rest.

⊟_[0] Views	Check All
Elevation	
Section	Check None
🖕 🖳 Families	
Annotation Symbols	
Cable Trays	
Ceilings	
Columns	
Constructions	
Cover Type	
ii Curtain Panels	=
Eurtain Wall Mullions	
Detail Items	
Division Profiles	
i Doors	
ii Floors	
Furniture	
Parking	
Railings	
Site	
Stairs	
Structural Columns	
Structural Foundations	
Structural Framing	
Walls	
	*
ote : Only items that are not in use and have	no dependencies may be deleted
umber of items checked:	331

FIGURE 13.10 The Purge Unused dialog box

<

Don't worry—if you find you need a family you've removed, you can always reload it.



We don't recommend you use this command in the early stages of design, mainly because your file size won't be that large early on and purging at this stage would eliminate any preloaded families that you might have included in your template. During schematic design and design development, you are typically going through design iteration and will likely be adding and removing content regularly. It can become a hassle to have to constantly load or reload families into the model. If your model is not suffering from performance issues or the file size isn't unruly, it's not necessary to perform a Purge Unused command.

Managing Links and Images



Another way to manage your project's file size is to remove all unused linked files and raster images from your model. If you've linked CAD files from your civil engineer or other consultants and no longer need them as a reference in your model, removing them will also unload that stored data from your model. In addition, if you've imported raster images into your project, deleting them can significantly reduce your file size. It is good practice to periodically remove these types of files from your model, especially after major deadlines, if they are not actively being used in your project.

To access these options, find the Manage Project panel on the Manage tab. Notice the Manage Links and Manage Images tools. These two commands allow you to remove any linked CAD files, Revit files, Point Cloud files, or DWF files, as well as any raster images not required for your project. Click Manage Links to remove any unwanted files, browse to the appropriate tab, select the file to delete, and click Remove. Manage Images works similarly; click Manage Images, highlight the image you want to remove, and click Delete.

Cutting Down on the Number of Views

The ability to quickly create views in a model is one of the fast and easy benefits of using Revit Architecture. This ability can also be a detriment, though, if it is not managed. Beyond the hassle of having to sort through many views to find the one you need, having too many views in Revit Architecture can also impact your performance and file size.

Obviously, a number of views are needed in the model to create the construction documentation. In addition, you will find yourself creating views to study the design, deal with model creation, or view the building or project from a new angle. These types of working views will never make it to the sheet set, and some will be used only for brief periods.

HOW MANY WORKING VIEWS IS TOO MANY?

How many working views is too many to have in your model? The obvious answer is that when performance begins to suffer, you need to start looking at ways to make the model lean and speed up response times. We had a project team new to Revit Architecture, and they were complaining about the file being slow to open and manipulate. When we reviewed their model, the file size was around 800 MB! We were surprised that they were able to do any work at all.

One of the first things we did to get the file size down was look at all the views that were not on sheets. More than 1,200 views were not being used. Deleting those views, paired with a Compact File save (found in the File Save Options dialog box), reduced the file size to 500 MB. Although the result was still high, you can see the impact that keeping too many views has on file size.

Dealing with Warnings

An important way to troubleshoot your model is to use the Review Warnings tool. This tool will do very little to affect your overall file size, but it will alert you to problems in the model. Warnings should regularly be addressed to ensure file stability. To open the Review Warnings dialog box, shown in Figure 13.11, click the Warnings button on the Inquiry panel of the Manage tab. The dialog box lists all warnings still active in your project file.

, z
*t a
t a
et a
ng.
´
=
ed

IDs of Selection Select by ID Warnings Inquiry

FIGURE 13.11 The Warnings dialog box

Certification Objective

Errors and warnings are all essentially types of issues Revit Architecture has when it tries to resolve geometry, conflicts, or formulas that do not equate. Things that appear in this dialog box include instances of multiple elements sitting directly on top of each other, thereby creating inaccurate schedule counts; wall joints that do not properly clean themselves up; wall and room separation lines overlapping; stairs that have the wrong number of risers between floors; and so on. This dialog box shows you all the times the yellow warning box appeared in the bottom-right corner of the screen and you ignored it. Errors that go unchecked can compound to create other errors and can also lead to inaccurate reporting in schedules or even file corruption. Check the Warnings dialog box regularly as part of your periodic file maintenance, and try to keep the number of instances to a minimum.

Notice that the Warnings dialog box has an Export feature. Use this feature to export your error list to an HTML file so you can read it at your leisure outside the model environment (Figure 13.12). You can also pull this list into a Microsoft Word or Excel document so you can distribute the errors across the team to be resolved.

Error message	Elements
Highlighted walls are attached to, but miss, the highlighted targets.	Workset1 : Walls : Basic Wall : Interior - 4 7/8" Partition : id 230670 Workset1 : Floors : Floor : Wood Joist 8" - Attic : id 682650
Highlighted walls are attached to, but miss, the highlighted targets.	Workset1 : Walls : Basic Wall : Generic - 5" : id 260324 Workset1 : Ceilings : Compound Ceiling : TYPE B - GWB on Furring - Mark SLOPED : id 712355
Highlighted walls are attached to, but miss, the highlighted targets.	Workset1 : Ceilings : Compound Ceiling : TYPE A - 3/8" Laminated Drywall - Mark 8' - 3" : id 546901 Workset1 : Walls : Basic Wall : Generic - 6" : id 941926
Highlighted walls are attached to, but miss, the highlighted targets.	Workset1 : Floors : Floor : Wood Joist 8" - Attic : id 682650 Workset1 : Walls : Basic Wall : Interior - 4 7/8" Partition : id 722087
Highlighted elements are joined but do not intersect.	Workset1 : Walls : Basic Wall : Exterior - Existing Wood Shake : id 199956 Workset1 : Walls : Basic Wall : Interior - 5 1/2" Partition : id 212840
Highlighted elements are joined but do not intersect.	Workset1 : Walls : Basic Wall : Interior - 5 1/2" Partition : id 207075 Type : Workset1 : Walls : Chimney 5 : Chimney 5 : id 285404
Highlighted elements are joined but do not intersect.	Workset1 : Walls : Basic Wall : Generic - 15" : id 213525 Workset1 : Walls : Basic Wall : Interior - Type 4A -2 1/2" Furring Partition Foundation Wall : id 1319154
Highlighted elements are joined but do not intersect.	Workset1 : Walls : Basic Wall : Generic - 15" : id 214350 Workset1 : Walls : Basic Wall : Interior - Type 4A -2 1/2" Furring Partition Foundation Wall : id 1319064

FIGURE 13.12 Exporting errors and warnings

In the example shown in Figure 13.12, using the Phillips Place model, the file has 118 errors and warnings. How many errors in a file are too many? Much of that depends on your model, your computer's capabilities, the error types, and your deliverable. For instance, if you are delivering a BIM model to your client or to the contractor, you might have a zero-error requirement. In that case, no

errors are acceptable. If you are still actively in the design phase of the project, however, you will always have some errors—it is an inescapable part of the iteration process. As you refine the drawings, errors will be resolved; and as you add new content to the model that is in need of resolution, new errors will be created. If you are not worried about a model deliverable, you can get away with having fewer than 1,000 errors in the project without too much trouble. That said, the cleaner the model, the smoother it will run.

Now You Know

In this chapter you have learned how to transition from a 2D CAD environment to a Revit Architecture BIM workflow and staff a BIM project. You have also learned to model a site and create a building pad—some of the lesser-used (but just as important) tools in Revit Architecture. In addition, you have learned to perform quality control measures on your model—purge unused families and groups, manage links and images, reduce the number of views, and maintain project warnings—to ensure that your Revit Architecture projects are quick and responsive.

Using Revit Architecture means understanding BIM as a workflow and process at all levels in your office and at all phases of your project. Being prepared for a process change as well as a software change will help you become successful as you move into BIM.

Repeating Objects, Best Practices, and Quick Tips

This chapter provides an overview of different methods for repeating objects in the Autodesk[®] Revit[®] Architecture software. We will also discuss tips, optimizations, and best practices to help keep your project files running smoothly.

In this chapter, you'll learn to:

- Use repeating objects
- Optimize performance
- Utilize best practices
- Use quick tips and shortcuts
- Locate additional resources

Repeating Objects

Revit Architecture offers several approaches to repeat geometry throughout your project. Some are better suited for specific conditions depending on your project, so we'll provide an overview for each, along with key takeaways.



Component Families As outlined in Chapters 5 and 6, component families are best described as anything manufactured away from the job site and used throughout your project files. Component families are the core type of repeating object you will utilize. They can be constructed to be parametric by containing multiple types of the same family; think of one door with 10 types to represent variations in standard sizes. Component families can also be used with (and are a critical aspect of) groups, links, and assemblies.

The following are the key takeaways:

- Component families can contain types. Instead of creating separate door families, you can create one, and you can create multiple types within the family. Each type can be configured with parameters to flex the geometry to match specific sizes or visibility requirements.
- Component families can be saved outside the project as standalone RFA files and loaded back in or into other projects. This allows for the creation of shared libraries so the entire office or multiple offices can utilize the same components.
- Component families can be 2D or 3D. If a component family simply needs to be quantified or scheduled but isn't visible outside plan orientation views, it could initially be created as 2D geometry. Later if the project needs changing, the family can always be modified.

age	Modify		
)[6]		

Groups Groups are collections of project objects such as system families, component families, or detail items. Model groups are collections of 3D geometries, whereas detail groups are strictly 2D. Groups are easily created by selecting the objects you want to include in the group and choosing Create Group on the ribbon. Creating a group will generate a single element that contains a collection of objects (which also makes it easy to move everything together). A good use case for groups is a condominium or apartment project. For typical units or apartments that will appear more than once in the project, you can select the objects and create a group. This group can then be copied or inserted at multiple project locations. Edit one group type, and all instances will update to match.

The following are the key takeaways:

- A group instance can automatically be converted to a link at any time by selecting the group and choosing Link on the contextual ribbon panel.
- Groups can be saved out of a project as stand-alone project files (right-click the group type in the Project Browser and choose Save Group).
- Group members can be excluded from a group instance. This is extremely powerful for groups that may have one or two variations (but otherwise are identical). Instead of creating a new group type, Tab+select the group member you want to exclude

from the group instance, and click the Exclude symbol that appears near the element. Should you need the member back, Tab+select the group again, and click the Restore Excluded Group Member symbol.

• A wall in the project can still join with a wall inside a group.

Assemblies Assemblies are similar in many aspects to groups but with some unique tools directed toward construction workflows. Assemblies are collections of project objects similar to groups, organized in the Project Browser, along with any associated assembly views. To create an assembly, select the objects you want to include in the view, and choose Create Assembly on the ribbon.

The following are the key takeaways:

- Revit automatically detects whether changes to an assembly make it unique and, if so, creates a new assembly type.
- Assemblies have an exclusive tool called Assembly Views. These views are organized in the Project Browser (under the assembly) and create isolated views of the specific assembly type only. To create assembly views, select an assembly, and click Create Views on the ribbon.
- Assemblies do not allow as many object categories to be added as groups do. There are restrictions on some object categories (they cannot be added to the assembly) such as other assembled objects, annotation/detail items, groups, imports, links, model lines, masses, rooms, images, curtain systems, stacked walls, or curtain walls.

Revit Links Revit project files can be linked into one another. This is useful not only to divide large projects or campus buildings but also to repeat geometry. For example, your project may have identical wings or buildings on campus. The Revit project can be linked in and even allows for copies of the link to be created (all instances will update if reloaded). Links also have project-wide controls under Manage Links. Here you can reload, unload, or entirely remove the link from the host project.

The following are the key takeaways:

A link can be bound into the project (which will place all geometry into a new group). Simply select the link instance and choose Bind Link on the ribbon.



age Modify



- A link can be copied, mirrored, rotated, or further modified. There can also be multiple instances of the same link.
- Under Visibility/Graphic Overrides, there is a Revit Links tab. Changing the display settings between By Host View and By Linked View allows the link to follow the settings of the host view or use the appearance settings of the link view.
- A wall in the host project cannot join with a wall in the link.

Optimize Performance

You can optimize your hardware in a number of ways to get the most out of your configuration. You should first look at the minimum hardware specifications for a computer running Revit Architecture. Autodesk has published those requirements on its website, and they are updated with each new release of the application. You can find the current specs at www.autodesk.com/ revit; choose Features and then System Requirements under the Autodesk Revit Products page. Beyond the default specifications, you can do a number of things to help keep your files nimble. This section contains some additional recommendations.

Figuring Out How Much RAM Your Project Will Need

You can use a rough formula to figure out how much memory you're actually going to need for your project. The OS and other applications such as Microsoft Outlook will use some of your RAM, but you can predict how much RAM Revit Architecture will need to work effectively. The formula is as follows:

> (model size in Explorer \times 20) + (linked file sizes \times 20) = active RAM needed for Revit

Let's look at a couple of examples to demonstrate how this works. You have a project file with no linked files, and the file size on your server is 250 MB. So, $250 \times 20 = 5,000$ MB, or roughly 5 GB of RAM to operate.

In another example, you have a 300 MB file, a 100 MB structural model linked in, and four CAD files at 5 MB each.

 $(300 \times 20) + (100 \times 20) + (20 \times 20) = 8,400$ MB, or roughly 8.4 GB of RAM. For this example specifying at least 10–12 GB of RAM for the workstation would be recommended. The one area where it can be difficult to predict, since each project file varies, is when upgrading a project. Upgrading a project is usually the most memory-intensive operation in Revit. Since it is a one-time operation (for each release), you can dedicate one workstation for this task. Specify one workstation with additional memory for upgrading, if you find it necessary.

Reducing File Size

The next area to improve model performance is to reduce your file size so you're not using as much RAM. Here are some tips to do that and thereby improve your file speed:

Close your views. Close windows you're not using to help minimize the drain on your resources. It's easy to lose track of how many views are open, even if you're concentrating on only a few views—and the more you open, the more information you will load into active RAM. If your main view is maximized, you can use the Close Hidden Windows tool to close all the windows but your active one; on the View tab, click the Close Hidden Windows button (it's also conveniently located in the Quick Access toolbar). You can also assign this command to a keyboard shortcut such as XX.

Delete or remove unused CAD files. While working on a project you will often want to load content from another source to be used as a background. This could be a client's CAD as-built drawings or a consultant's mechanical, electrical, and plumbing (MEP) design. You might link or import these files into your drawing and forget about them during the busy course of the project. As you've seen from the earlier tips on RAM use, all these small files add up. Getting rid of them can speed up your file and is good housekeeping. If the file is linked, you can remove it using the Manage Links button from the Insert or Manage tab. Note that the Unload button does not remove it from the Revit Architecture project. If it is inserted, right-click an instance of the CAD file, and choose Select All Instances from the context menu. Clicking Delete will then remove all the instances in the view or project depending on your Select All Instances choice.

Link instead of importing CAD files. As a general rule, always link a CAD file rather than import it. You generally have greater control using a link than using imported geometry. The link can be removed or unloaded from the project and all views with a single action. A CAD link is similar to an Xref in Autodesk[®] AutoCAD[®] software and will update if the original CAD file is modified. An imported CAD file may be spread across several different views and is more difficult to hide or remove from specific views or the entire project. It also has no



association to the original CAD file and will not subsequently update if modified outside the Revit project.

Turn on volume computation only as needed. Calculating the volumes on a large file can slow down your model speed immensely, especially when modifying bounding elements such as walls. Volume calculations are typically turned on when exporting to gbXML, but sometimes teams forget to turn them back off again. Volumes will recalculate each time you edit a room, move a wall, or change any of the building geometry. Turn off this option using the Area And Volume Computations dialog box found below the Room & Area panel on the Architecture tab (Figure 14.1).

Area and Volume Computations				
Computations Area Schemes				
Volume Computations				
Volumes are computed at finish faces.				
Areas only (faster)				
C Areas and Volumes				
Room Area Computation At wall finish At wall content At wall core jayer At wall core center				

FIGURE 14.1 Choose the Areas Only setting to minimize unneeded computations.

Utilize Best Practices

Good file maintenance is critical to keeping your files running smoothly and your file sizes small. Here are some best practices and workflows identified in other areas of the book but consolidated in this section as a quick reference:

Manage the amount of information shown in views. An overload of information in views not only will make them look cluttered but also will adversely affect project performance. Show only what you need to show in a view. Do this by minimizing the level of detail, view detail, view depth, and view content. Here are some simple tips to keep your individual views working smoothly:

Minimize the level of detail. Set your detail level, found in the View Control Bar, relative to your drawing scale. For example, if you're working on a 1/8'' = 1'-0'' (1:100) plan, you probably don't need Detail Level set to Fine. Doing so will cause the view to have a higher level of detail than the printed sheet can show, and you'll end up with black blobs on your sheets and views that are slow to open and print.

Minimize view depth. View depth and crop regions are great tools to enhance performance. As an example, a typical building section is shown in Figure 14.2. The default behavior causes a regeneration of all the model geometry to the full depth of that view every time you open the view. To reduce the amount of geometry that needs to be redrawn, drag the section's far clip plane (the blue dashed line when you highlight the section) in close to the cutting plane. You can also enter a more precise value in the Properties palette with the Far Clip Offset parameter.



FIGURE 14.2 Minimizing the view depth

Minimize view content. Another best practice is to limit the amount of visible content to only what is necessary in a view. For example, in an exterior 3D view of an entire building, perhaps you can turn off categories for interior content under Visibility/ Graphic Overrides (such as electrical fixtures, plumbing fixtures, and furniture).

Model only what you need. Although it is possible to model to a very small level of detail, don't fall into the trap of over-modeling. Be smart about what you choose to model and how much detail you show. If it's not conveying information about the project, maybe it's not needed. The amount of information you do

or do not model should be based on your project size and complexity, your time frame, and your comfort level with the software.

When trying to decide how much detail to put into a model or even a family, you can use the following three very good rules of thumb to help you make the right decision for the element you're looking to create:

Scale At what scale will this detail be seen? If it's a very small-scale detail, it might be simpler to just draw it in 2D in a drafting view.

Repetition How many times will the element appear in the drawing set? If it will appear in only one location or only one time, it might be easier to draft it in 2D rather than try to model the element. If it will appear in several locations, modeling is probably the better solution. The more exposure an element has in the model (the more views it shows in), the more reason you have to model it. For example, doors are good to model; they show in elevations and plans all over the sheet set.

Quality How good at modeling families in Revit Architecture are you, honestly? Don't bite off more than you can chew. If you're new to Revit Architecture, keep it simple and use 2D components. The more projects you complete, the better you'll understand the BIM workflow.

Watch out for imported geometry. Although you have the ability to use geometry from several other file sources, use caution when doing so. Remember that everything you link into your model takes up about 20 times the file size in your system's RAM. So, linking a 60 MB NURBS-based ceiling design will equal 1.2 GB of RAM and more than likely slow down your model. Deleting unused CAD files, using linking rather than importing, and cleaning up the CAD geometry before insertion will help keep problems to a minimum.

before insertion will help keep problems to a minimum. Utilize Purge Unused. You won't use every family and every group you create in your model. The Purge Unused tool lets you get rid of those unused elements to help keep your file sizes at a reasonable level. This too can be found on the Manage tab on the Settings panel. If a file is very large, the tool can take several minutes to run, but eventually you'll be presented with a list (Figure 14.3) of all the unused elements in your file.

Using the Purge Unused tool is typically not recommended at the beginning of a project, while you are still iterating various design solutions and file sizes tend to be fairly small.

Purge unused		×
⊡…[0] Views	^ Cł	neck All
Elevation		
Section	Che	eck None
E Families		
Cable Trays		
Ceilings		
Columns		
Constructions	-	
Cover Type	=	
Curtain Panels		
Curtain Wall Mullions		
Detail Items		
Division Profiles		
Doors		
Floors		
. Fumiture		
Planting		
Profiles		
Ramps		
Boofs Roofs		
E Stairs		
Structural Columns		
Structural Foundations	-	
Note : Only items that are not in use and have no depende	ncies may be de	leted
Number of items checked: 331		
Hamber of Refine Greeken. 331		
	ОК	Cancel

FIGURE 14.3 Use the Purge Unused dialog box to reduce file size.

Use Quick Tips and Shortcuts

In addition to all the things you can do to hone your Revit Architecture skills, you will begin to learn tips and shortcuts as your experience grows using the software. Here are some good tips to get you started:

Filter your selection. You can filter selection behavior by customizing any combination of links, underlay elements, pinned elements, the ability to select elements by face, and the ability to drag elements on selection. For example, on a large project, you may want to disable link selection to prevent accidental selection of linked models. These options can be toggled on the fly and are available in two locations: under the Modify arrow and on the lower-right corner of the status bar (Figure 14.4).

Modify Wall Door Windc	
 Select links Select underlay elements Select pinned elements Select elements by face 	- ************************************
Drag elements on selection Select	

FIGURE 14.4 Selection filters

Customize your double-click behavior. If you navigate to Application > Options > User Interface > Double-Click Options, you can customize the action for the element types (Figure 14.5). The available actions will vary based on the element type; however, each type has a Do Nothing option. For example, if you find yourself accidentally double-clicking to edit families, you can change the default behavior.

🗴 Customize Double-click Setting	gs 💌		
Select double-click behaviors:			
Element Type: Double-click action:			
Family Edit Family			
Sketched Element	Edit Element		
Views / Schedules on Sheets	Activate View		
Assemblies	Do Nothing		
Groups	Edit Element		
Component Stairs	Do Nothing		
ск	Cancel Help		

FIGURE 14.5 Double-click settings

Make elevators visible in your plans. Suppose you want to create a shaft that will penetrate all the floors of your building and put an elevator in it that will show in all your plans. You could do this with an elevator family and cut a series of holes in the floors by editing floor profiles, but sometimes those holes stop aligning on their own recognizance. Fortunately, you can do both things at once using the Shaft tool on the Opening panel of the Architecture tab. Here, not only can you cut a vertical hole through multiple floors as a single object, but also you can insert 2D linework (using the Symbolic Line tool when editing

the shaft opening sketch) to represent the elevator in plan view (Figure 14.6). Every time the shaft is cut, you're certain to see the elevator linework.



FIGURE 14.6 Adding elevators to a shaft

Orient to view. Creating perspective views of isolated design elements can be quick and easy in plan view or in section view, but let's say you want to see that same element in 3D to be able to work out the details.

- 1. Create a callout or section cut isolating the area in question. If you're using a section, make sure to set your view depth to something practical.
- 2. Open the default 3D view or any other 3D orthographic view of the project.
- **3.** Right-click the ViewCube, select Orient To View, and select the callout or section from the context menu.
- **4.** Your 3D view looks identical to your section or plan region, but by rotating the view, you can see that portion in 3D.

Customize your shortcuts. To edit your keyboard shortcuts, choose Application > Options. Choose the User Interface tab, and then click the Customize button. You can also access this command on the View tab in the ribbon under the User Interface flyout button. The Keyboard Shortcuts dialog box (Figure 14.7) allows you to edit those shortcuts. Consider making common shortcuts the same letter. One good example for this is the Visibility/Graphic Overrides dialog box, where both VV and VG are set by default as shortcuts (VV can be used for quicker access).

Keyboard Shortcuts		? 🗙		
Search: option	option ×			
<u>F</u> ilter: All				
Assignments:				
Command	Shortcuts	Paths		
Status Bar - Design Options		View>Windows		
Design Options		Manage>Design Options		
Set Template Options		Contextual Tabs>Template		
Options		Contextual Tabs>Tools		
Options		Application Menu		
IFC Options		Application Menu> Open		
IFC Options		Application Menu> Export		
Select All Instances in Active	Optio	Context Menu		
Graphic Display Options	GD	View Control Bar		
Options		Steering Wheel		
Options	m	View Cube		
Press new keys: OP				
Import	иt	QK <u>C</u> ancel		

FIGURE 14.7 Editing your keyboard shortcuts

Copy a 3D view between projects. Suppose you made the perfect 3D view in your last project, and you can't figure out how to get it into your current project. Fortunately, there's a way to copy views from one project to another. Open both files in the same instance of Revit Architecture, and then do the following:

- 1. In your perfect view, right-click the 3D view in the Project Browser, and choose Show Camera from the context menu.
- **2.** Press Ctrl+C to copy the selected camera.
- In your new model, press Ctrl+V and click in the view to paste the camera. The view and all its settings are now there (alternatively you can use the Modify ➤ Paste Aligned to Current View to paste the view).

Disallow joining for walls. By default, Revit Architecture will join walls that intersect; however, you will eventually run into a condition where you need to override this behavior. First select a wall and hover over the Drag Wall End grip. Then right-click and choose Disallow Join. This will unjoin the wall and give you additional control to drag the wall end without it automatically jumping and joining to the intersecting wall.

Join geometry on parallel walls. If you have two parallel walls and there is an opening hosted on one wall (such as a door or window), you may want to automatically cut an opening through the second wall as well. If the walls are close enough, around 1'-0" (300 mm) of each other, you can use the Join Geometry tool between the two walls. After that, an opening will be cut in the other parallel wall and move with the original family (Figure 14.8).



FIGURE 14.8 Join geometry

Prevent room numbers from shifting on cut/paste. By default, when you cut and paste rooms in a project, the room numbers will shift to the next available numbers. There is a trick to maintain the room numbers when cutting and pasting. Select the rooms you will be cutting to the Clipboard and create a group. Once the rooms are in a group, they can be cut and pasted without changing the room numbers. Then they can be ungrouped, and the group can be deleted from the Project Browser.

Copy objects from a Revit link. Need to copy an object from a Revit link and paste it into the host project? No problem; simply hover over the object in the link you want to copy and press the Tab key until the object is highlighted. Then click to select the object and use the standard copy and paste commands. The element will be copied from the link and pasted directly into the host project, where it can be directly manipulated (Figure 14.9).



FIGURE 14.9 Copying from a link

Show annotation from a Revit link. Some annotation objects can be displayed from a Revit link. If the link contains annotation (such as room tags, dimensions, and so on) and you want to display it in the host project, set the Visibility/ Graphic Overrides properties for the Revit link to By Linked View or Custom. You can further customize which view is displayed by adjusting the Linked View name on the Basics tab.

Locate Additional Resources

A number of resources are available to help you along the way and improve your use of the software, help you solve problems, and assist you in creating new content. There is a wealth of information online to help you learn or communicate with users far and wide. So, before you spend hours trying to solve a particularly challenging problem on your own, you might check some of these tools:

Revit Architecture Help Open the Revit Architecture Help by clicking the question-mark icon in the upper-right corner of the application. This tool will give you a basic synopsis of all the tools, buttons, and commands available in the application. It is available as a wiki at http://wikihelp.autodesk.com/Revit.

Subscription Support If you have purchased Revit Architecture on subscription, Revit Subscription Support offers web-based support. Its responses are speedy, its advice is top-notch, and chances are the support staff has seen your problem before. You can access Subscription Support at http://subscription.autodesk.com.

AUGI Autodesk User Group International (AUGI) is a source for tips and tricks as well as excellent user forums. The forums are free to participate in, and it's a great place where you can ask questions, find answers, and discuss project workflows. AUGI is located at www.augi.com. Once you're there, look for Revit Architecture.

Revit Forum Revit Forum is an ever-growing resource with forums and collections of blog posts and has many experienced Revit users regularly participating. Registration is free, and the forums are an extremely valuable resource for common issues and workflow recommendations. Revit Forum is located at www.revitforum.org.

YouTube Here's a great reason to tell your IT department you need access to YouTube. Autodesk has its own channel with great free content: www.youtube .com/user/autodesk. It has hundreds of short videos showing how to perform specific tasks in Revit Architecture.

AECbytes AECbytes is a website dedicated to following the trends in the AEC industry, with a strong focus on BIM, technology, and the direction of the industry. The site is put together by Lachmi Khemlani; see www.aecbytes.com.

Now You Know

This chapter outlined the four primary methods to repeat objects in Revit Architecture (component families, groups, assemblies, and Revit Links). Every project you work on will utilize some of these object types. Next, you looked at optimizing performance, which is essential to get the most out of Revit. Best practices, quick tips, and additional resources round out the remaining portion of the chapter. This chapter should not only serve as a resource for some best practices but hopefully it provides some tips you can utilize in your projects.
Autodesk Revit Architecture 2015 Certification

Autodesk certifications are industry-recognized credentials that can help you succeed in your design career, providing benefits to both you and your employer. Getting certified is a reliable validation of skills and knowledge, and it can lead to accelerated professional development, improved productivity, and enhanced credibility.

This *Autodesk Official Press* guide can be an effective component of your exam preparation. Autodesk highly recommends (and we agree!) that you schedule regular time to prepare, review the most current exam preparation roadmap available at www.autodesk.com/certification, use *Autodesk Official Press* books, take a class at an Authorized Training Center (find one nearby here: www.autodesk.com/atc), and use a variety of resources to prepare for your certification—including plenty of actual hands-on experience.

Certification Objective To help you focus your studies on the skills you'll need for these exams, the following tables show objectives that could potentially appear on an exam and in what chapter you can find information on that topic; when you go to that chapter, you'll find certification icons like the one in the margin here.

Table A.1 is for the Autodesk Revit 2015 Certified User Exam and lists the section, exam objectives, and chapter where the information is found. Table A.2 is for the Autodesk Revit 2015 Certified Professional Exam. This book will give you a foundation for the basic objectives covered on the Certified User exam, but you will need further study and hands-on practice to complete and pass the Certified Professional exam.

These Autodesk exam objectives were accurate at press time; please refer to www.autodesk.com/certification for the most current exam roadmap and objectives.

Good luck preparing for your certification!

TABLE /	A.1	Certified User Exam Sections and Objectives
---------	-----	---

Торіс	Learning Objective	Chapter
User Interface: Definitions	Identify primary parts of the user interface (UI): tabs, application menu, InfoCenter, ribbon, Elevation tag, status bar, View Control Bar, Project Browser, context/right-click menus.	Chapter 1
User Interface: UI Navigation/ Interaction	Name the key features of the ribbon. Define how a split button works. Demonstrate the three ways the ribbon can be displayed: Full Ribbon, Min to Panel Tiles, Min to Tabs. Demonstrate how to detach a panel and move it on the screen.	Not covered
	Describe the hierarchy in the Project Browser for a new project.	Chapter 1
	Define what "context" means when right- clicking in the drawing window.	Chapter 1
	Name the tools found on the Application menu (Save, Plot, Export, Print).	Chapter 1
	Demonstrate how to add items to the Quick Access toolbar.	Not covered
	Describe why the Options Bar changes.	Chapter 1
	Describe the function of the status bar.	Chapter 1
	Describe what pressing the Escape key does.	Chapter 1
User Interface: Drawing Window	Describe what double-clicking an elevation view marker does.	Chapter 1
	Demonstrate how to turn on/off the 3D Indicator.	Not covered
	Demonstrate how to change the view scale.	Chapter 1
User Interface: Navigation Control	Describe the functionality of the ViewCube.	Chapter 1
	Describe what the ViewCube home icon does.	Chapter 1

User Interface: Zoom	Describe how to zoom using the Navigation bar.	Chapter 1
	Describe the quickest way to zoom in or out.	Chapter 1
	Describe the quickest way to pan.	Chapter 1
File Management: Definitions	Define the acronym BIM and why it is important to Revit users.	Introduction
	Define a template file.	Not covered
File Management: Project Files	Identify the file extension of a project file (. rvt).	Chapter 1
	Identify the file extension of a template file (.rte). Create a template file for later project use.	Not covered
	Identify the file extension of a Revit family file (.rfa).	Chapter 5
File Management: Open Existing Revit Project	Locate the Recent File window.	Not covered
	Demonstrate how to open a Revit file through Projects ≻ Open and through Application menu ≻ Open Documents icon.	Chapter 1
File Management: Create New Revit Project	Demonstrate how to create a new Revit project folder and file through Application menu ≫ New ≫ Project.	Chapter 1
	Change to a metric drawing.	Not covered
	Add project information to a new drawing set.	Chapter 12
	Change system settings to create a new dimen- sion style. Change arrows to architectural tick (obliques).	Chapter 11
Views: View Control and Properties	Navigate and change views using the View Control Bar.	Chapter 2
	Understand the view range of plan views and be able to change it.	Not covered

(Continues)

TABLE A.1 (Continued)

Торіс	Learning Objective	Chapter
	Understand the purpose of view templates.	Not covered
	Change object visibility using temporary hide, hide category, and hide element.	Chapter 9
Views: View Types	Create section views including segmented ones.	Chapter 9
	Modify, crop, and place elevation views on a sheet.	Chapter 12
	Create and navigate 3D views.	Chapter 2
	Create callouts for details.	Chapter 11
	Create and annotate a drafting view.	Chapter 11
	Use the section box to create a cutaway 3D view.	Chapter 1
Views: Cameras	Create a camera view, and modify its orientation.	Not covered
	Create and edit a walkthrough.	Not covered
Levels: Definitions	Describe a level. Describe a use of a non-story level.	Chapter 1
	Understand how levels interact with intersect- ing views.	Chapter 1
	Create new levels.	Chapter 1
	Understand level properties and characteristics.	Chapter 1
Walls: Architecture tab ≻ Wall	Describe how to place walls.	Chapter 2
Walls: Options Bar	List options available when placing and modifying walls: Height, Location Line, Chain, Offset, Radius.	Chapter 2
Walls: Openings	Create a floor-to-ceiling opening in a given wall.	Chapter 2
Walls: Join	Demonstrate a join on crossing wall elements.	Chapter 2

Walls: Materials	Create a new wall type, and add given materials.	Chapters 2, 9
Doors: Architecture tab ≻ Door	Describe how to place doors.	Chapter 2
Doors: Options Bar	Describe door options: Vertical/Horizontal, Tag on Placement, Leader, Leader Attachment Distance.	Chapters 2, 5
Doors: Model in Place	Edit existing doors. Use Align to position a door.	Chapters 2, 5
Windows: Architecture tab ➤ Window	Describe how to place windows.	Chapter 2
Windows: Options Bar	Describe window options: Vertical/Horizontal, Tag on Placement, Leader, Leader Attachment Distance.	Chapters 2, 5
Windows: Model in Place	Edit existing windows.	Chapter 6
Component: Options Bar	List options available when placing a component.	Chapter 5
Component: Component Host	Describe how to move a component to a differ- ent host.	Chapter 5
Component: Families	Navigate to find component families and load them.	Chapter 5
	Edit a family file and save.	Chapter 6
Columns and Grids: Definitions	ldentify the uses of a grid.	Chapter 1
Columns and Grids: Architecture Tab ≫ Grid	Create an equally spaced grid pattern.	Not covered
Columns and Grids: Grid Properties	List the options available when placing and modifying grids.	Not covered
Columns and Grids: Architecture Tab ≻ Column	Place columns on a grid.	Not covered
Columns and Grids: Column Properties	List the options available when placing and modifying columns.	Not covered

(Continues)

TABLE A.1 (Continued)

Торіс	Learning Objective	Chapter
Columns and Grids: Modify	List the tools you can use to modify columns and grids.	Not covered
Stairs and Railings: Stair Types and Properties	Set the stair type.	Chapter 4
	Change the stair tread depth.	Chapter 4
Stairs and Railings: Stair Placement Options	Add a stair.	Chapter 4
Stairs and Railings: Railing Types and Properties	Set the railing to rectangular.	Chapter 4
	Set the railing properties.	Chapter 4
Stairs and Railings: Railing Placement Options	Add a railing.	Chapter 4
Roofs and Floors: Roof Types and Properties	Create a roof.	Chapter 3
	Modify the roof properties.	Chapter 3
Roofs and Floors: Roof Elements	Create a fascia, a soffit, and a gutter.	Not covered
Roofs and Floors: Floor Types and Properties	Set the floor type (Sloped and Tapered). Create a floor.	Chapter 3
Sketching: Geometry	Sketch geometry and profiles using all sketching tools: Lines, Arcs, Polygons, Rectangles.	Chapter 1
Sketching: Fillet, Trim	Fillet objects.	Not covered
	Trim objects.	Chapter 1
Sketching: Snaps	Describe the benefits of using snaps.	Chapter 2
	List the shortcuts to toggle a snap on and off.	Not covered

Annotations: Text	Add model text to a floor plan.	Not covered
Annotations: Dimensions	Add a dimension to a given floor plan. Create a wall section.	Chapters 11, 12
	Add a spot slope to a roof on a given plan.	Not covered
Annotations: Tags	Add tags.	Chapter 11
	Tag untagged elements in a given floor plan.	Chapter 8
Schedules: Schedule Types	Create a door schedule.	Not covered (While there is no specific coverage of a door schedule, creating sched- ules is covered in Chapter 12.)
	Create a window schedule.	Chapter 12
	Create a room schedule.	Chapters 8,12
Schedules: Legends	Create a legend.	Chapter 11
Schedules: Keynotes	Add keynotes.	Chapters 12, 13
Construction Document Sets: Sheet Setup	Create a title sheet with a sheet list.	Chapter 12
Construction Document Sets: Printing	Create view/sheet sets for printing.	Chapter 12
	Print in scale. Print with percentage.	Chapter 12
Construction Document Sets: Rendering	Render.	Chapter 9
	Place generic lights.	Not covered
Set the solar angle.		Chapter 9

Торіс	Learning Objective	Chapter
Collaboration	Copy and monitor elements in a linked file.	Not covered
	Use worksharing.	Chapter 10
	Import DWG and image files.	Chapter 13
Documentation	Create and modify filled regions.	Chapter 11
	Place detail components and repeating details.	Chapter 11
	Tag elements (doors, windows, etc.) by category.	Chapter 11
	Use dimension strings.	Chapters 1, 11
	Set the colors used in a color scheme legend.	Chapter 8
	Work with phases.	Not covered
Elements	Change elements within a curtain wall: grids, panels, mullions.	Chapter 2
	Create compound walls.	Chapter 2
	Create a stacked wall.	Chapter 2
	Differentiate system and component families.	Chapter 5
Families	Work with family Parameters.	Chapter 6
	Create a new family type.	Chapter 6
	Modify an element's type parameters.	Chapter 2
	Use Revit family templates.	Chapter 5
	Use Family creation procedures.	Chapter 6
Modeling	Assess or review warnings in Revit.	Chapter 13
	Create a building pad.	Chapter 13

TABLE A.2 Certified Professional Exam Sections and Objectives

Autodesk Revit Architecture 2015 Certification

	Define floors for a mass.	Chapter 7
	Create a stair with a landing.	Chapter 4
	Create elements such as floors, ceilings, or roofs.	Chapter 3
	Generate a toposurface.	Chapter 13
	Model railings.	Chapter 4
	Edit a model element's material.	Chapter 9
	Change a generic floor/ceiling/roof to a specific type.	Chapter 3
	Attach walls to a roof or ceiling.	Chapter 3
Views	Define element properties in a schedule.	Chapter 12
	Control visibility.	Chapter 1
	Use levels.	Chapter 1
	Create a duplicate view for a plan, section, elevation, drafting view, etc.	Chapter 9
	Create and manage legends.	Not covered
	Manage the view position on sheets.	Chapter 12
	Organize and sort items in a schedule.	Chapter 12

INDEX

Note to the Reader: Throughout this index **boldfaced** page numbers indicate primary discussions of a topic. *Italicized* page numbers indicate illustrations.

A

accessories, 305. 305 Activate View command, 286 activating views, 286, 287 active view properties. 4 active worksets, 240 Actual Run Width parameter, 96 Add Leader tool, 267 Add Parameter option, 170 Add Points From Selected Layers dialog box, 308, 308 Add/Remove Segments tool, 53-54 Add Split Line option, 63 Adjust Exposure option, 218 AECbytes website, 331 Align tool lights, 85 walls, 18, 18 Aligned tool, 259 Aligned Dimension tool element spacing, 20, 22 hosted families, 155 Aligned To Selected Levels option, 67 aligning dimensions, 259 lights, 85 shafts, 67 views on sheets, 284, 284 walls, 18, 18 All Grid Lines placement option, 43 All Segments placement option, 43 Ambient Light setting, 214 Annotation Categories tab, 161, 164-165 annotation crop boxes, 265 annotations and Annotate tab color legends, 204 color schemes, 200 component families, 124 dimensions, 259-263, 259-264 element spacing, 20, 22 groups, 249 insulation, 248 linework, 250 from links, 330 regions, 245, 251

repeating details, 167-168, 246 tags, 259-260, 260, 264-267, 265-267 text, 260 Appearance tab materials, 208-209, 209 schedules, 275, 275 Arc tool, 72 architects role in BIM workflow, 301 Architecture tab ceilings, 80 doors, 19 families, 150 floors, 9, 58, 65 in-place families, 133 levels, 13 ramps. 112 roofs, 72 room boundaries, 196 rooms, 190, 192 shafts, 326 stairs, 93 volume computation, 322 walls, 11, 17, 26 arcs extrusions, 72-73, 73 tangent, 31 Area and Volume Computations dialog box. 322, 322 area computation floors. 182, 182-183 rooms, 190, 190 Arrange panel, 246 arranging elements, 246 arrowheads for tags, 266, 266 arrows, slope building pads, 306 ceilings, 86, 87 floors, 62-63, 62 roofs, 74-76, 75-76 assemblies, repeating, 319 Assembly Views tool, 319 Asset Browser window, 209, 209 assigning elements to worksets, 229-232, 229-232 materials, 82, 82, 210-211, 210

Associate Family Parameter dialog box, 170 associating linked files, 240-241 Attach Top/Base option, 36-39, 39, 77 attaching walls to roofs. 77. 77 top and base, 38-39, 38-39 AUGI (Autodesk User Group International), 330 Authorized Training Center, 333 Autodesk Certification Exam Guide, 339-340 Autodesk Certified Professional Exam, 339 - 340Autodesk Certified User Exam. 333-339 Autodesk Official Book, 333 Autodesk Seek resource, 135-136, 135 automatic ceilings, 78-82, 79-82 Automatically Embed option, 50

B

background color fill. 205 dimensions, 262 gradients, 213-214 rendering, 219-220 Baluster Placement option, 92 balusters, 92, 93 Base Constraint parameter, 36 Base Offset setting bulkheads, 83 shafts. 68 walls, 36 basement floor plans, 283-287, 285-287 Basic Wall node, 269 basic walls, 26-27, 26-28 batt insulation. 248 best practices, 322-324, 323, 325 BIM (building information modeling) approach, 1 overview, 297-300, 298-299 project roles, 300-304 staffing, 300 team members. 303-304 black color level symbols, 13, 181 risers, 98 rooms, 197 blocking, adding, 255, 255 blocks title, 169-172, 169-171 toposurfaces, 306 blue color dimensions, 21-22, 260-261, 263 grips, 7, 177, 213, 288 hosted components, 156 level symbols, 12-13, 181

schedules, 291 sketch lines, 10 tags. 284-285 title blocks, 169 walls. 11. 21-22. 34 borrowed elements central files, 233 displaying, 236-237, 236 Bottom Of Eave references, 181 boundaries building pads, 306 ceilings, 79, 79, 83, 83 editing, 164-165, 165-166 floors, 60-61, 60-61 ramps, 112-115, 113-115 rooms, 191, 196-198, 197-198 stairs, 99, 99, 101 break lines, 164, 165 Break Up option, 29 breaking schedules, 291 brick material, 208-209, 246 Bring Forward option, 246 Bring To Front option, 246 building information modeling (BIM) approach, 1 overview, 297-300, 298-299 project roles, 300-304, 303 staffing, 300 teams members, 303-304 building pads, 306-307, 309 bulkhead conditions, 83-84, 83-84 By Face tool, 65-66, 65-66

С

CAD-based projects, 297, 298 CAD files deleting and unloading, 321 linking, 321-322 CAD Formats tab, 183 calculations area floors, 182. 182-183 rooms, 190, 190 volume limiting, 322, 322 rooms, 190, 190 Callout tool for regions, 251 case sensitivity of queries, 281 Cast Shadows option, 212, 214 categories families, 146-148, 148-149 in model hierarchy, 118 schedules, 273, 273 Ceiling tool, 80

ceilings, 78 automatic, 78-82, 79-82 bulkhead conditions, 83-84, 83-84 lights and grids, 85-86, 85-86 sketches, 78-82, 79-82 sloped, 86-87, 87 Ceilings tab, 86 central files avoiding, 241 saving, 225-226, 226, 232-234, 232-234 Central Model, 225 certification exam. 333-341 CFD (computational fluid dynamics) model, 300 chains of elements creating, 59 selecting, 15, 15, 32 Checkout Status tab, 237, 237 Choose Space Type and Color Scheme dialog box, 200, 200 circles for toposurfaces, 306 Close Hidden Windows tool, 14, 321 closing hidden windows, 321 views, 14 worksets, 235-236, 235, 241 closure options for walls, 172, 172 cloud rendering, 221-222, 222 Cloud Rendering Service, 221 CMU element, 167 Coarse detail level, 143-144 code requirements, architects for, 301 Collaborate tab synchronization, 232 workset access. 224 collections. See groups color cut symbols, 291 dimensions, 21-22, 260-261, 263 grips, 7, 177, 213, 288 hosted components, 156 level symbols, 12-13, 181 lines, 169 risers. 98 rooms, 197 schedules, 291 schemes, 200-203, 200-203 sections, 203-205, 203-205 sketch lines, 10 tags, 284-285 title blocks, 169 walls, 11, 21-22, 34 Color dialog box lines, 118 schemes, 201 Color field. 201

Color Fill Legend tool, 200, 205 Color Fill panel, 205 color-fill plans, 200 color schemes. 200-203. 200-203 sections, 203-205, 203-205 Color Scheme Location parameter, 205 Compact File save, 313 Component menu. 245-246 components detail. See details and detail levels families. See families hosted. See hosted components inserting, 245-246 computational fluid dynamics (CFD) model, 300 computations area floors, 182, 182-183 rooms, 190, 190 volume limiting, 322, 322 rooms, 190, 190 Conceptual Mass panel, 178 conflicts, errors and warnings for, 314 Consistent Colors mode, 295 constraints roofs, 71 walls, 15, 15, 36 containers, worksets as, 240 content component families, 134-136, 135, 156 team member additions for, 304 contour polylines for toposurfaces, 306 Convert To Sketch-Based option, 101 copving 3D views. 328 Clipboard for, 38 floors, 67, 67 levels. 181 lights, 85 objects from links, 329, 329 railings, 163 system families, 121 views. 212 wall families, 122, 122 core worksets, 227 corrupted files. 314 Create Floor Boundary tab, 10 Create From Import option, 308 Create Group tool, 249, 318 Create New Local option, 227 Create Roof Footprint tab, 70 Create Roof tool. 187 Create Similar option, 31 Create Sketch option, 102 Create System tool, 186

Create tool for lines, 254 crop regions adjusting. 288-290. 288-289 graphics display, 213-214 performance. 323 Crop View tool, 7 crop windows and tags, 265, 265 Ctrl kev for selections, 16, 16 Current Window option, 292 Curtain Grid tool, 42 Curtain System tool, 186 curtain walls, 42 creating, 42-45, 43-45, 186, 187 elevation profiles. 50-51. 51 embedding, 50-52, 51 grids, 43, 52-53, 53-54 mullions, 43-44, 44-45, 52-53, 53-54 panels, 52, 54-56, 55-56 properties, 46-48, 47-49 types, 29, 30 curved curtain wall panels, 45 Customize Double-click Settings dialog box, 326, 326 cut symbols, 291 cutting wall openings, 40-41, 40

D

Datum panel, 13, 155 datums, 12, 240 daylighting, 298-300 Deactivate View command, 289 deactivating views, 289 deadlines. 304 defaults ceilings, 79 handrails, 95 lines. 250 railings, 90, 90 templates, 176 title blocks, 169 Defines Origin option, 150-152, 152 Defines Roof Slope option, 76 Defines Slope option, 70, 74, 76-78 Delete Inner Segment option, 156 deleting CAD files. 321 mullions, 53 objects, 173 rooms, 192, 198-200, 199-200 sketch segments, 156 tags, 191 wall openings, 41 depth, views, 323 Detach And Preserve Worksets option, 229, 235 Detach Model From Central dialog, 229, 235

detaching wall top and base, 38-39, 38-39 detail components, 125 detail groups, 249 Detail Level tool, 6, 323 Detail Line tool, 244, 256 Detail Line toolset, 244, 244 Detail Rotation component, 168 Detail rotation option. 248 details and detail levels arranging elements in views, 246 components, 125, 245-246 creating, 243-244 dimensions, 259-263, 259-264 families editing, 141-142, 141-142 visibility, 142-146, 143-146 groups, 248-249, 249 insulation, 248, 248 legends, 268-270, 269-270 linework adding, 254-257, 255-256 description, 244-245, 244 working with, 250, 250 minimizing, 323 regions, 245, 251-254, 251-254 repeating creating, 246-248, 247, 257-259, 257-258 editing, 167-168, 168 rules of thumb. 324 tags, 259-260, 260, 264-267, 265-267 team member additions for, 304 text. 260. 267 updating, 164-167, 164-167 diagonal crosshatch pattern, 26 dimensions adding, 259-263, 259-264 aligning, 259 drafters for, 302 grid lines, 170, 170 walls. 260-261. 261 Disallow Join option, 328 Displace Elements feature, 216, 217 display filters schedules description, 274, 274 Sheet List. 281. 281 worksets. 229-231. 230 display modes for worksets, 236-238, 236-238 Do Nothing options, 326 docking Project Browser, 5 doors placing, 18-20, 18 spacing, 22, 22 in walls, 33, 33 double-click behavior, 326, 326 DPI setting, 219

drafters role in BIM workflow, 302-303, 303 Draw gallery, 9 Draw panel arcs, 72 building pads, 309 crop regions, 289 levels, 181 ramps, 114 roofs, 70, 72 shapes, 245 slope arrows, 62, 74 stairs, 101 walls, 31-32 windows, 158 drawing sets placing views crop regions, 288-290, 288-289 schedules. 290-291. 290 on sheets, 282-287, 283-287 printing documents, 291-294, 292-295 schedules. See schedules duplicating handrails, 90 views, 212, 212

E

edges ceilings, 86 floors, 11, 12, 59 ramps, 114, 114 rendering, 219 roofs. 76-78 in selecting, 44 vector processing, 295 walls, 41, 70 Edit Assembly dialog box ceilings, 82 walls, 210-211 Edit Baluster Placement dialog box, 92.93 Edit Boundary option ceilings, 83, 86 detail components, 164 floors. 60 Edit Color Scheme dialog box, 201, 201 Edit Crop tool, 289 Edit Extension tool, 156, 158 Edit Extrusion tool, 133 Edit Family option categories, 147 title blocks, 169 Edit Group mode, 249 Edit Group panel, 249, 249 Edit In-Place tool, 133

Edit Path option, 110 Edit Profile tool, 36-38, 49 Edit Rails dialog box, 91, 92, 163, 163 Edit Scheme tool, 201 Edit Sketch option, 101 Edit Surface tab, 308 Edit Type option dimensions. 261 railings, 90 tags, 266 editing ceiling boundaries, 83, 83 ceilings, 86, 87 color assignments. 201. 201 details, 141-142, 141-142 repeating, 167-168, 168 updating, 164-167, 164-167 families categories, 146-148, 148 hosted, 153-159, 154-158 floor boundaries, 60-61, 60-61 insertion points, 148-153, 149-153 rails, 92, 161-164, 161-164 shortcuts, 327, 328 tag families, 159-161, 159-160 wall profiles, 36-38, 37, 49, 49 work planes, 172 worksharing requests, 238-239, 239-240 Editing Request Granted dialog box, 239, 240 Editing Request Placed dialog box, 239, 239 Editing Request Received dialog box, 239, 239-240 elements arranging, 246 assigning to worksets. 229-232. 229-232 borrowing, 233, 236-237, 236 chains of, 15, 15, 32, 59 editing requests, 238-239 hosting for walls, 29-30 relinguishing, 233-234, 233-234 spacing, 20-23, 21-23 elevations BIM models, 298 curtain walls. 50-51. 51 presentation drawing, 212-214, 212-213 scales, 139, 140 elevators, 326-327, 327 elliptical walls, 33 embedding curtain walls, 50-52, 51 enabling worksharing, 224-226, 224-226 End With Risers option, 100 EQ tool element spacing, 23 grid lines, 170 hosted families, 155 profile lines. 162 errors and warnings, 313-315, 313-314

exploded views, **216**, *217* Export feature, 314 exporting errors and warnings, 314, *314* to gbXML, 325 exposure in rendering, 218, 220 Exposure Value setting, 218 Extend Into Wall option, 60 Exterior - Brick And CMU on Mtl. Stud wall, 27 Exterior - Brick on Mtl. Stud wall, 27 Exterior - Brick Over CMU w Metal Stud wall, 28 exterior worksets, 227 extruded roofs, 72–74, 72–74 Extrusion End setting, 72

F

face-based families, 128 editing, 147, 147 working with, 130-132, 131-132 families, 117, 137-138 categories. 146-148. 148 component, 124-125, 125 content, 134-136, 135 face-based, 130-132, 131-132, 147, 147 hosted, 127-130, 128-130 in-place, 133 loading, 125-127, 126-127 modifying, 133-134, 133-134 content. 156 detail level editing, 141-142, 141-142 visibility, 142-146, 143-146 insertion points, 148-153, 149-153 legends, 268 model hierarchy, 117-121, 119-120 origins, 150-151, 151-152 parameters categories, 148, 149 locking, 173 purging, 311-312, 311 repeating. 317-318 system, 121-123, 122, 124 templates, 173 tips and best practices, 172-173 view scale, 138-141, 138-140 Family Category and Parameters dialog box, 126, 127, 148.149 Family Editor break lines, 164 desks. 150-151 filled regions, 173 hosted families, 153-154, 154 profiles, 161 tag families, 160

Family Element Visibility Settings dialog box, 143-144, 143-145 family types details, 167, 167 swapping out, 94 Family Types dialog box, 167, 167 fields and Fields tab for schedules Sheet List, 280, 281 working with, 273-274, 274 File Save Options dialog box, 225, 226 files CAD deleting and unloading, 321 linking. 321-322 central avoiding, 241 saving, 225-226, 226, 232-234, 232 - 234corrupted, 314 deleting and unloading, 321 local creating, 227-228, 227-228 saving, 227 purging, 324, 325 size, 310-315, 311 Fill available Space mode, 247 fill color, 200 color schemes, 200-203, 200-203 sections, 203-205, 203-205 filled regions, 251-252, 252-253 description, 245 title blocks, 173 Fillet Arc option, 31, 32 Filter dialog box visibility, 144, 145 worksets, 229, 230 Filter tab purpose, 274, 274 Sheet List, 281, 281 Filter tool. 231 filters schedules description. 274. 274 Sheet Lists, 281, 281 selection behavior, 325, 326 worksets, 229-231, 230 Find Link dialog, 183 Fine detail level, 143-144 Finish Edit Mode option, 38, 309 finishes, walls, 279, 279 Fixed Distance mode, 247 Fixed Number mode, 247 flashing, 256, 256 flexing reference planes, 172 Floor Plan view. 9 Floor tool, 9, 58, 184

floors • Hide Crop Region tool

floors boundaries, 60-61, 60-61 creating, 9-11, 10-11, 57-58 mass area calculations. 182. 182-183 creating, 184 openings By Face tool, 65-66, 65-66 with shafts, 66-68, 67-69 sketching, 58-59, 58-59 sloped, 61-65, 62-64 Formatting tab mass floors, 182 schedules, 275 FormIt tool, 178-180, 179-180 formulas, errors and warnings, 314 foundation walls. 309 Frame/Mullion Extension tool, 156, 157 Frame/Mullion tab, 158 Furniture tag, 159-160, 159-160

G

G000 - Cover Sheet, 290, 290 gaps in floors, 62 Generic - 12" floor type, 58 Generic elements designing with, 211 railings, 89-92, 90-93 Geographic information system (GIS) data, 300 geometric contexts, 147 geometry errors and warnings, 314 families, 135 imported, 324 roofs, 73 Geometry panel, 73 GIS (geographic information system) data, 300 glazing in BIM models, 300 Gradient option, 213 Graphic Display Options (GDO) dialog box, 212-213, 213.220 graphics, 211-212 3D exploded view, 216, 217 materials, 208, 208, 210 presentation 3D views, 214-216, 215 presentation elevation drawing, 212-214, 212-213 rendering cloud, 221-222, 222 interactive, 220, 221 views, 217-219, 218-219 Graphics tab, 208, 208, 210 grayed out views, 289 Grid Visibility parameter, 170-171, 171

grids ceilings, 85-86, 85-86 curtain walls adding and removing, 52-53, 53-54 creating, 42-43, 43 properties, 46-48, 47-48 rotating, 85-86, 85-86 title blocks. 169-172. 170-171 grips crop regions, 7, 288, 288 edges, 213 images, 177 schedules, 291 section boxes. 84 stairs, 99 tags, 204, 285 text. 287 walls, 328 Group Parameter Under option, 170 groups details, 248-249, 249 mass floor area. 182 purging, 311-312, 311 repeating, 318-319 rooms, 329 schedules, 275, 278-279 grout, 257-258 GWB on Mtl. Stud Ceiling, 81, 81, 86 gypsum board ceilings, 82 dimensions. 261 Gypsum Wall Board material, 82

Η

Handrail - Rectangular option, 95 handrails creating, 89-92, 90-93 profiles, 161-164, 161-164 height ceilings, 86 roofs, 74-76 walls, 71, 71 Height Offset At Head setting ceilings, 86 roofs, 74-75 Height Offset At Tail setting ceilings, 86 roofs, 75 Height Offset From Level setting, 62 help, resources for, 330-331 Hidden Line option, 6 hidden lines, 295 Hide Crop Boundaries option, 293 Hide Crop Region tool, 214, 289

Hide In View option, 212, 212 Hide Ref/Work planes option, 293 Hide Scope Boxes option, 293 Hide Unreferenced View tags option, 293 hierarchy, models, 117-121, 119-120 Highlight In Model feature, 277 Horizontal Grid option, 46 Horizontal Mullions option, 46 Host Length option, 268 hosted components families editing, 153-159, 154-158 working with, 127-130, 128-130 geometric contexts, 147 legends, 268 railings, 106-108, 107-108 system families, 121 wall elements, 33, 33

images importing and scaling, 176-178, 177-178 managing, 312 imported geometry, 135, 324 importing 2D images, 176-178, 177-178 in-place families, 120, 133 content, 134-136, 135 modifying, 133-134, 133-134 In-Place Mass tool, 178 inserting and Insert tab 2D images, 177 3D sketches, 179 CAD files, 321 components, 245-246 families, 135 lights, 85 links, 307 insertion points for families, 148-153, 149-153 Inside component for repeating details, 168, 247-248 instance parameters, 35-36, 35 instances in model hierarchy. 118 insulation, 248, 248 Insulation tool, 248 interactive rendering, 220, 221 interface. 2.2 modeling workflows, 9 doors and windows, 18-20, 18-19 element spacing, 20-23, 21-23 floors, 9-11, 10-11 levels, 12-14 walls, 11-12, 12, 14-18, 15-18 Project Browser, 4-6, 5 Properties palette, 2-3, 4

View Control Bar, 6–8, 6 ViewCube, 8–9, 8 interior walls, 16–18, 17–18 interior worksets, 227 iPad, 176, 176 Isolate Element dialog, 7 isometric drawing, 214–216, 215 Itemize Every Instance option, 275, 281

J

Jag Depth setting, 167, *167* join geometry for parallel walls, **329**, *329* Join Geometry tool, 329 Join/Unjoin Roof option, 73 joined roofs, 73, *74*

Κ

keyboard shortcuts, 327, *328* Keyboard Shortcuts dialog box, 327, *328* keynote legends, 268 keynoting, drafters for, 302 Khemlani, Lachmi, 331

L

L Shaped Handrail profile family, 161-164 labeling, 260, 267 landings, 95, 100-103, 101-103 lavers for basic walls. 26 layouts for repeating details, 168, 247 Leader Arrowhead property, 266, 266 leaders tags. 266-267. 266 text, 267 Legend tool. 268 legends, adding, 268-270, 269-270 length hosts. 268 walls, 34, 34 Level tool, 13, 103 levels adding, 180-181, 181 building pads, 309 creating, 12-14 detail. See details and detail levels imported images, 177 objects, 128-129 ramps, 112 stairs, 103, 104 light bulb tool, 7-8

Lighting settings graphics display, 213 rendering, 218 lights, ceilings, 85-86, 85-86 Line Color option. 169 Line Style panel, 245 Line Styles Type Selector panel, 250 lines crop regions, 289 detail, 244-245, 244 grid. See grids hidden, 295 room boundaries, 197, 198 separation. 192 split, 63, 63 title blocks, 169 linework adding, 254-257, 255-256 description, 244-245, 244 working with, 250, 250 Linework tool, 250 Link CAD option, 179 linked files, associating, 240-241 links 3D sketches, 178-180, 179-180, 183 annotations from, 330 CAD files. 321-322 copying objects from, 329, 329 managing, 312 repeating, 319-320 toposurfaces, 307, 307 Load Family dialog box, 127, 135 Load Family option, 85, 150 loading component families, 125-127, 126-127 system families, 121-122, 122 local files creating. 227-228. 227-228 saving, 227 Location Line option stairs, 96-97 walls, 32, 35 Lock 3D View tool. 7 locking family parameters, 173 views. 214 Look command, 220

Μ

Make Plan View option, 13 Make This A Central Model After Save option, 225 Manage Browser dialog, 208–211, 208–210 Manage Images option, 312

Manage Links dialog box, 183 Manage Links option, 312 Manage Project panel, 312 Manage tab detail levels. 140 errors and warnings, 313 links and images, 312, 321 materials. 208 object styles, 118 print settings, 293 project standards transfer, 122 purges, 311, 324-325 room boundaries, 197 tags. 266 title blocks, 169 views, 140 Masking Region tool, 253-254 masking regions adding, 253-254, 253 description, 245 super, 173 masonry, 26, 26, 246 Masonry-Brick material, 208, 208, 211 masses, 175 creating, 188 curtain systems, 186 floors area calculations, 182, 182-183 creating, 184 roofs, 187-188, 187 walls, 184-185, 185-186 Massing & Site tab 3D sketches, 178 building pads, 309 curtain systems, 186 floors, 184 roofs. 187 toposurfaces, 308, 310 visibility, 180, 185 walls, 184-185 Material Graphics tab, 82 Material Tag button, 266 Material tags. 266. 266 materials, 207-208 assigning, 210–211, 210 defining, 208-210, 208-210 Maximum Spacing mode, 247 Medium detail level, 143-144 memory requirements determining, 320-321 imported geometry, 324 metal decking, 246 mode, worksets, 236-238, 236-238 Mode panel, 9 model groups, 249

Model In-Place option, 133 Model Site panel, 310 Model Updates option, 237 modelers in BIM workflow, 302 modeling sites, 304-305, 305 building pads, 306-307, 309 toposurfaces. 305-308. 306-308 workflows, 9 doors and windows, placing, 18-20, 18-19 floors, 9-11, 10-11 levels, 12-14 walls, 11-12, 12, 14-18, 15-18 models BIM. See BIM (building information modeling) approach hierarchy, 117-121, 119-120 Modify Floors tab, 63 Modify panel, 245 Modify Schedules tab, 277 Modify tab, 3 copying, 13 groups, 248 linework, 250 loading projects, 148 regions, 252 splitting walls, 41 visibility, 143-144, 146 walls, 17-18 modifying tools for walls, 34-36, 35 Moves With Nearby Elements tool, 130 moving tags, 204 walls, 194, 195 Mullion tool, 43 mullions adding, 43-44, 44-45, 52-53, 53-54 curtain walls, 46-48, 47 multi-category schedules, 276 multiple roof slopes, 76-78, 77-78 multistory shafts, 68, 68-69 multistory stair runs, 103-106, 104-106 Multistory Top Level setting, 105 multiuser workflow. See worksharing

Ν

names handrails, 90 reference planes, 172 rooms, 199, *199* users, 224 Navigation bar, 139 New Family-Select Template File dialog box, 125, *126* New Floor Plan dialog, 13 New Legend View dialog box, 269, 269 New Schedule dialog box categories, 273, 273 mass floors, 182 settings, 277 New Schedule/Quantities option, 277 New Schedule/Quantities option, 277 New Sheet dialog box, 282, 282 New Subcategory dialog box, 169 Non-Uniform Running-Brick material, 209 Nudge tool regions, 252 repeating details, 258 number of views reductions, 312–313 numbering rooms, 329

0

object levels, 128-129 Object Styles dialog box, 118-119, 119, 169, 169 objects copying from links, 329, 329 deleting, 173 repeating, 317-320 offsets bulkheads, 83 floors, 62 railings, 106, 107 shafts, 68 stairs. 101 walls. 36 On Gridline option, 48 Opaque/Transparent setting, 262 opening worksets, 234-236, 235-236, 241 openings floors By Face tool, 65-66, 65-66 with shafts, 66-68, 67-69 walls. 40-41. 40 optimizing performance, 320-322, 322 Options bar element spacing, 21 levels. 13 Orbit command, 220 Orient To View option, 327 orientation of families, 137 origin of families, 150-152, 151-152 Output Settings options, 218 Overhang option for roofs, 76 Override Graphics In View option, 215 Overwrite The Existing Version option, 146, 151 - 152Owners tab, 237, 238 ownership status, 238, 238

Ρ

Pan command, 220 panels for curtain walls, 52, 54-56, 55-56 paper size, 293 parallel walls, join geometry for, 329, 329 Parameter Properties dialog box. 170. 171 parameters families categories, 148, 149 locking, 173 title blocks, 170-171, 171 walls. 34-36. 35 parametric models, 298 parking spaces, 305 Paste tool, 67, 67 performance, optimizing, 320-322, 322 perspectives in BIM models, 298 Phase Filter setting, 276 Photographic Exposure option, 220 Pick Lines tool, 9 levels. 13 railings, 106 walls, 11, 17, 32, 32 Pick New Host tool, 108 pick walls and Pick Walls tool Extend Into Wall option, 60 floors, 58-59, 58-59 roofs, 70 Place A Component tool, 129, 131, 150 Place Ceiling tab. 80 Place Component tab, 150 Place Detail Group tool, 249 Place On Face tool, 132 Place On Work Plane tool, 132 Place Reference Plane tab, 155 Place Request button, 239 Place Room tab, 192 placing doors and windows, 18-20, 18 system families, 123, 124 views crop regions, 288-290, 288-289 schedules, 290-291, 290 on sheets, 282-287, 283-287 walls. 16-18. 17-18 plan views on sheets, 283-287, 283-287 plans in BIM models, 298 Plate Offset From Base option, 77 polylines for toposurfaces, 306 predictability in BIM models, 301 presentation drawings 3D views, 214-216, 215 elevation, 212-214, 212-213 Print dialog box, 291-294

Print Range setting, 292, 292 Print Setup dialog box, 293-294, 294 profiles elevation, 50-51, 51 families component, 125, 125 editing, 161-164, 161-164 walls. 36-38, 37, 49, 49 Project Browser, 4-6, 5 project roles in BIM workflow, 300-304, 303 project standards, transferring, 122-123, 122 projects in model hierarchy, 117 Properties palette, 2-3, 4 building pads, 309 ceilings, 79 curtain walls, 48, 50 dimensions, 61, 261 grids, 170 groups, 249 railings, 106, 164, 164 regions, 252 repeating details, 257 roofs, 72 tags, 194, 266 walls, 11, 41 worksets, 230 Purge Unused dialog box, 311, 311, 325, 325 Purge Unused tool, 311-312, 325 purging families and groups, 311-312, 311 files, 324, 325

Q

quality settings in rendering, 218 Quick Access toolbar (QAT) for dimensions, 259

R

Rail Structure option, 163 Railing tool, 90 railings, 89, 95, 96 generic, 89–92, 90–93 host function, 106–108, 107–108 profiles, 161–164, 161–164 top rail and slope, 109–111, 109–111 Railings tool, 95, 95 RAM requirements determining, 320–321 imported geometry, 324 Ramp tool, 112 ramps, 112–115, 113–115 raster processing, 294, 295 Ray Trace mode, 220 Realistic mode, 295 Rectangular Handrail family, 161 reference levels vs. levels, 181 reference lines for floors, 10-11, 10 reference planes hosted families, 155, 155-156 names, 172 regions, filled, 251-252, 252-253 description, 245 masking, 173 title blocks, 173 Relative Height setting, 102, 102 Relinguish All Mine tool, 226, 233 relinguishing elements and worksets, 233-234, 233 - 234Reload Latest option, 233 reloading linked sketches, 183 renaming rooms, 199, 199 Render in Cloud dialog box, 221, 222 Rendering dialog box, 6, 218 rendering graphics cloud, 221-222, 222 interactive, 220, 221 views, 217-219, 218-219 Repeating Detail Component tool, 246-247, 257 repeating details creating, 246-248, 247, 257-259, 257-258 editing, 167-168, 168 rules of thumb, 324 repeating objects, 317-320 repetition in families, 136 Reset Profile option, 36 Reset Temporary Hide/Isolate tool, 7 resolution in rendering, 218 resources for Revit, 330-331 Restore Excluded Group Member option, 319 Reveal Hidden Elements tool, 7, 212 Review Warnings dialog box, 313-314, 313 Revit Architecture Help, 330 Revit Architecture links annotations from, 330 copying objects from, 329, 329 repeating, 319-320 Revit Forum, 330 ribbon. 2 floors. 9-10 schedule commands, 277, 277 risers, 94-95, 94, 98, 100 roofs creating, 69-70 Roof By Extrusion, 72-74, 72-74 Roof By Footprint, 70-71, 71 extruded, 72-74, 72-74 height, 74-76

mass, 187-188, 187 multiple slopes, 76-78, 77-78 sloped arrows, 74-76, 75-76 Room & Area panel calculations, 190 room boundaries, 196 rooms, 192 Room Bounding property, 191 Room Tag With Area option, 194 rooms adding, 192-196, 193-196 boundaries, 191, 196-198, 197-198 color-fill plans, 219 color schemes, 200-203, 200-203 sections, 203-205, 203-205 defining, 189-190 deleting, 192, 198-200, 199-200 numbering, 329 schedules, 277-280, 277-280 separation lines, 192 tags, 190-196, 191, 193-196 Rotate tool, 85-86 rotating components, 130 detail, 168, 248 grids, 85-86, 85-86 views, 186 Run Draw tool, 112 .rvt files. 178

S

.sat files. 178 Save As dialog box, 226, 226 saving central files, 225-226, 226, 232-234, 232 - 234local copies, 227 Scale tool. 6 scales and scaling 2D images, 176-178, 177-178 elevation. 139. 140 families, 138-141, 138-140 printing, 293 rules of thumb. 324 Schedule Properties dialog box Appearance tab, 275, 275 Fields tab, 273-274, 274 Filter tab, 274, 274 Formatting tab, 275 mass floors, 182, 182 rooms, 278 Sorting/Grouping tab, 275 Schedule/Quantity button, 273

schedules, 271-272 adding to sheets, 290-291, 290 BIM models, 298 breaking, 291 drafters for. 302 errors and warnings, 314 overview, 272, 272 ribbon command. 277. 277 rooms, 277-280, 277-280 sheet list, 280-282, 281-282 window, 272-276, 273-276 schematic design, 175 3D sketches, 178-180, 179-180, 183 drafters for. 303 importing and scaling images, 176-178, 177-178 levels. 180-181. 181 mass curtain systems, 186, 187 floor area calculations, 182, 182-183 floor creation, 184 roofs, 187-188, 187 walls, 184-185, 185-186 schemes, color, 200-203, 200-203 Search in Project Browser dialog box, 5-6, 5 Section tool, 203 sections BIM models, 298 fill color and tags, 203-205, 203-205 Select All Instances option, 321 Select Elements By Face option, 14, 184 Select Import Instance option, 308 Select Items To Copy dialog box, 122, 122 selections, filtering, 325, 326 Send Backward option, 246 Send To Back option, 246 separation lines, 192, 197, 198 Shaded mode, 295 Shading property, 208 shadows in graphics display, 212-214 Shadows tool, 6 Shaft tool, 326 Shaft Opening tool. 66-68. 67-69 shafts elevators, 326 floor openings with, 66-68, 67-69 shape editing for sloped floors, 63-64 Shape Editing tools, 63 shape handles editing, 64, 64 walls, 34, 35 sheet drafters for, 302-303 placing views on, 282-287, 283-287 schedules on, 290-291, 290

Sheet List Properties dialog box, 280-282, 281-282 Sheet List schedules, 280-282, 281-282 shifting room numbers, 329 shortcuts, keyboard, 327, 328 Show Ambient Shadows option, 212, 214 Show Camera option, 328 Show Crop Region tool, 7, 7 Show Mass By View Settings option, 180, 185 Show Mass Form And Floors option, 180 Show Mass mode, 178 shrubs, 305, 305 Simplify Surface button, 308 site modeling, 304-305, 305 building pads, 306-307, 309 toposurfaces, 305-308, 306-308 Site Settings dialog box, 310, 310 size files, 310-315, 311 paper, 293 sketch mode for roofs, 75 SketchBook Pro tool, 176, 176 sketches. 10-11. 11 ceilings, 78-82, 79-82 floors, creating, 58-59, 58-59 importing, 176, 176 Slope Arrow tool, 62, 62, 74 slope arrows building pads, 306 ceilings, 86, 87 floors, 62-63, 62 roofs, 74-76, 75-76 slopes ceilings. 86-87.87 floors, 61-65, 62-64 railings, 109-111, 109-111 roofs, 70, 71, 76-78, 77-78 solar gain in BIM models, 300 Sorting/Grouping tab mass floors. 182 schedules settings, 275 Sheet List. 281 Sound Transmission Class (STC), 268 spacing elements, 20-23, 21-23 repeating details, 168, 248 Specialty Equipment option, 148 split lines, 63, 63 splitting railings, 110, 110 schedules. 291 walls, 41, 41 stacked walls, 28-29, 29 staffing BIM projects, 300

stairs, 89 balusters, editing, 92, 93 creating. 93-94 Stair by Component tool, 94-98, 94-98 Stair by Sketch tool. 98-100. 99-100 landings, 100-103, 101-103 multistory runs, 103-106, 104-106 railings generic, 89-92, 90-93 host function, 106-108, 107-108 Start-End-Radius Arc tool curtain walls, 51 stairs, 99 status, ownership, 238, 238 strings, dimension, 259-260 subscription support, 330 Sun Path tool. 6 Sun setting, 214 Sun Settings dialog box, 218, 218, 220 Surface Patterns setting, 215, 215 Surface Transparency setting, 214, 215 Surfaces dialog box for walls, 185 swapping out family types, 94 swapping walls, 41, 42 Switch Windows option, 13 symbols for component families, 124 Synchronize And Modify Settings option, 232 Synchronize Now option, 232-233 Synchronize panel, 232 Synchronize With Central dialog box, 232, 232 system families, 121 loading, 121-122, 122 placing, 123, 124 System Requirements option, 320

Т

Tag All Not Tagged dialog box, 204, 204 Tag All tool. 204 Tag By Category option, 260 tags adding, 259-260, 260, 264-267, 265-267 families, 124, 159-161, 159-160 moving, 204 rooms, 190-196, 191, 193-196 sections, 203-205, 203-205 text in, 284-285 tangent arcs, 31, 32 teams, BIM, 303-304 templates, families, 173 Temporary Hide/Isolate tool, 7 text adding, 260, 267 dimensions. 259. 259 tags, 284-285

Text panel, 260 Text tool, 260 thickness of building pads, 306 3D Cover Shot option, 217, 220 3d Cover Shot view, 210 3D families, 137-138 detail level editing, 141-142, 141-142 visibility, 142-146, 143-146 view scale, 138-141, 138-140 3D sketches, linking, 178-180, 179-180, 183 3D views copying, 328 exploded, 216, 217 presentation, 214-216, 215 30 Degree Arrow option, 266 Tile Windows option, 14 title blocks, 169-172, 169-171 toggling mullions, 53 tooltips, 6 top and base of walls, 38-39, 38-39 Top Constraint parameter roofs, 71 walls, 15, 15, 36 Top Of Parapet references, 181 Top Offset setting shafts, 68 walls, 36 top rail of railings, 109-111, 109-111 toposurfaces, 305-308, 306-308 Transfer Project Standards command, 121 transferring project standards, 122-123, 122 Transparency setting for walls, 185 transparent backgrounds for dimensions, 262 Tread/Stringer Offset setting, 106, 107 tree view in Project Browser, 5 trees. 305. 305 Trim/Extend Multiple Elements tool stairs. 99 walls. 17. 17 Trim/Extend Single Element tool stairs. 99 walls, 18 Trim/Extend To Corner tool floors, 10 stairs. 101 walls, 18 Trimble SketchUp tool, 301 2D families, 159 detail, 164-168, 164-168 profiles. 161-164. 161-164 tag, 159-161, 159-160 title blocks, 169-172, 169-171 2D images, importing and scaling, 176–178, 177-178

Type Mark field, 274 Type Properties dialog box ceilings, 82 curtain walls, 46, 50 dimensions, 261 grids, 171, 171 railings, 90-91, 91, 163 regions, 252 repeating details, 168, 168, 247, 247, 257-258,258 stairs, 100 tags, 266 walls, 26-27, 26-27, 210-211 Type Selector, 4 ceiling, 86 desks, 150 groups, 249 lights, 85 linework, 250 stairs, 100 walls, 14, 16 types in model hierarchy, 118

U

Unconnected Height parameter, 36, 83 unloading unused CAD files, 321 Unlock 3D View tool, 214 unused families and groups, 311–312, *311* unused files, 324, *325* updating insertion points, 148–153, *149–153* Use Render Appearance option, 209 user interface. *See* interface User Interface tab, 327 usernames, 224

V

vector processing, 295 vehicles, 305 Vertical Grid option, 46 Vertical Mullions option, 46 Vertical tool in floor openings, 66 View Control Bar, **6**–8, *6* View option, 268 View/Sheet Set dialog box, 292, 292 ViewCube, **8**–9, *8* floor plans, 84 Orient To View, 327 views and View tab, 2, *2* activating, 286, *287* arranging elements in, 246

closing, 14 deactivating, 289 depth. 323 drafters for, 302-303 duplicating, 212, 212 families, 138-141, 138-140 hidden, 321 legends. 268-269 levels, 13 limiting, 312-313 managing, 321 mass floors, 182 placing crop regions, 288-290, 288-289 schedules, 290-291, 290 on sheets, 282-287, 283-287 properties, 3 regions, 251 rendering, 217-219, 218-219 schedules, 273, 279 sections, 203 visibility, 228 walls. 14 visibility and Visibility/Graphic Overrides dialog box 3D sketches, 179 detail levels, 142-146, 143-146 elevators, 326, 327 family profiles, 161, 161 grids, 170 hosted families, 154, 154 links. 330 mass elements, 180 model hierarchy. 119-120 Revit links, 320 room properties, 191, 191 shortcuts, 327 walls. 185 worksets, 228-232, 229, 232, 238, 238 Visibility Setting column, 228 Visual Style tool, 6 volume computation, 190, 190, 322, 322

W

Wall By Face tool, 185 Wall Opening option, 40 wall studs, 246 Wall tool, 11, 32 walls attaching to roofs, 77, 77 top and base, 38–39, 38–39 basic, 26–27, 26–28 closure options, 172, 172

walls (continued) configurations, 30-32, 30, 32 constraints. 15. 15. 36 creating, 11-12, 12 curtain. See curtain walls dimensions, 260-261, 261 element hosting, 29-30 elliptical. 33 finishes, 279, 279 foundation, 309 graphics. See graphics height, 71, 71 instance parameters, 35-36, 35 ioin geometry, 328-329, 329 legends, 268-269, 269-270 mass, 184-185, 185-186 moving, 194, 195 openings, 40-41, 40 overview, 25 parameters, 34-36, 35 profiles, 36-38, 37, 49, 49 shape handles, 34, 35 spacing. 21. 21 splitting, 41, 41 stacked, 28-29, 29 swapping, 41, 42 top and base, 38-39, 38-39 types changes, 14-16, 15-16 warnings ceilings, 79 finding, 313-315, 313-314 tags, 264, 265 Warnings tool, 313 width settings family profiles, 162 insulation, 248, 248 window sills dimensions. 260-263. 260-264 linework, 254-257, 255-256 regions, 251-254, 251-254 repeating detail, 257-259, 257-258 Window tags, 264, 265 windows placing, 18-20, 19 schedules adding to sheets, 290-291, 290 creating, 272-276, 273-276 in walls, 33, 33 Wireframe mode, 295 witness lines, 260

Work Plane dialog box, 72 work plane editing, 172 workflow, BIM, 297-298 overview, 297-300, 298-299 project roles. 300-304, 303 staffing, 300 team members, 303-304 working views, 312-313 Workset File Already Exists option, 235 worksets and Worksets dialog box, 225, 225 adding, 227-228, 229 assigning elements to, 229-232, 229-232 borrowed elements, 236, 236 as containers, 240 display modes, 236-238, 236-238 opening and closing, 234-236, 235-236, 241 ownership status, 238, 238 settings, 224, 225 visibility, 228 Worksets option, 237 worksharing, 223 best practices, 240-241 central files avoiding, 241 saving to, 232-234, 232-234 configuring, 223-224, 224 display modes, 236-238, 236-238 editing requests, 238-239, 239-240 enabling, 224-226, 224-226 local files creating, 227-228, 227-228 saving, 227 worksets. See worksets and Worksets dialog box Worksharing dialog box, 224, 224 Worksharing Display Off option, 237 Worksharing Display Settings dialog box, 237.237

Y

YouTube, 330

Ζ

zero error requirements, 314–315 Zoom Sheet Size option, 139, *139* Zoom To Fit option, 8–9, 138, 154